

31	Battery -
30	Battery +
Y81	Camshaft position (CMP) actuator
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
B24	Engine coolant temperature (ECT) sensor
S358	Engine oil level switch
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump
K20	Fuel pump relay
F	Fuse
X28	Fuse box/relay plate
B72	Heated oxygen sensor (HO2S)
Y56	Idle speed control (ISC) actuator
T1	Ignition coil
15	Ignition switch - ignition ON
A183	Ignition switch control module
Y3	Injector
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B30	Mass air flow (MAF) sensor
A11	Multifunction control module
A171	Relay module
M1	Starter motor
K4	Starter motor relay
B147	Throttle position (TP) sensor
A57	Transmission control module (TCM)
K213	Voltage polarity protection relay

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

