



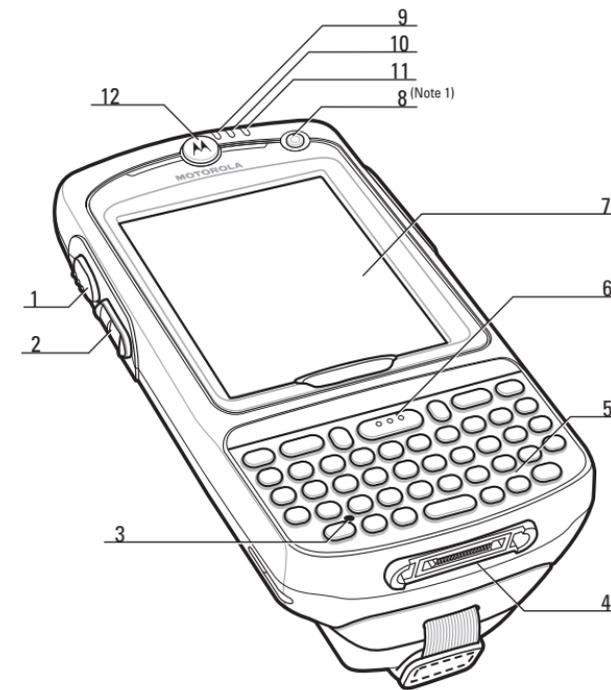


### FEATURES

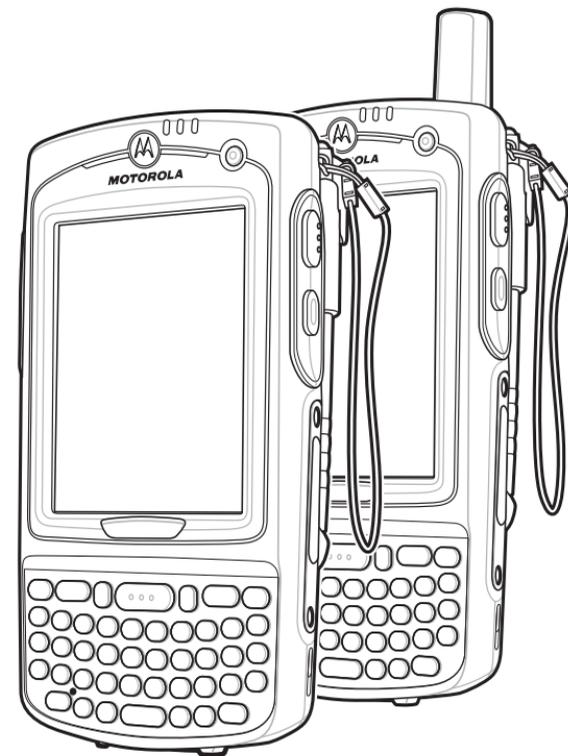


- 1 Scan/Action Button
- 2 Up/Down Button
- 3 Microphone
- 4 I/O Connector
- 5 Keypad
- 6 Scan/Action Button (with screen protector)
- 7 Touch Screen
- 8 Power Button
- 9 Scan/Decode LED
- 10 Charging/Battery Status LED
- 11 Radio Status LED (MC75A6/8 only)
- 12 Receiver

- 13 Battery Door
- 14 Handstrap
- 15 Handstrap Slot
- 16 Headset Jack
- 17 Camera Flash (optional)
- 18 3.2 Mpixel Camera (optional)
- 19 Speaker
- 20 Scan Window (see Data Capture Options)
- 21 Antenna
- 22 Stylus
- 23 Tether Point
- 24 Scan/Action Button
- 25 Action Button
- 26 Back Housing Bracket
- 27 Memory Card Cover
- 28 IrDA Window
- 29 Door Latch

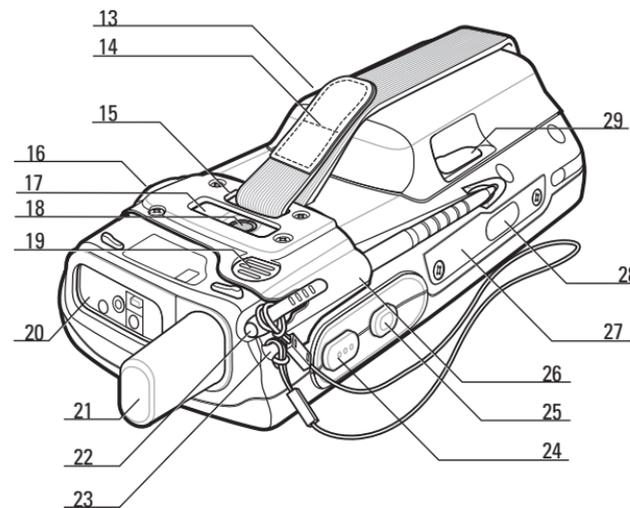


Note 1: To reset the MC75A, press and hold the Power button for five (5) seconds.

### KEYPADS

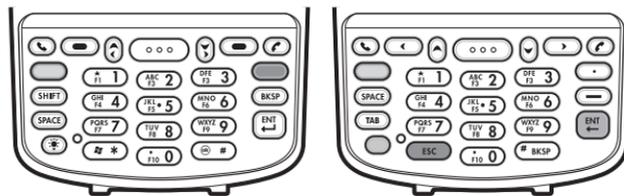

Numeric Keypad      DSD Keypad

- Blue Key**  
Use this key to access function keys shown on the keypad in blue.  
> Press the blue key once to activate this mode followed by another key.
- Orange Key**  
Use this key to access the secondary layer of characters and actions.  
> Press the orange key once to lock the keypad in the Alpha state.  
> Press the orange key a second time to return to the normal state.

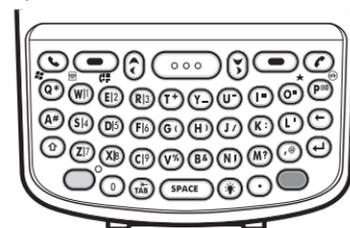


- Blue Key**  
Use this key to access function keys shown on the keypad in blue.  
> Press the Blue key once to activate this state temporarily, followed by another key.  
> Press the Blue key twice to lock this state.  
> Press the Blue key a third time to unlock.
- Orange Key**  
Use this key to access the secondary layer of characters and actions.  
> Press the Orange key once to activate this state temporarily, followed by another key.  
> Press the Orange key twice to lock this state.  
> Press the Orange key a third time to unlock.

Note 2: See the MC75A User Guide for detailed keypad information.


### GETTING STARTED

#### 1 Insert the Battery

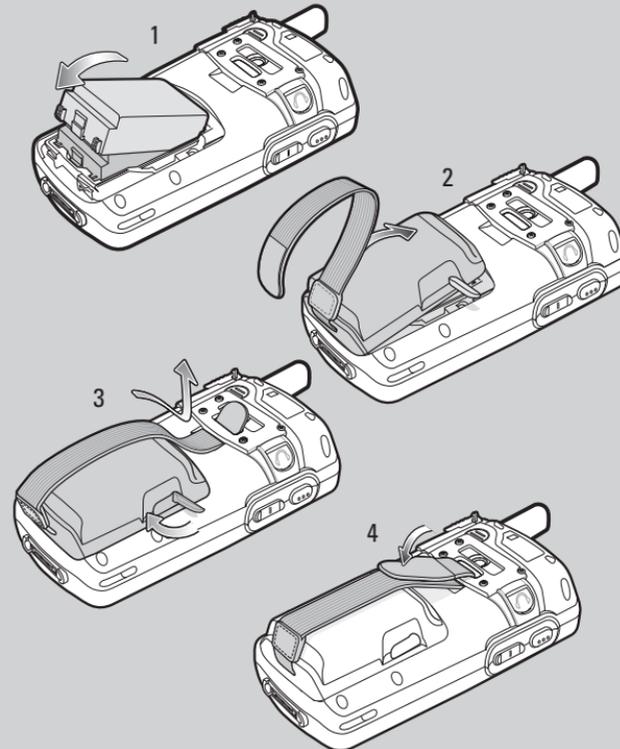

Note 3: 3600 mAh Battery and Door shown.

#### 2 Charge the MC75A 24hr\*

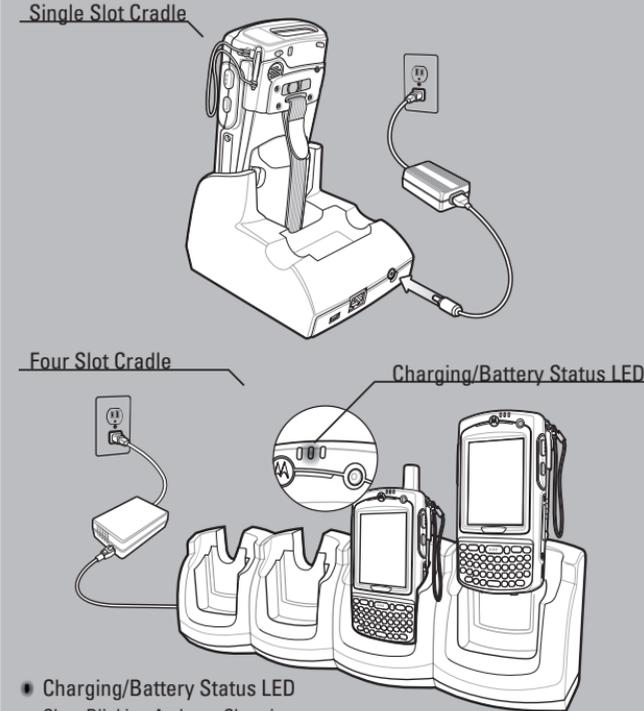


- Charging/Battery Status LED**
- Slow Blinking Amber = Charging
  - Solid Amber = Fully Charged
  - Fast Blinking Amber = Charging Error

\* It is recommended that this product be charged for 24 hours before the first use to ensure that the internal battery is fully charged.

#### 3 Install ActiveSync®

Download ActiveSync® 4.5 or higher from <http://www.microsoft.com> and follow the instructions to install ActiveSync onto the host computer.

#### 4 Communicate with Host

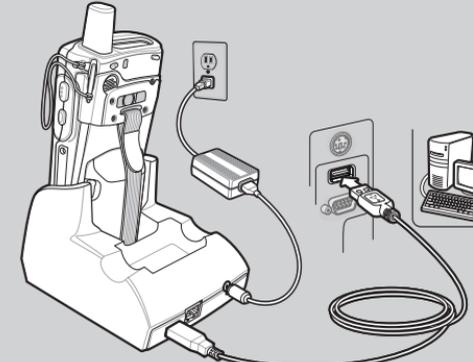


#### 5 Create a Partnership

Follow the on-screen ActiveSync instructions to establish a connection between the MC75A and the host computer.

# BATTERY REMOVAL

1. If the MC75A is in suspend mode, press the red Power button to wake the MC75A.
2. Press the red Power button to suspend the MC75A.
3. Wait for red Decode LED to turn on and then turn off.
4. Open the battery cover latches on either side of the battery cover.
5. Lift the top of the battery cover and remove.
6. Press the battery release latch on the bottom of the battery to unlock, and lift the battery out of the well.

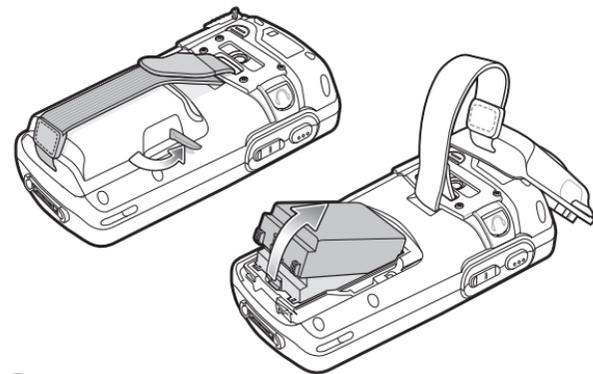


**MOTOROLA**  
 Motorola, Inc.  
 One Motorola Plaza  
 Holtville, New York 11742-1300, USA  
 MOTOROLA and the Stylized M Logo and Symbol and the Symbol logo are registered in the U.S. Patent and Trademark Office. All other product or service names are the property of their respective owners.  
 © Motorola, Inc. 2010




72-127677-02 Rev. A January 2010

# ACCESSORIES

## MicroSD Card Installation

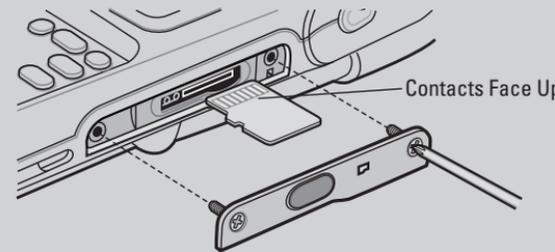


## SIM Card Installation (Located Under Battery) (MC75A6 only)

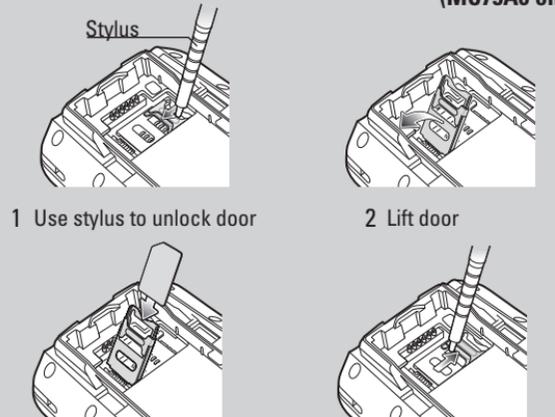

- 1 Use stylus to unlock door
- 2 Lift door
- 3 Place SIM card with contacts facing down
- 4 Use stylus to lock door

<http://www.motorola.com/mc75a>

## Screen Protector

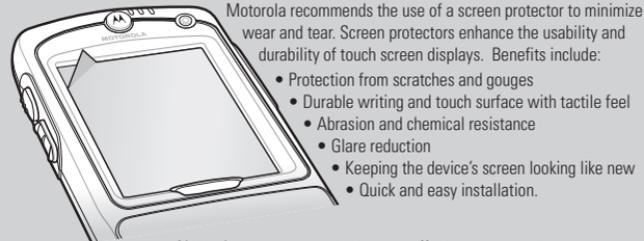

Motorola recommends the use of a screen protector to minimize wear and tear. Screen protectors enhance the usability and durability of touch screen displays. Benefits include:

- Protection from scratches and gouges
- Durable writing and touch surface with tactile feel
- Abrasion and chemical resistance
- Glare reduction
- Keeping the device's screen looking like new
- Quick and easy installation.

Not using a screen protector can affect your warranty coverage. An initial screen protector is already applied to your MC75A. Contact your local account manager or Motorola, Inc. for more information and purchasing details. Part number: KT-129195-03R Screen Protector 3/pk.

## Vehicle Cradle




## Snap-On Accessories




## Charge in Cradle

Flashing Amber: Battery charging  
 Solid Amber: Battery fully charged

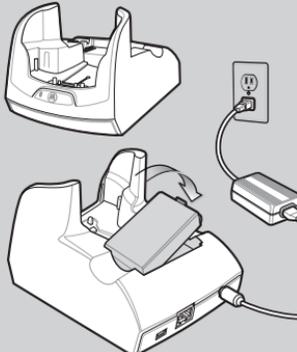


## Spare Battery Charger

Flashing Amber: Battery charging  
 Solid Amber: Battery fully charged

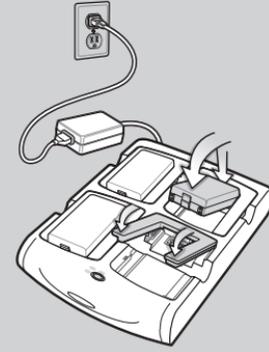

## Magnetic Stripe Reader

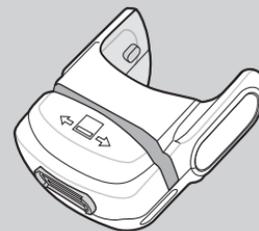


## Cables




# DATA CAPTURE OPTIONS

## Imaging

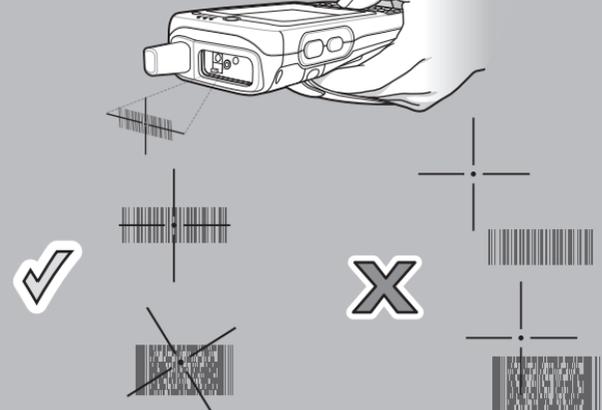

## Laser Scanning

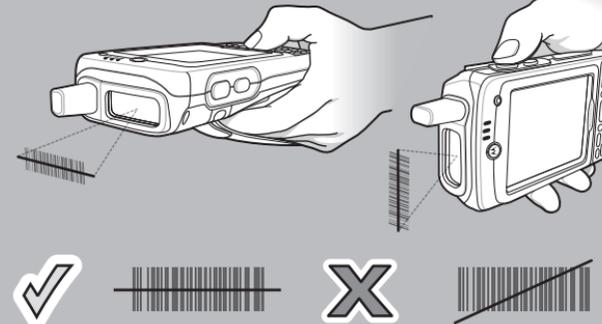

## Camera Decode



1. Launch a bar code reading application on the MC75A.
2. Position the MC75A toward the bar code.
3. Press the **Scan** button.
4. In the image window align the red target over the bar code. When the MC75A decodes the bar code the Scan/Decode LED light green and a beep sounds.
5. Release the **Scan** button.

## Camera Photo




1. Tap **Start > Pictures & Videos > Camera**.
2. Point the MC75A at an object.
3. Press the **Enter** or yellow scan buttons.
4. Hold MC75A still until "Shutter Sound" is heard.

## GPS Information

- When using the GPS feature of the MC75A6/8:
- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.
  - Without a clear view, acquisition takes much longer and could result in the MC75A6/8 being unable to compute the initial position quickly.
  - Obtain a satellite fix before moving.
  - Shutdown GPS application when not in use to extend battery life.

# AVOID EXTREME WRIST ANGLES

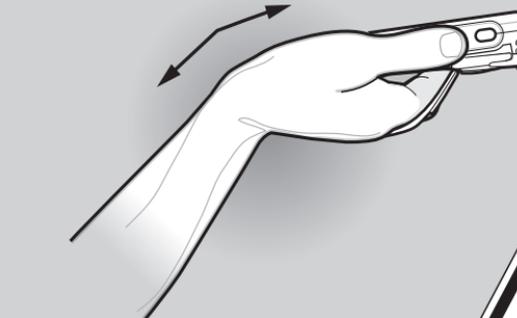

AVOID EXTREME WRIST ANGLES

