


31	Battery -
30	Battery +
B54	Crankshaft position (CKP) sensor
A166	Distributor
A35	Engine control module (ECM)
B24	Engine coolant temperature (ECT) sensor
S186	Engine coolant temperature (ECT) switch
H63	Engine malfunction indicator lamp (MIL)
B156	Engine oil temperature sensor
S293	Engine oil temperature switch
M12	Fuel pump
F	Fuse
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
A4	Ignition control module (ICM)
15	Ignition switch - ignition ON
X56	Ignition test connector
Y3	Injector
B25	Intake air temperature (IAT) sensor
W21	Octane coding plug
K46	Relay module
P7	Tachometer
S104	Throttle position (TP) switch
B148	Volume air flow (VAF) sensor

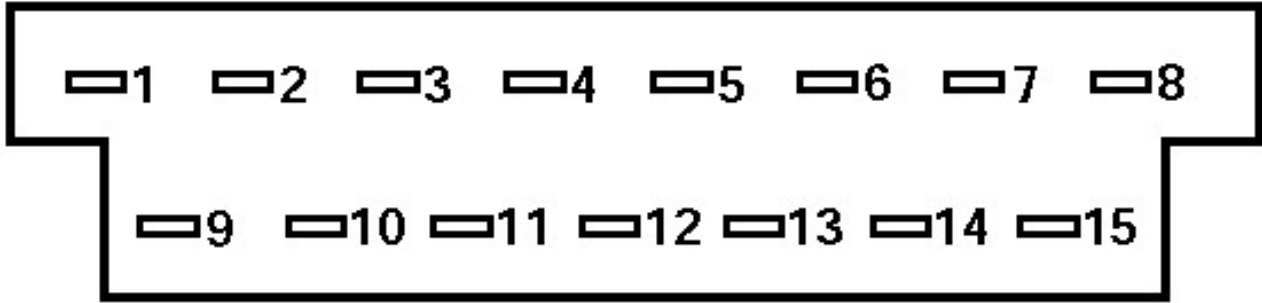

AD71577

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

