



Agilent Technologies

Advanced Design System 2002

**Circuit Components
Distributed Components**

February 2002

Notice

The information contained in this document is subject to change without notice.

Agilent Technologies makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Warranty

A copy of the specific warranty terms that apply to this software product is available upon request from your Agilent Technologies representative.

Restricted Rights Legend

Use, duplication or disclosure by the U. S. Government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 for DoD agencies, and subparagraphs (c) (1) and (c) (2) of the Commercial Computer Software Restricted Rights clause at FAR 52.227-19 for other agencies.

Agilent Technologies
395 Page Mill Road
Palo Alto, CA 94304 U.S.A.

Copyright © 2002, Agilent Technologies. All Rights Reserved.

Contents

1 Finline Components

Finline Model Basis	1-1
BFINL (Bilateral Finline).....	1-2
BFINLT (Bilateral Finline Termination).....	1-4
FSUB (Finline Substrate).....	1-6
IFINL (Insulated Finline).....	1-8
IFINLT (Insulated Finline Termination)	1-10
UFINL (Unilateral Finline).....	1-12
UFINLT (Unilateral Finline Termination).....	1-14

2 Microstrip Components

MACLIN (Microstrip Asymmetric Coupled Lines)	2-2
MACLIN3 (Microstrip 3-Conductor Asymmetric Coupled Lines).....	2-5
MBEND (Microstrip Bend (Arbitrary Angle/Miter)).....	2-8
MBEND2 (90-degree Microstrip Bend (Mitered))	2-11
MBEND3 (90-degree Microstrip Bend (Optimally Mitered)).....	2-13
MBSTUB (Microstrip Butterfly Stub).....	2-15
MCFIL (Microstrip Coupled-Line Filter Section).....	2-17
MCLIN (Microstrip Coupled Lines).....	2-19
MCORN 90-degree Microstrip Bend (Unmitered).....	2-21
MCROS (Microstrip Cross-Junction)	2-23
MCROSO (Alternate Libra Microstrip Cross-Junction).....	2-25
MCURVE (Microstrip Curved Bend).....	2-27
MCURVE2 (Microstrip Curved Bend).....	2-29
MGAP (Microstrip Gap).....	2-31
MICAP1 (Microstrip Interdigital Capacitor (2-port)).....	2-33
MICAP2 (Microstrip Interdigital Capacitor (4-port)).....	2-36
MICAP3 (Microstrip Interdigital Capacitor (1-port)).....	2-38
MICAP4 (Microstrip Interdigital Capacitor (Grounded 2-port)).....	2-41
MLANG (Microstrip Lange Coupler).....	2-44
MLANG6 (Microstrip Lange Coupler (6-Fingered)).....	2-46
MLANG8 (Microstrip Lange Coupler (8-Fingered)).....	2-48
MLEF (Microstrip Line Open-End Effect)	2-51
MLIN (Microstrip Line).....	2-53
MLOC (Microstrip Open-Circuited Stub).....	2-56
MLSC (Microstrip Short-Circuited Stub)	2-59
MRIND (Microstrip Rectangular Inductor).....	2-62
MRINDELA (Elevated Microstrip Rectangular Inductor)	2-64
MRINDELM (Elevated Microstrip Rectangular Inductor (Three-Layer Substrate))	2-68
MRINDNBR (Microstrip Rectangular Inductor (No Bridge))	2-71

MRINDSBR (Microstrip Rectangular Inductor (Strip Bridge, Three-Layer Substrate))	2-74
MRINDWBR (Microstrip Rectangular Inductor (Wire Bridge)).....	2-77
MRSTUB (Microstrip Radial Stub)	2-80
MSIND (Microstrip Round Spiral Inductor).....	2-82
MSLIT (Microstrip Slit).....	2-84
MSOP (Microstrip Symmetric Pair of Open Stubs).....	2-87
MSSPLC_MDS (MDS Microstrip Center-Fed Rectangular Spiral Inductor)	2-89
MSSPLR_MDS (MDS Microstrip Round Spiral Inductor).....	2-91
MSSPLS_MDS (MDS Microstrip Side-Fed Rectangular Spiral Inductor)	2-93
MSTEP (Microstrip Step in Width)	2-95
MSUB (Microstrip Substrate)	2-97
MSUBST3 (Microstrip Three-Layer Substrate)	2-101
MTAPER (Microstrip Width Taper).....	2-103
MTEE (Microstrip T-Junction)	2-104
MTEE_ADS (Libra Microstrip T-Junction).....	2-106
MTFC (Microstrip Thin Film Capacitor).....	2-108
RIBBON (Ribbon)	2-111
TFC (Thin Film Capacitor)	2-113
TFR (Thin Film Resistor).....	2-116
VIA (Tapered Via Hole in Microstrip)	2-118
VIA2 (Cylindrical Via Hole in Microstrip).....	2-120
VIAFC (Via with Full-Circular Pads)	2-122
VIAHS (Via with Half-Square Pads)	2-124
VIAQC (Via with Quasi-Circular Pads).....	2-126
VIASC (Via with Semi-Circular Pads).....	2-128
VIASTD (Via with Smooth Tear Drop Pads).....	2-130
VIATTD (Libra Via Hole in Microstrip with Tear Drop Pads).....	2-132
WIRE (Round Wire)	2-134

3 Multilayer Interconnects

COMBINE2ML (Combine 2 Coupled-Line Components).....	3-2
COMBINE3ML (Combine 3 Coupled-Line Components).....	3-3
COMBINE4ML (Combine 4 Coupled-Line Components).....	3-4
COMBINE5ML (Combine 5 Coupled-Line Components).....	3-5
Coupled Lines, Constant Width & Spacing	3-6
Coupled Lines, Variable Width & Spacing	3-8
MLACRNR (190-degree Corner, Changing Width)	3-10
Coupled 90-degree Corners, Changing Pitch.....	3-11
MLCLE (Via Clearance).....	3-13
Coupled Angled Corners, Constant Pitch	3-16
Coupled Crossovers.....	3-18
MLJCROSS (Cross Junction)	3-20

MLJGAP (Open Gap)	3-21
MLJTEE (Tee Junction)	3-22
MLOPENSTUB (Open Stub).....	3-23
Coupled Radial Lines	3-24
Slanted Coupled Lines	3-26
MLSUBSTRATEN (Dielectric Constant for N Layers)	3-28
MLVIAHOLE (Via Hole)	3-31
MLVIAPAD (Via Pad)	3-34
4 Stripline Components	
SBCLIN (Broadside-Coupled Lines in Stripline)	4-2
SBEND (Unmiteder Stripline Bend).....	4-5
SBEND2 (Stripline Bend -- Arbitrary Angle/Miter).....	4-7
SCLIN (Edge-Coupled Lines in Stripline).....	4-10
SCROS (Stripline Cross Junction)	4-12
SCURVE (Curved Line in Stripline).....	4-14
SLEF (Stripline Open End Effect)	4-16
SLIN (Stripline).....	4-18
SLINO (Offset Strip Transmission Line)	4-20
SLOC (Stripline Open-Circuited Stub)	4-22
SLSC (Stripline Short-Circuited Stub).....	4-24
SMITER (90-degree Stripline Bend -- Optimally Mitered).....	4-26
SOCLIN (Offset-Coupled Lines in Stripline)	4-29
SSTEP (Stripline Step in Width).....	4-32
SSUB (Stripline Substrate).....	4-34
SSUBO (Offset Stripline Substrate).....	4-36
STEE (Stripline T-Junction).....	4-38
5 Suspended Substrate Components	
SSCLIN (Suspended Substrate Coupled Lines).....	5-2
SSLIN (Suspended Substrate Line).....	5-4
SSSUB (Suspended Substrate).....	5-5
6 Transmission Line Components	
CLIN (Ideal Coupled Transmission Lines).....	6-2
CLINP (Lossy Coupled Transmission Lines)	6-3
COAX (Coaxial Cable)	6-4
CoaxTee (Coaxial 3-Port T-Junction, Ideal, Lossless)	6-6
DR (Cylindrical Dielectric Resonator Coupled Transmission Line Section)	6-7
RCLIN (Distributed R-C Network).....	6-9
TLIN (Ideal 2-Terminal Transmission Line).....	6-10
TLIN4 (Ideal 4-Terminal Transmission Line).....	6-11
TLINP (2-Terminal Physical Transmission Line).....	6-12

TLINP4 (4-Terminal Physical Transmission Line).....	6-14
TLOC (Ideal Transmission Line Open-Circuited Stub).....	6-16
TLPOC (Physical Transmission Line Open-Circuited Stub).....	6-17
TLPSC (Physical Transmission Line Short-Circuited Stub).....	6-19
TLSC (Ideal Transmission Line Short-Circuited Stub).....	6-21
7 Waveguide Components	
CPW (Coplanar Waveguide).....	7-2
CPWCGAP (Coplanar Waveguide, Center-Conductor Gap).....	7-4
CPWCPL2 (Coplanar Waveguide Coupler (2 Center Conductors)).....	7-6
CPWCPL4 (Coplanar Waveguide Coupler) 4 Center Conductors)).....	7-8
CPWEF (Coplanar Waveguide, Open-End Effect).....	7-10
CPWEGAP (Coplanar Waveguide, End Gap).....	7-12
CPWG (Coplanar Waveguide with Lower Ground Plane).....	7-14
CPWOC (Coplanar Waveguide, Open-Circuited Stub).....	7-16
CPWSC (Coplanar Waveguide, Short-Circuited Stub).....	7-18
CPWSUB (Coplanar Waveguide Substrate).....	7-20
RWG (Rectangular Waveguide).....	7-21
RWGINDF (Rectangular Waveguide Inductive Fin).....	7-23
RWGT (Rectangular Waveguide Termination).....	7-25
8 Printed Circuit Board Components	
PCB Model Basis and Limits.....	8-1
Method of Analysis.....	8-1
Assumptions and Limitations.....	8-2
References.....	8-2
PCBEND (PCB Bend (Arbitrary Angle/Miter)).....	8-3
PCCORN (Printed Circuit Corner).....	8-5
PCCROS Printed Circuit Cross-Junction.....	8-6
PCCURVE (PCB Curve).....	8-8
PCILC (Printed Circuit Inter-layer Connection).....	8-10
PCLIN1 (1 Printed Circuit Line).....	8-12
PCLIN2 (2 Printed Circuit Coupled Lines).....	8-14
PCLIN3 (3 Printed Circuit Coupled Lines).....	8-16
PCLIN4 (4 Printed Circuit Coupled Lines).....	8-18
PCLIN5 (5 Printed Circuit Coupled Lines).....	8-20
PCLIN6 (6 Printed Circuit Coupled Lines).....	8-23
PCLIN7 (7 Printed Circuit Coupled Lines).....	8-26
PCLIN8 (8 Printed Circuit Coupled Lines).....	8-29
PCLIN9 (9 Printed Circuit Coupled Lines).....	8-32
PCLIN10 (10 Printed Circuit Coupled Lines).....	8-36
PCSTEP (PCB Symmetric Steps).....	8-40
PCSUB1 (1-Layer Printed Circuit Substrate).....	8-42

PCSUB2 (2-Layer Printed Circuit Substrate)	8-44
PCSUB3 (3-Layer Printed Circuit Substrate)	8-46
PCSUB4 (4-Layer Printed Circuit Substrate)	8-48
PCSUB5 (5-Layer Printed Circuit Substrate)	8-50
PCSUB6 (6-Layer Printed Circuit Substrate)	8-52
PCSUB7 (7-Layer Printed Circuit Substrate)	8-54
PCTAPER (PC Tapered Line).....	8-56
PCTEE (Printed Circuit T-Junction)	8-58
PCTRACE (Single PCB Line (Trace))	8-60

Index

Chapter 1: Finline Components


Finline Model Basis

For each finline component, the model is a rectangular waveguide with the cutoff frequency and the dielectric constant at cutoff modified by the dielectric slab and conducting strip. Conductor and dielectric losses are not included.


Spectral domain numerical results provide the basis for *unilateral* and *bilateral* finlines. The quoted accuracy, with respect to spectral domain, are ± 0.6 percent for equivalent dielectric constant at cutoff and cutoff wavelength for unilateral finline and ± 0.1 percent for phase velocity of bilateral finline. The equations for *insulated* finlines are analytical curve-fits to numerical results of transmission line matrix analysis (TLM). The cited accuracy for equivalent dielectric constant and cutoff frequency is 0.6 percent compared to the TLM results. All accuracies are for parameter values within the range of usage.

BFINL (Bilateral Finline)

Symbol



Illustration

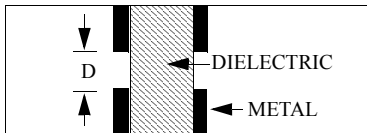

Parameters

Subst = substrate instance name

D = width of gap, in specified units

L = length of finline, in specified units

Temp = physical temperature, in °C

Range of Usage

$$\frac{B}{32} \leq D \leq B$$

$$\frac{A}{64} \leq S \leq \frac{A}{8}$$

where

D = gap width

A = inside enclosure width (from associated FSUB)

B = inside enclosure height (from associated FSUB)

S = thickness of substrate (from associated FSUB)


Notes/Equations/References

1. See the section [“Finline Model Basis” on page 1-1](#) at the beginning of this chapter.
2. For time-domain analysis, the frequency-domain analytical model is used.
3. This component has no default artwork associated with it.


4. Protap Pramanick and Prakash Bhartia, "Accurate Analysis Equations and Synthesis Technique for Unilateral Finlines," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-33, No. 1, pp. 24-30, Jan. 1985.
5. Protap Pramanick and Prakash Bhartia, "Simple Formulae for Dispersion in Bilateral Fin-Lines," *AEU*, Vol. 39, No. 6, pp. 383-386, 1985.
6. Protap Pramanick and Prakash Bhartia, "Accurate Analysis and Synthesis Equations for Insulated Fin-Lines," *AEU*, Vol. 39, No. 1, pp. 31-36, 1985.

BFINLT (Bilateral Finline Termination)

Symbol



Illustration

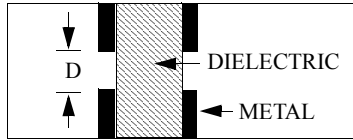

Parameters

Subst = substrate instance name

D = width of gap, in specified units

Temp = physical temperature, in °C

Range of Usage

$$\frac{B}{32} \leq D \leq B$$

$$\frac{A}{64} \leq S \leq \frac{A}{8}$$

where

D = gap width

A = inside enclosure width (from associated FSUB)

B = inside enclosure height (from associated FSUB)

S = thickness of substrate (from associated FSUB)


Notes/Equations/References

1. See the section [“Finline Model Basis” on page 1-1](#) at the beginning of this chapter.
2. For time-domain analysis, the frequency-domain analytical model is used.
3. This component has no default artwork associated with it.
4. Protap Pramanick and Prakash Bhartia, “Accurate Analysis Equations and Synthesis Technique for Unilateral Finline,” *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-33, No. 1, pp. 24-30, Jan. 1985.


5. Protap Pramanick and Prakash Bhartia, "Simple Formulae for Dispersion in Bilateral Fin-Lines," *AEU*, Vol. 39, No. 6, pp. 383-386, 1985.
6. Protap Pramanick and Prakash Bhartia, "Accurate Analysis and Synthesis Equations for Insulated Fin-Lines, *AEU*, Vol. 39, No. 1, pp. 31-36, 1985.

FSUB (Finline Substrate)

Symbol



Illustration

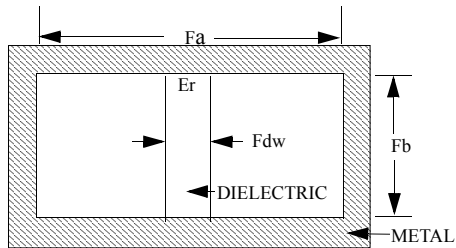

Parameters

E_r = substrate dielectric constant

F_{dw} = thickness of slab, in specified units

F_a = inside width of enclosure, in specified units

F_b = inside height of enclosure, in specified units

$Cond$ = conductor conductivity

Range of Usage

$E_r \geq 1.0$

$F_{dw} > 0$

$F_a > 0$

$F_b > 0$

$Cond \geq 0$


Notes/Equations/References

1. Refer to the section “[Finline Model Basis](#)” on page 1-1 at the beginning of this chapter.
2. FSUB is required for all finline components.


3. Protap Pramanick and Prakash Bhartia, "Accurate Analysis Equations and Synthesis Technique for Unilateral Finlines," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-33, No. 1, pp. 24-30, Jan. 1985.
4. Protap Pramanick and Prakash Bhartia, "Simple Formulae for Dispersion in Bilateral Fin-Lines," *AEU*, Vol. 39, No. 6, pp. 383-386, 1985.
5. Protap Pramanick and Prakash Bhartia, "Accurate Analysis and Synthesis Equations for Insulated Fin-Lines," *AEU*, Vol. 39, No. 1, pp. 31-36, 1985.

IFINL (Insulated Finline)

Symbol



Illustration

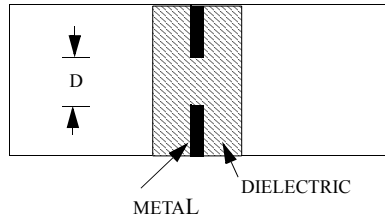

Parameters

Subst = substrate instance name

D = width of gap, in specified units

L = length of finline, in specified units

Temp = physical temperature, in °C

Range of Usage

$$\frac{B}{32} \leq D \leq B$$

$$\frac{A}{64} \leq S \leq \frac{A}{4}$$

where

D = gap width

A = inside enclosure width (from associated FSUB)

B = inside enclosure height (from associated FSUB)

S = thickness of substrate (from associated FSUB)


Notes/Equations/References

1. Refer to the section [“Finline Model Basis” on page 1-1](#) at the beginning of this chapter.
2. For time-domain analysis, the frequency-domain analytical model is used.


3. This component has no default artwork associated with it.
4. Protap Pramanick and Prakash Bhartia, "Accurate Analysis Equations and Synthesis Technique for Unilateral Finlines," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-33, No. 1, pp. 24-30, January 1985.
5. Protap Pramanick, and Prakash Bhartia, "Simple Formulae for Dispersion in Bilateral Fin-Lines," *AEU*, Vol. 39, No. 6, pp. 383-386, 1985.
6. Protap Pramanick and Prakash Bhartia, "Accurate Analysis and Synthesis Equations for Insulated Fin-Lines, *AEU*, Vol. 39, No. 1, pp. 31-36, 1985.

IFINLT (Insulated Finline Termination)

Symbol



Illustration

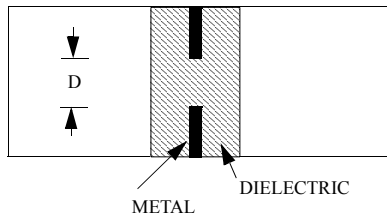

Parameters

Subst = substrate instance name

D = width of gap, in specified units

Temp = physical temperature, in °C

Range of Usage

$$\frac{B}{32} \leq D \leq B$$

$$\frac{A}{64} \leq S \leq \frac{A}{4}$$

where

D = gap width

A = inside enclosure width (from associated FSUB)

B = inside enclosure height (from associated FSUB)

S = thickness of substrate (from associated FSUB)


Notes/Equations/References

1. Refer to the section [“Finline Model Basis”](#) on page 1-1 at the beginning of this chapter.
2. For time-domain analysis, the frequency-domain analytical model is used.
3. This component has no default artwork associated with it.


4. Protap Pramanick and Prakash Bhartia, "Accurate Analysis Equations and Synthesis Technique for Unilateral Finlines," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-33, No. 1, pp. 24-30, January 1985.
5. Protap Pramanick and Prakash Bhartia, "Simple Formulae for Dispersion in Bilateral Fin-Lines," *AEU*, Vol. 39, No. 6, pp. 383-386, 1985.
6. Protap Pramanick and Prakash Bhartia, "Accurate Analysis and Synthesis Equations for Insulated Fin-Lines," *AEU*, Vol. 39, No. 1, pp. 31-36, 1985.

UFINL (Unilateral Finline)

Symbol



Illustration

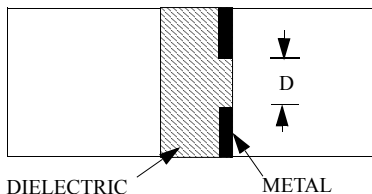

Parameters

Subst = substrate instance name

D = width of gap, in specified units

L = length of finline, in specified units

Temp = physical temperature, in °C

Range of Usage

$$\frac{B}{32} \leq D \leq B$$

$$\frac{A}{64} \leq S \leq \frac{A}{4}$$

where

D = gap width

A = inside enclosure width (from associated FSUB)

B = inside enclosure height (from associated FSUB)

S = thickness of substrate (from associated FSUB)


Notes/Equations/References

1. Refer to the section [“Finline Model Basis”](#) on page 1-1 at the beginning of this chapter.
2. For time-domain analysis, the frequency-domain analytical model is used.
3. This component has no default artwork associated with it.


4. Protap Pramanick and Prakash Bhartia, "Accurate Analysis Equations and Synthesis Technique for Unilateral Finlines," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-33, No. 1, pp. 24-30, January 1985.
5. Protap Pramanick and Prakash Bhartia, "Simple Formulae for Dispersion in Bilateral Fin-Lines," *AEU*, Vol. 39, No. 6, pp. 383-386, 1985.
6. Protap Pramanick and Prakash Bhartia, "Accurate Analysis and Synthesis Equations for Insulated Fin-Lines," *AEU*, Vol. 39, No. 1, pp. 31-36, 1985.

UFINLT (Unilateral Finline Termination)

Symbol



Illustration

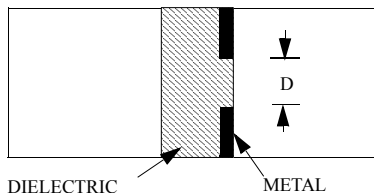

Parameters

Subst = substrate instance name

D = width of gap, in specified units

Temp = physical temperature, in °C

Range of Usage

$$\frac{B}{32} \leq D \leq B$$

$$\frac{A}{64} \leq S \leq \frac{A}{4}$$

where

D = gap width

A = inside enclosure width (from associated FSUB)

B = inside enclosure height (from associated FSUB)

S = thickness of substrate (from associated FSUB)

Notes/Equations/References


1. Refer to the section “[Finline Model Basis](#)” on page 1-1 at the beginning of this chapter.
2. For time-domain analysis, the frequency-domain analytical model is used.
3. This component has no default artwork associated with it.

4. Protap Pramanick and Prakash Bhartia, "Accurate Analysis Equations and Synthesis Technique for Unilateral Finlines," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-33, No. 1, pp. 24-30, January 1985.
5. Protap Pramanick and Prakash Bhartia, "Simple Formulae for Dispersion in Bilateral Fin-Lines," *AEU*, Vol. 39, No. 6, pp. 383-386, 1985.
6. Protap Pramanick and Prakash Bhartia, "Accurate Analysis and Synthesis Equations for Insulated Fin-Lines," *AEU*, Vol. 39, No. 1, pp. 31-36, 1985.


Chapter 2: Microstrip Components

MACLIN (Microstrip Asymmetric Coupled Lines)

Symbol



Illustration

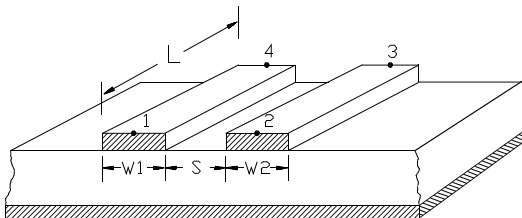

Parameters

Subst = microstrip substrate name

W1 = width of conductor 1, in specified units

W2 = width of conductor 2, in specified units

S = conductor spacing, in specified units

L = conductor length, in specified units

Temp = physical temperature, in °C

WA = (for Layout Option) width of line that connects to pin 1

WB = (for Layout Option) width of line that connects to pin 2

WC = (for Layout Option) width of line that connects to pin 3

WD = (for Layout Option) width of line that connects to pin 4

Range of Usage

$$1 \leq \epsilon_r \leq 18$$

$$T \geq 0$$

$$0.1 \times H \leq W1 \leq 10.0 \times H$$

$$0.1 \times H \leq W2 \leq 10.0 \times H$$

$$0.1 \times H \leq S \leq 10.0 \times H$$

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

T = conductor thickness (from associated Subst)

$$\text{Simulation frequency} \leq \frac{25}{H(mm)} \text{ (GHz)}$$

$W1 > 0, W2 > 0, S > 0, L > 0$ for layout

$WA \geq 0, WB \geq 0, WC \geq 0, WD \geq 0$


Notes/Equations/References

1. The frequency-domain analytical model is a distributed, coupled-line model. The even- and odd-mode characteristics of the microstrip lines are calculated using the formula developed by Kirschning and Jansen for parallel coupled microstrip lines, and the formula developed by Hammerstad and Jensen for single microstrip line. Dispersion of the effective dielectric constant is included. The per-unit-length coupling capacitances are then derived for the asymmetric case using a model developed for Agilent by Vijai Tripathi. The even- and odd-mode impedance and admittance matrices are calculated based on the coupling capacitances. The result is used to calculate the network parameters of the distributed, coupled-line model by Tripathi's method. Conductor losses are ignored.
2. To turn off noise contribution, set Temp to -273.15°C .
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. In generating a layout, adjacent transmission lines will be lined up with the inner edges of the conductor strips; if the connecting transmission lines are narrower than the coupled lines, they will be centered on the conductor strips.
5. Vijai K. Tripathi, "Asymmetric Coupled Transmission Lines in an Inhomogeneous Medium," *MTT-23*, September 1975.
6. Vijai K. Tripathi and Y. K. Chin. "Analysis of the General Nonsymmetrical Directional Coupler with Arbitrary Terminations," *Proceedings of the IEEE*, Vol. 129, December 1982, p. 360.
7. M. Kirschning and R. H. Jansen. "Accurate Wide-Range Design Equations for the Frequency-Dependent Characteristic of Parallel Coupled Microstrip Lines," *MTT-32*, January 1984 (with corrections by Agilent).


8. E. Hammerstad and O. Jensen. "Accurate Models for Microstrip Computer-Aided Design," *MTT Symposium Digest*, 1980, pp. 407-409.

MACLIN3 (Microstrip 3-Conductor Asymmetric Coupled Lines)

Symbol

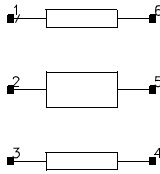

Illustration

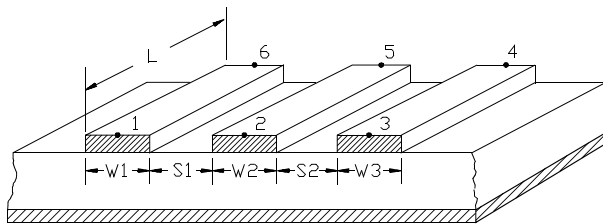

Parameters

Subst = microstrip substrate name

W1 = width of conductor 1, in specified units

W2 = width of conductor 2, in specified units

W3 = width of conductor 3, in specified units

S1 = spacing between conductors 1 and 2, in specified units

S2 = spacing between conductors 2 and 3, in specified units

L = conductor length, in specified units

Temp = physical temperature, in °C

WA = (for Layout Option) width of line that connects to pin 1

WB = (for Layout Option) width of line that connects to pin 2

WC = (for Layout Option) width of line that connects to pin 3

WD = (for Layout Option) width of line that connects to pin 4

Range of Usage

$$0.1 \times H \leq W1 \leq 10.0 \times H$$

$$0.1 \times H \leq W2 \leq 10.0 \times H$$

$$0.1 \times H \leq W3 \leq 10.0 \times H$$

$$0.1 \times H \leq S1 \leq 10.0 \times H$$

$$0.1 \times H \leq S2 \leq 10.0 \times H$$

$$1.01 \leq \text{Er} \leq 18$$

$$T \geq 0$$

where

Er = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

T = conductor thickness (from associated Subst)

$$\text{Simulation frequency} \leq \frac{25}{H(mm)} \quad (\text{GHz})$$

$$W1 > 0, W2 > 0, W3 > 0, S1 > 0, S2 > 0, L > 0 \quad \text{for layout}$$

$$WA \geq 0, WB \geq 0, WC \geq 0, WD \geq 0$$

Notes/Equations/References


1. The frequency-domain analytical model is a distributed, coupled-line model. The even- and odd-mode characteristics of the microstrip lines are calculated using the formula developed by Kirschning and Jansen for parallel coupled microstrip lines, and the formula developed by Hammerstad and Jensen for single microstrip line. The per-unit-length coupling capacitances are then derived for the asymmetric case using a model developed for Agilent by Vijai Tripathi. The even- and odd-mode impedance and admittance matrices are calculated based on the coupling capacitances. The result is used to calculate the network parameters of the distributed, coupled-line model by Tripathi's method. Conductor loss and dispersion are ignored.
2. To turn off noise contribution, set Temp to -273.15°C .
3. In generating a layout, adjacent transmission lines will be lined up with inner edges of the conductor strips at pins 1, 3, 4 and 6. If the connecting transmission lines are narrower than the coupled lines, they will be centered on the conductor strips. At pins 2 and 5, the

assumption is that the abutting transmission lines are narrower or the same width as the center coupled line.


4. Vijai K. Tripathi “On the Analysis of Symmetrical Three-Line Microstrip Circuits,” *MTT-25*, September 1977.
5. M. Kirschning and R. H. Jansen. “Accurate Wide-Range Design Equations for the Frequency-Dependent Characteristic of Parallel Coupled Microstrip Lines,” *MTT-32*, January 1984 (with corrections by Agilent).
6. E. Hammerstad and O. Jensen. “Accurate Models for Microstrip Computer-Aided Design,” *MTT Symposium Digest*, 1980, pp. 407-409.

MBEND (Microstrip Bend (Arbitrary Angle/Miter))

Symbol

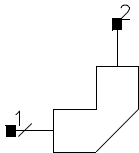

Illustration

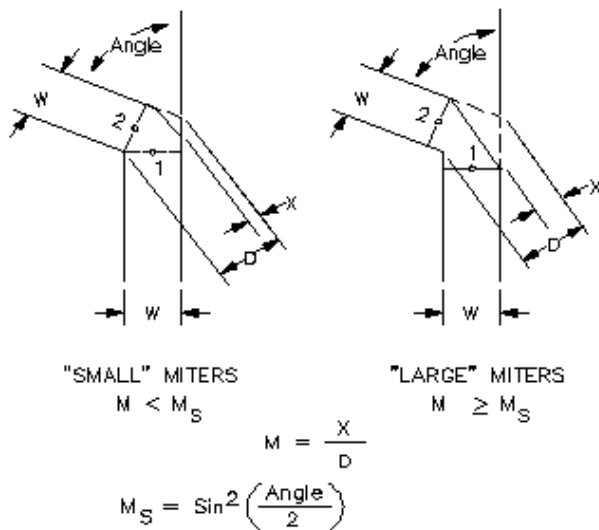

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

Angle = angle of bend, in degrees

M = miter fraction ($M=X/D$)

Temp = physical temperature, in °C

Range of Usage

$$1 \leq \epsilon_r \leq 128$$

$$-90^\circ \leq \text{Angle} \leq 90^\circ$$

$$0.01 \leq \frac{W}{H} \leq 100$$

where

Er = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)


W ≥ 0 for layout

Angle = any value for layout

Notes/Equations/References


1. For the unmitered, 90° condition, the frequency-domain analytical model is the lumped component, right-angle bend model proposed by Gupta et al. Otherwise, the lumped component model proposed by Jansen is used. The Hammerstad and Jensen microstrip formulas are used to calculate reference plane shifts in the Jansen model. Dispersion and conductor loss are not included in the model.
2. For right-angle bends, use MBEND2, MBEND3, or MCORN.
3. Two possible reference plane locations are available:
 - Small miters where the reference planes line up with the inner corner of the bend, or
 - Large miters where the reference planes line up with the corner between the connecting strip and the mitered section
4. To turn off noise contribution, set Temp to −273.15°C.
5. In layout, a positive value for Angle draws a bend in the counterclockwise direction from pin 1 to 2; a negative value for Angle draws a bend in the clockwise direction.
6. M. Kirschning, R. H. Jansen, and N. H. L. Koster. “Measurement and Computer-Aided Modeling of Microstrip Discontinuities by an Improved Resonator Method,” *1983 IEEE MTT-S International Microwave Symposium Digest*, May 1983, pp. 495-497.
7. R. H. Jansen, “Probleme des Entwurfs und der Messtechnik von Planaren Schaltungen,” *1. Teil, NTZ*, Vol 34, July 1981, pp. 412-417.
8. E. Hammerstad and O. Jensen, “Accurate Models for Microstrip Computer-Aided Design,” *MTT Symposium Digest*, 1980, pp. 407-409.
9. K. C. Gupta, R. Garg, and R. Chadha, *Computer-Aided Design of Microwave Circuits*, 1981, p. 195.

Equivalent Circuit

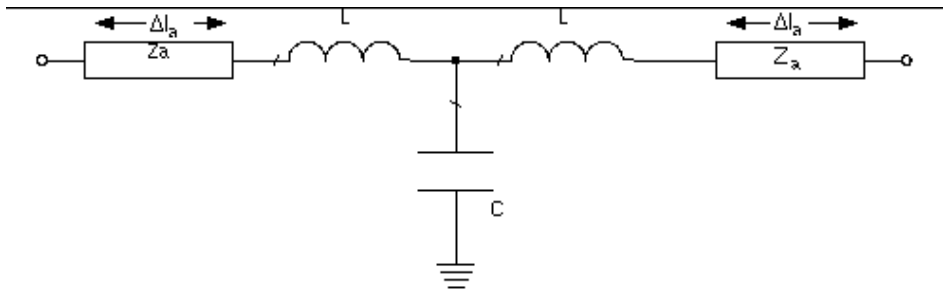


MBEND2 (90-degree Microstrip Bend (Mitered))

Symbol

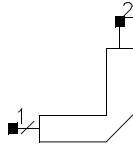

Illustration

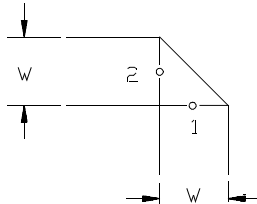

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.2 \leq \frac{W}{H} \leq 6.0$$

$$2.36 \leq \text{Er} \leq 10.4$$

$$\text{Simulation frequency} \leq \frac{12}{H(mm)} \text{ (GHz)}$$

where

Er = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

W ≥ 0 for layout

Notes/Equations/References

1. The frequency-domain model is an empirically-based analytical model that consists of a static, lumped, equivalent circuit. The equivalent circuit parameters are calculated based on


the expressions developed by Kirschning, Jansen and Koster according to the following formula.

$$\frac{C}{H} = \frac{W}{H} \left[7.6\epsilon_r + 3.8 + \frac{W}{H} (3.93\epsilon_r + 0.62) \right] \quad \text{pF/m}$$

$$\frac{L}{H} = 441.2712 \left\{ 1 - 1.062 \exp \left[-0.177 \left(\frac{W}{H} \right)^{0.947} \right] \right\} \quad \text{nH/m}$$


2. To turn off noise contribution, set Temp to -273.15°C .
3. M. Kirschning, R. H. Jansen, and N. H. L. Koster. "Measurement and Computer-Aided Modeling of Microstrip Discontinuities by an Improved Resonator Method," *1983 IEEE MTT-S International Microwave Symposium Digest*, May 1983, pp. 495-497.

Equivalent Circuit

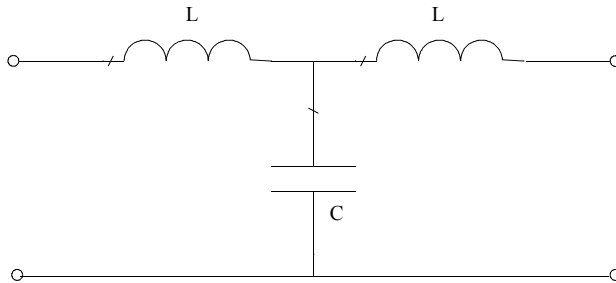


MBEND3 (90-degree Microstrip Bend (Optimally Mitered))

Symbol

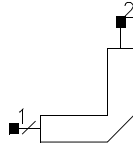

Illustration

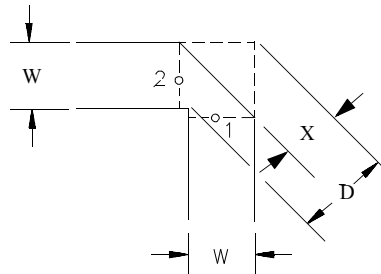

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

$$0.5 \leq \frac{W}{H} \leq 2.75$$

$$2.5 \leq \text{Er} \leq 25$$

$$\text{Simulation frequency} \leq \frac{15}{H(\text{mm})} \quad (\text{GHz})$$

where

Er = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

$W \geq 0$ for layout

Notes/Equations/References

1. The frequency-domain model is an empirically based, analytical model. The optimal chamfered bend dimensions are calculated based on the expression developed by Douville and James. The resulting bend is modeled as a matched transmission line of length, $2\Delta l_0$. This length is calculated from curve fits to the graphical data given in the references. In addition, dispersion is accounted for in the transmission line model. Conductor losses are ignored.

2. Optimum miter is given by:

$$\frac{X}{D} = 0.52 + 0.65 \times e^{(-1.35 \times (W/H))}$$

where

H = substrate thickness


3. To turn off noise contribution, set Temp to -273.15°C .

4. R. J. P. Douville and D. S. James, "Experimental Characterization of Microstrip Bends and Their Frequency Dependent Behavior," *1973 IEEE Conference Digest*, October 1973, pp. 24-25.

5. R. J. P. Douville and D. S. James, "Experimental Study of Symmetric Microstrip Bends and Their Compensation," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-26, March 1978, pp. 175-181.


6. Reinmut K. Hoffman, *Handbook of Microwave Integrated Circuits*, Artech House, 1987, pp. 267-309.

Equivalent Circuit

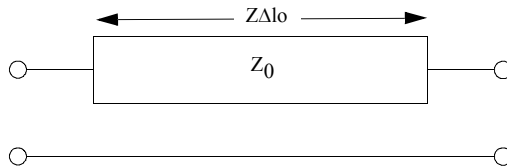


MBSTUB (Microstrip Butterfly Stub)

Symbol

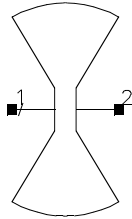

Illustration

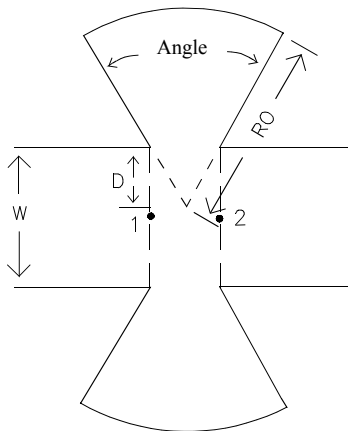

Parameters

Subst = microstrip substrate name

W = width of feed line, in specified units

Ro = outer radius of circular sector, in specified units

Angle = angle subtended by circular sector, in degrees

D = insertion depth of circular sector in feed line, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.01 \leq \frac{W}{H} \leq 100$$

$$R_o > \frac{D}{\cos(Angle/2)}$$

$$Angle < 90$$

where


H = substrate thickness (from associated Subst)

Notes/Equations/References


1. The frequency-domain analytical model accounts for conductor and dielectric losses.
2. It is assumed that only TM_{on} radial modes are excited. This requires Angle to be less than 90 degrees.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to $-273.15^{\circ}C$.
5. F. Giannini, M. Ruggieri, and J. Vrba, "Shunt-Connected Microstrip Radial Stubs," *IEEE Transaction, Microwave Theory and Techniques*, Vol. MTT-34, No. 3, March 1986, pp. 363-366.
6. F. Giannini, R. Sorrentino, and J. Vrba, "Planar Circuit Analysis of Microstrip Radial Stub," *IEEE Transaction, Microwave Theory and Techniques*, Vol. MTT-32, No. 12, December 1984, pp. 1652-1655.

MCFIL (Microstrip Coupled-Line Filter Section)

Symbol

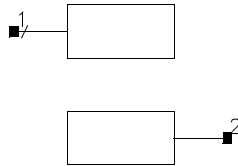

Illustration

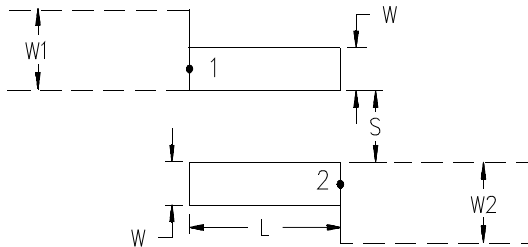

Parameters

Subst = microstrip substrate name

W = line width, in specified units

S = spacing between lines, in specified units

L = line length, in specified units

Temp = physical temperature, in °C

W1 = (for Layout Option) width of line that connects to pin 1

W2 = (for Layout Option) width of line that connects to pin 2

Range of Usage

$$0.1 \leq \frac{W}{H} \leq 10$$

$$0.1 \leq \frac{S}{H} \leq 10$$

$$1 \leq \epsilon_r \leq 18$$

$$\text{Simulation frequency} \leq \frac{25}{H(mm)} \quad (\text{GHz})$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

$W \geq 0, S \geq 0, L \geq 0$ for layout


$W1 \geq 0, W2 \geq 0$

Notes/Equations/References


1. The frequency-domain analytical model is a distributed, coupled-line model. The per-unit-length coupling capacitances are calculated using the formula developed by Kirschning and Jansen for parallel coupled microstrip lines, and the formula developed by Hammerstad and Jensen for single microstrip line. Dispersion, end effect, and conductor loss are included. The even- and odd-mode line impedances are calculated based on the coupling capacitances and conductor losses. The result is used to calculate the network parameters of the distributed, coupled-line model.
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. In generating a layout, adjacent transmission lines will be lined up with the inner edges of the conductor strips. If the connecting transmission lines are narrower than the coupled lines, they will be centered on the conductor strips.
5. R. Garg and I. J. Bahl. "Characteristics of Coupled Microstriplines," *MTT-27*, July 1979.
6. M. Kirschning and R. H. Jansen. "Accurate Wide-Range Design Equations for the Frequency-Dependent Characteristic of Parallel Coupled Microstrip Lines," *MTT-32*, January 1984 (with corrections by Agilent).
7. E. Hammerstad and O. Jensen. "Accurate Models for Microstrip Computer-Aided Design," *MTT Symposium Digest*, 1980, pp. 407-409

MCLIN (Microstrip Coupled Lines)

Symbol



Illustration

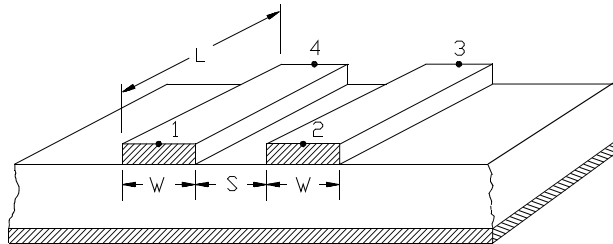

Parameters

Subst = microstrip substrate name

W = line width, in specified units

S = space between lines, in specified units

L = line length, in specified units

Temp = physical temperature, in °C

W1 = (for Layout Option) width of line that connects to pin 1

W2 = (for Layout Option) width of line that connects to pin 2

W3 = (for Layout Option) width of line that connects to pin 3

W4 = (for Layout Option) width of line that connects to pin 4

Range of Usage

$$0.1 \times H \leq W \leq 10.0 \times H$$

$$0.1 \times H \leq S \leq 10.0 \times H$$

$$1 \leq \epsilon_r \leq 18$$

$$T \geq 0$$

$$\text{Simulation frequency} \leq \frac{25}{H(mm)} \quad (\text{GHz})$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

T = conductor thickness (from associated Subst)

$W \geq 0, S \geq 0, L \geq 0$ for layout


$W1 \geq 0, W2 \geq 0, W3 \geq 0, W4 \geq 0$

Notes/Equations/References


1. The frequency-domain analytical model is a distributed, coupled-line model. The per-unit-length coupling capacitances are calculated using the formula developed by Kirschning and Jansen for parallel coupled microstrip lines, and the formula developed by Hammerstad and Jensen for single microstrip line. Dispersion and conductor loss are included. The even- and odd-mode line impedances are calculated based on the coupling capacitances and conductor losses. The result is used to calculate the network parameters of the distributed, coupled-line model.
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. In generating a layout, adjacent transmission lines will be lined up with the inner edges of the conductor strips. If the connecting transmission lines are narrower than the coupled lines, they will be centered on the conductor strips.
5. R. Garg and I. J. Bahl. "Characteristics of Coupled Microstriplines," *MTT-27*, July 1979.
6. M. Kirschning and R. H. Jansen. "Accurate Wide-Range Design Equations for the Frequency-Dependent Characteristic of Parallel Coupled Microstrip Lines," *MTT-32*, January 1984 (with corrections by Agilent).
7. E. Hammerstad and O. Jensen, "Accurate Models for Microstrip Computer-Aided Design," *MTT Symposium Digest*, 1980, pp. 407-409.

MCORN 90-degree Microstrip Bend (Unmitered)

Symbol

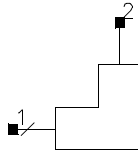

Illustration

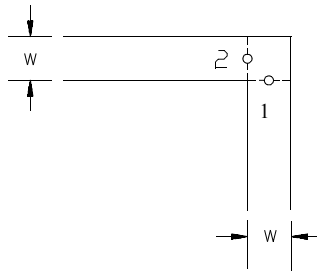

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.2 \leq \frac{W}{H} \leq 6.0$$

$$2.36 \leq \epsilon_r \leq 10.4$$

$$\text{Simulation frequency} \leq \frac{12}{H(mm)} \quad (\text{GHz})$$

where

ϵ_r = dielectric constant

H = substrate thickness

Notes/Equations/References


1. The frequency-domain model is an empirically based, analytical model which consists of a static, lumped, equivalent circuit. The equivalent circuit parameters are calculated based on the expressions developed by Kirschning, Jansen and Koster according to the following formula.

$$\frac{C}{H} = \frac{W}{H} \left[2.6\epsilon_r + 5.64 + \frac{W}{H} (10.35\epsilon_r + 2.5) \right] \quad \text{pF/m}$$

$$\frac{L}{H} = 220.6356 \left\{ 1 - 1.35 \exp \left[-0.18 \left(\frac{W}{H} \right)^{1.39} \right] \right\} \quad \text{nH/m}$$


2. To turn off noise contribution, set Temp to -273.15°C .
3. M. Kirschning, R. H. Jansen, and N. H. L. Koster. "Measurement and Computer-Aided Modeling of Microstrip Discontinuities by an Improved Resonator Method," *1983 IEEE MTT-S International Microwave Symposium Digest*, May 1983, pp. 495-497.
4. N. Marcuvitz, *Waveguide Handbook*, McGraw-Hill, New York, 1951, pp. 312-313.

Equivalent Circuit

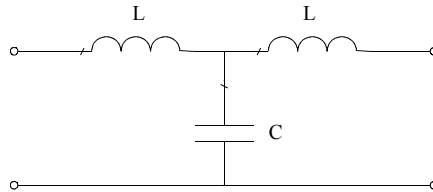


MCROS (Microstrip Cross-Junction)

Symbol

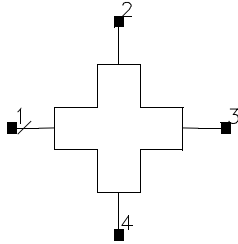

Illustration

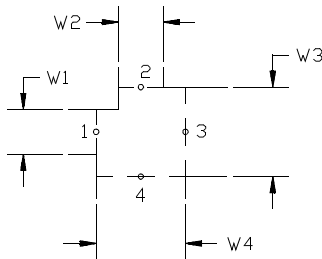

Parameters

Subst = microstrip substrate name

W1 = conductor width of line at pin 1, in specified units

W2 = conductor width of line at pin 2, in specified units

W3 = conductor width of line at pin 3, in specified units

W4 = conductor width of line at pin 4, in specified units

Range of Usage

$$0.25 \leq W_i/H \leq 8$$

where

H = substrate thickness (from associated Subst)

$$\epsilon_r \leq 50$$


Notes/Equations/References

1. This microstrip cross model is derived by curve fitting the results of microstrip cross simulations of an Agilent internal electromagnetic field solver. The new microstrip cross model can be applied to the most commonly used substrates including duriod, alumina, and GaAs. The range of validity of the model is further extended for use in microwave and RF circuit design applications.

The inductance equations are invariant to the relative dielectric constant on the substrate. Dispersion and conductor loss are not included.


2. To turn off noise contribution, set Temp to -273.15°C .
3. In layout, all pins are centered at the corresponding edges.
4. K. C. Gupta, R. Garg, and R. Chadha. *Computer-Aided Design of Microwave Circuits*, Artech House, 1981, pp. 197-199.

Equivalent Circuit

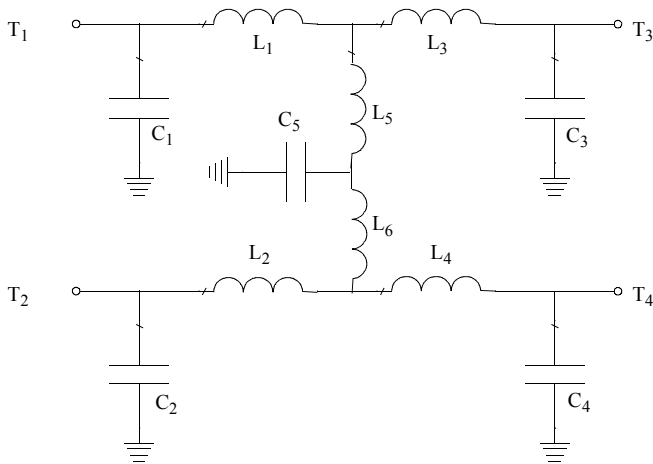


MCROSO (Alternate Libra Microstrip Cross-Junction)

Symbol

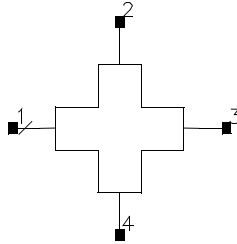

Illustration

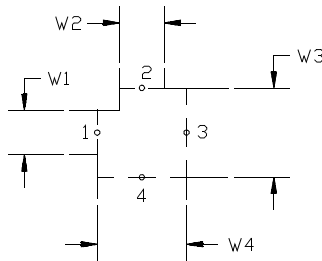

Parameters

Subst = microstrip substrate name

W1 = conductor width of line at pin 1, in specified units

W2 = conductor width of line at pin 2, in specified units

W3 = conductor width of line at pin 3, in specified units

W4 = conductor width of line at pin 4, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.4 \leq W_i/H \leq 2.5$$

where

H = substrate thickness (from associated Subst)

Notes/Equations/References


1. The frequency-domain model is an empirically based, analytical model that consists of a static, lumped, equivalent circuit. The equivalent circuit parameters are calculated based on the expressions developed by Gupta et al. The capacitance equations are modified to take into account the relative dielectric constant of the material according to the following formula.

$$C_x(\epsilon_r = \epsilon_r^{sub}) = C_x(\epsilon_r = 9.9) \left[\frac{Z_o(\epsilon_r = 9.9, w=Wx)}{Z_o(\epsilon_r = \epsilon_r^{sub}, w=Wx)} \right] \sqrt{\frac{\epsilon_{eff}(\epsilon_r = \epsilon_r^{sub}, w=Wx)}{\epsilon_{eff}(\epsilon_r = 9.9, w=Wx)}}$$

The inductance equations are invariant to the relative dielectric constant on the substrate. Dispersion and conductor loss are not included.


2. To turn off noise contribution, set Temp to -273.15°C .
3. In layout, all pins are centered at the corresponding edges.
4. K. C. Gupta, R. Garg, and R. Chadha. *Computer-Aided Design of Microwave Circuits*, Artech House, 1981, pp. 197-199.

Equivalent Circuit

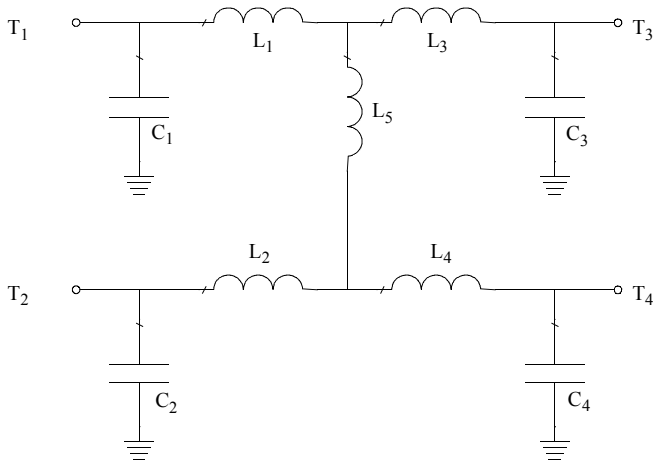


MCURVE (Microstrip Curved Bend)

Symbol

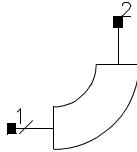

Illustration

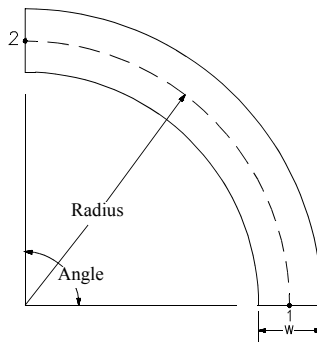

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

Angle = angle subtended by the bend, in degrees

Radius = radius (measured to strip centerline), in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.01 \times H \leq W \leq 100 \times H$$

$$-180^\circ \leq \text{Angle} \leq 180^\circ$$

$$\text{Radius} \geq W/2$$

where

H = substrate thickness (from associated Subst)

Notes/Equations/References


1. The microstrip curved bend is modeled in the frequency domain as an equivalent piece of straight microstrip line. The microstrip line is modeled using the MLIN component, including conductor loss, dielectric loss and dispersion. A correction for finite line thickness is applied to the line width.

The length of the equivalent straight microstrip section is equal to the product of the centerline radius and the angle in radians.


2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. In layout, a positive value for Angle specifies a counterclockwise curvature; a negative value specifies a clockwise curvature.

MCURVE2 (Microstrip Curved Bend)

Symbol

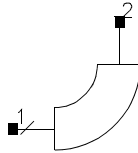

Illustration

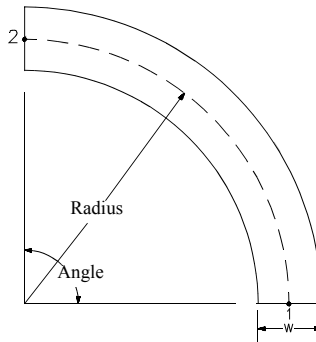

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

Angle = angle of bend, in degrees

Radius = radius (measured to strip centerline), in specified units

NMode = number of modes (see notes)

Temp = physical temperature, in °C

Range of Usage

$$0.01 \times H \leq W \leq 100 \times H$$

$$-360^\circ \leq \text{Angle} \leq 360^\circ$$

$$W \leq \text{Radius} \leq 100 \times W$$

$$\text{NMode} = 0, 1, 2, \dots$$

where


H = substrate thickness (from associated Subst)

Notes/Equations/References


1. The frequency-domain analytical model is based on a magnetic wall waveguide model developed by Weisshaar and Tripathi. The model includes the effect of higher order modes of propagation. Conductor loss, dielectric loss, and dispersion of both effective dielectric constant and characteristic impedance are also included.
2. NMode=1 or, at most, NMode=2 should usually provide satisfactory accuracy. Increasing NMode for improving accuracy results in significantly increased simulation time and additional memory requirements.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. In layout, a positive value for Angle specifies a counterclockwise curvature; a negative value specifies a clockwise curvature.
6. A. Weisshaar, S. Luo, M. Thorburn, V. K. Tripathi, M. Goldfarb, J. L. Lee, and E. Reese. "Modeling of Radial Microstrip Bends," *IEEE MTT-S International Microwave Symposium Digest*, Vol. III, May 1990, pp. 1051-1054.
7. A. Weisshaar and V. K. Tripathi. "Perturbation Analysis and Modeling of Curved Microstrip Bends," *IEEE Transactions on Microwave Theory and Techniques*, Vol. 38, No. 10, October 1990, pp. 1449-1454.

MGAP (Microstrip Gap)

Symbol



Illustration

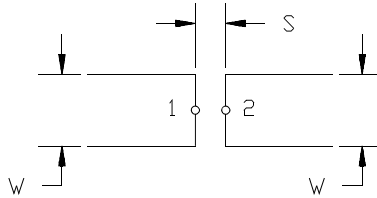

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

S = length of gap (spacing), in specified units

Temp = physical temperature, in °C

Range of Usage

$$1 \leq \text{Er} \leq 15$$

$$0.1 \leq \frac{W}{H} \leq 3.0$$

$$0.2 \leq \frac{S}{H}$$

where

Er = dielectric constant (from associated Subst)


H = substrate thickness (from associated Subst)

Notes/Equations/References

1. The frequency-domain model is an empirically based, analytical model that consists of a lumped component, equivalent circuit. The equivalent circuit parameters are calculated based on the expressions developed by Kirschning, Jansen and Koster. Dispersion is included in the capacitance calculations.


2. This new version of the MGAP component improves the simulation accuracy of gap capacitance.
3. To turn off noise contribution, set Temp to -273.15°C .
4. E. Hammerstad, "Computer Aided Design of Microstrip Couplers with Accurate Discontinuity Models," *IEEE MTT-S International Microwave Symposium Digest*, June 1981, pp. 54-56 (with modifications).
5. M. Kirschning, Jansen, R.H., and Koster, N. H. L. "Measurement and Computer-Aided Modeling of Microstrip Discontinuities by an Improved Resonator Method," *IEEE MTT-S International Microwave Symposium Digest*, May 1983, pp. 495-497.
6. N. H. L Koster and R. H. Jansen. "The Equivalent Circuit of the Asymmetrical Series Gap in Microstrip and Suspended Substrate Lines," *IEEE Trans. on Microwave Theory and Techniques*, Vol. MTT-30, Aug. 1982, pp. 1273-1279.

Equivalent Circuit

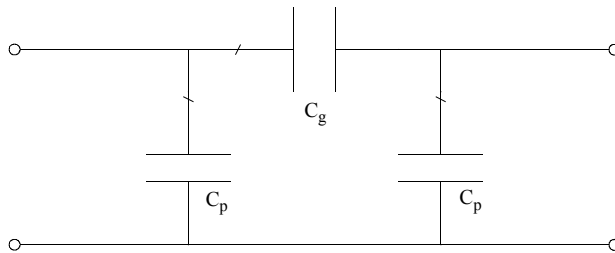


MICAP1 (Microstrip Interdigital Capacitor (2-port))

Symbol



Illustration

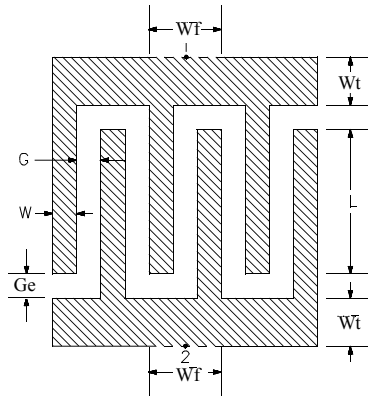

Parameters

Subst = microstrip substrate name

W = finger width, in specified units

G = gap between fingers, in specified units

G_e = gap at end of fingers, in specified units

L = length of overlapped region, in specified units

N_p = number of finger pairs (an integer)

W_t = width of interconnect, in specified units

W_f = width of feedline, in specified units

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

$\epsilon_r \leq 12.5$

$T \leq 0.015 \times H$

$$0.05 \times H \leq W \leq 0.8 \times H$$

$$0.025 \times H \leq G \leq 0.45 \times H$$

$$\text{Simulation frequency} \leq \frac{2.4}{H(mm)} \quad (\text{GHz})$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

T = conductor thickness (from associated Subst)

Notes/Equations/References

1. The frequency-domain analytical model is a distributed, coupled-line model developed for Agilent by William J. Getsinger. References [6], [7], and [8] are supplemental.


The digits of the structure are assumed to be part of an infinite array excited on an even- and odd-mode basis. Each component in this array is a unit cell bounded by magnetic walls. The model calculates the per-unit-length admittance and impedance matrices (even and odd modes) for each cell. This calculation is based on the even and odd mode capacitances, the conductor loss and the substrate dielectric loss. The capacitances are calculated by a conformal mapping technique. Conductor losses are calculated using Wheeler's method. Corrections for finite strip thickness and end effects are included. Network parameters of the transmission line model of each cell are calculated from the admittance and impedance matrices. The cells are combined to form the complete model including end effects. Microstrip dispersion effects are included in this model.

2. This component is intended for series connection.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. G. Alley, "Interdigital Capacitors and Their Application to Lumped-Element Microwave Integrated Circuits," *IEEE Trans. MTT-18*, December 1970, pp. 1028-1033 (with additions by Agilent).
6. R. Esfandiari, D. Maku, and M. Siracusa, "Design of Interdigitated Capacitors and Their Application to Gallium-Arsenide Monolithic Filters," *IEEE Trans. MTT*, Vol. 31, No. 1, January 1983, pp. 57-64.


7. X. Y. She and Y. L. Chow. "Interdigital microstrip capacitor as a four-port network," *IEEE Proceedings*, Pt. H, Vol. 133, 1986, pp. 191-197.

MICAP2 (Microstrip Interdigital Capacitor (4-port))

Symbol

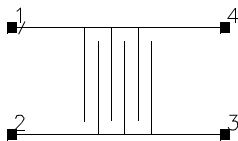

Illustration

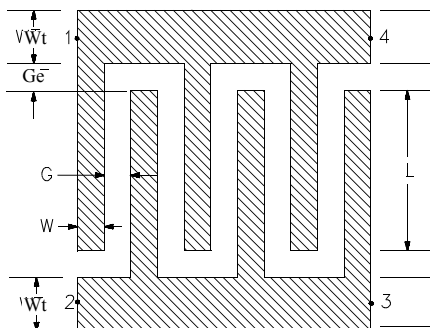

Parameters

Subst = microstrip substrate name

W = finger width, in specified units

G = gap between fingers, in specified units

Ge = gap at end of fingers, in specified units

L = length of overlapped region, in specified units

Np = number of finger pairs (an integer)

Wt = width of interconnect, in specified units

Temp = physical temperature, in °C

Range of Usage

$Er \leq 12.5$

$T \leq 0.015 \times H$

$0.05 \times H \leq W \leq 0.8 \times H$

$$0.025 \times H \leq G \leq 0.45 \times H$$

$$\text{Simulation frequency} \leq \frac{2.4}{H(mm)} \quad (\text{GHz})$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

T = conductor thickness (from associated Subst)

Notes/Equations/References

1. The frequency-domain analytical model is a distributed, coupled-line model developed for Agilent by William J. Getsinger. References [6], [7], and [8] are supplemental.


The digits of the structure are assumed to be part of an infinite array excited on an even- and odd-mode basis. Each component in this array is a unit cell bounded by magnetic walls. The model calculates the per-unit-length admittance and impedance matrices (even and odd modes) for each cell. This calculation is based on the even and odd mode capacitances, the conductor loss and the substrate dielectric loss. The capacitances are calculated by a conformal mapping technique. Conductor losses are calculated using Wheeler's method. Corrections for finite strip thickness and end effects are included. Network parameters of the transmission line model of each cell are calculated from the admittance and impedance matrices. The cells are combined to form the complete model including end effects. Microstrip dispersion effects are included in this model.

2. This component is used when a cascade configuration is not appropriate.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. G. Alley, "Interdigital Capacitors and Their Application to Lumped-Element Microwave Integrated Circuits," *IEEE Trans. MTT-18*, December 1970, pp. 1028-1033 (with additions by Agilent).
6. R. Esfandiari, D. Maku and M. Siracusa. "Design of Interdigitated Capacitors and Their Application to Gallium-Arsenide Monolithic Filters," *IEEE Trans. MTT*, Vol. 31, No. 1, January 1983, pp. 57-64.


X. Y. She and Y. L. Chow. "Interdigital microstrip capacitor as a four-port network," *IEEE Proceedings*, Pt. H, Vol. 133, 1986, pp. 191-197.

MICAP3 (Microstrip Interdigital Capacitor (1-port))

Symbol



Illustration

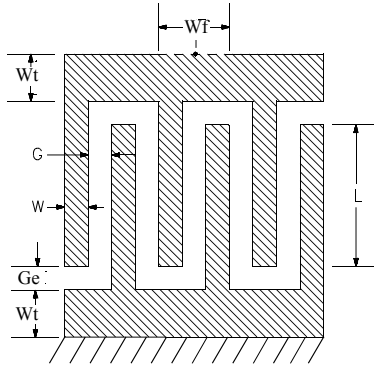

Parameters

Subst = microstrip substrate name

W = finger width, in specified units

G = gap between fingers, in specified units

G_e = gap at end of fingers, in specified units

L = length of overlapped region, in specified units

N_p = number of finger pairs (an integer)

W_t = width of interconnect, in specified units

W_f = width of the feedline, in specified units

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

$$\text{Er} \leq 12.5$$

$$T \leq 0.015 \times H$$

$$0.05 \times H \leq W \leq 0.8 \times H$$

$$0.025 \times H \leq G \leq 0.45 \times H$$

$$\text{Simulation frequency} \leq \frac{2.4}{H(mm)} \quad (\text{GHz})$$

where

Er = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

T = conductor thickness (from associated Subst)

Notes/Equations/References

1. The frequency-domain analytical model is a distributed, coupled-line model developed for Agilent by William J. Getsinger. References [7], [8], and [9] are supplemental.


The digits of the structure are assumed to be part of an infinite array excited on an even- and odd-mode basis. Each component in this array is a unit cell bounded by magnetic walls. The model calculates the per-unit-length admittance and impedance matrices (even and odd modes) for each cell. This calculation is based on the even and odd mode capacitances, the conductor loss and the substrate dielectric loss. The capacitances are calculated by a conformal mapping technique. Conductor losses are calculated using Wheeler's method. Corrections for finite strip thickness and end effects are included. Network parameters of the transmission line model of each cell are calculated from the admittance and impedance matrices. The cells are combined to form the complete model including end effects. Microstrip dispersion effects are included in this model.

2. This is a 1-port configuration of MICAP1 for use where one side of the interdigital capacitor is connected to ground.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. Proper grounding must be added manually in the layout. The implied ground plane is drawn on the layer mapped to the Hole parameter in the MSUB component. The ground plane is for modeling in Momentum and is not modeled separately in the circuit simulator.
6. G. Alley, "Interdigital Capacitors and Their Application to Lumped-Element Microwave Integrated Circuits," *IEEE Trans. MTT-18*, December 1970, pp. 1028-1033 (with additions by Agilent).


7. R. Esfandiari, D. Maku and M. Siracusa. "Design of Interdigitated Capacitors and Their Application to Gallium-Arsenide Monolithic Filters," *IEEE Trans. MTT*, Vol. 31, No. 1, pp. 57-64, January 1983.
8. X. Y. She and Y. L. Chow. "Interdigital microstrip capacitor as a four-port network," *IEEE Proceedings*, Pt. H, Vol. 133, 1986, pp. 191-197.

MICAP4 (Microstrip Interdigital Capacitor (Grounded 2-port))

Symbol

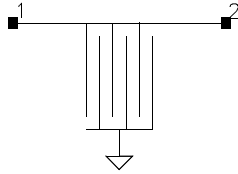

Illustration

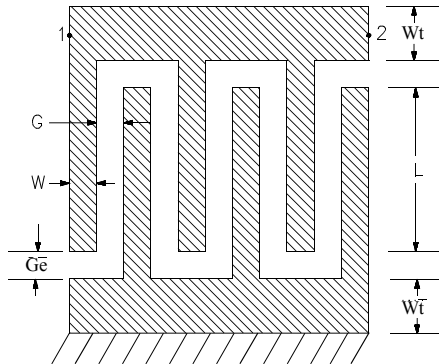

Parameters

Subst = microstrip substrate name

W = finger width, in specified units

G = gap between fingers, in specified units

Ge = gap at end of fingers, in specified units

L = length of overlapped region, in specified units

Np = number of finger pairs (an integer)

Wt = width of interconnect, in specified units

Temp = physical temperature, in °C

Range of Usage

$\epsilon_r \leq 12.5$

$T \leq 0.015 \times H$

$$0.05 \times H \leq W \leq 0.8 \times H$$

$$0.025 \times H \leq G \leq 0.45 \times H$$

$$\text{Simulation frequency} \leq \frac{2.4}{H(mm)} \quad (\text{GHz})$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

T = conductor thickness (from associated Subst)

Notes/Equations/References

1. The frequency-domain analytical model is a distributed, coupled-line model developed for Agilent by William J. Getsinger. References [7], [8], and [9] are supplemental.


The digits of the structure are assumed to be part of an infinite array excited on an even- and odd-mode basis. Each component in this array is a unit cell bounded by magnetic walls. The model calculates the per-unit-length admittance and impedance matrices (even and odd modes) for each cell. This calculation is based on the even and odd mode capacitances, the conductor loss and the substrate dielectric loss. The capacitances are calculated by a conformal mapping technique. Conductor losses are calculated using Wheeler's method. Corrections for finite strip thickness and end effects are included. Network parameters of the transmission line model of each cell are calculated from the admittance and impedance matrices. The cells are combined to form the complete model including end effects. Microstrip dispersion effects are included in this model.

2. This is a 2-port configuration of MICAP2 intended for use where one side of the interdigital capacitor is connected to ground and the other side does not have a simple single connection point.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. Proper grounding must be added manually in the layout. The implied ground plane is drawn on the layer mapped to the Hole parameter in the MSUB component. The ground plane is for modeling in Momentum and is not modeled separately in the circuit simulator.
6. G. Alley, "Interdigital Capacitors and Their Application to Lumped-Element Microwave Integrated Circuits," *IEEE Trans. MTT-18*, December 1970, pp. 1028-1033 (with additions by Agilent).


7. R. Esfandiari, D. Maku, and M. Siracusa. "Design of Interdigitated Capacitors and Their Application to Gallium-Arsenide Monolithic Filters," *IEEE Trans. MTT*, Vol. 31, No. 1, pp. 57-64, January 1983.
8. X. Y. She and Y. L. Chow. "Interdigital microstrip capacitor as a four-port network," *IEEE Proceedings*, Pt. H, Vol. 133, 1986, pp. 191-197.

MLANG (Microstrip Lange Coupler)

Symbol

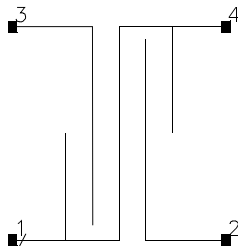

Illustration

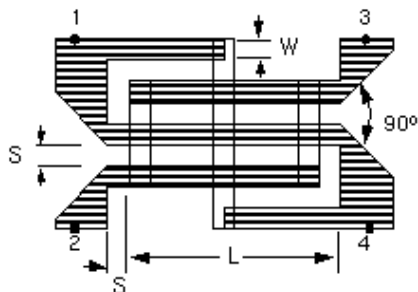

Parameters

Subst = microstrip substrate name

W = finger width, in specified units

S = conductor spacing, in specified units

L = conductor length, in specified units

Temp = physical temperature, in °C

W1 = (for Layout Option) width of transmission lines that connect to pins 1, 2, 3, 4

Range of Usage

$$1 \leq \epsilon_r \leq 18$$

$$0.01 \leq \frac{W}{H} \leq 10$$

$$0.01 \leq \frac{S}{H} \leq 10$$

$$\text{Simulation frequency} \leq \frac{25}{H(mm)} \quad (\text{GHz})$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)


$(3W + 2S) \geq W1 \geq 0$ for proper layout

Notes/Equations/References


1. The frequency-domain analytical model is a distributed, coupled-line model. Even- and odd-mode capacitances are calculated for each unit-cell of the interdigitated structure. Alternate fingers are assumed to be at the same potential. Only coupling between adjacent fingers is included in the model. The per-unit-length coupling capacitances are calculated using the formula developed by Kirschning and Jansen for parallel coupled microstrip lines, and the formula developed by Hammerstad and Jensen for single microstrip line. Dispersion and conductor loss are included. The even- and odd-mode line impedances are calculated based on the coupling capacitances and conductor losses. Then, this result is used to calculate the network parameters of the distributed, coupled-line model.
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. The conductor drawn on the layer mapped to the Cond2 parameter, as well as the transition drawn on the layer to the Diel2 parameter, in the MSUB component are for the purpose of modeling in Momentum. They are not modeled separately in the circuit simulator.
5. W. H. Childs, "A 3-dB Interdigitated Coupler on Fused Silica," *IEEE MTT Symposium Digest*, 1977.
6. E. Hammerstad and O. Jensen, "Accurate Models for Microstrip Computer-Aided Design," *MTT Symposium Digest*, 1980, pp. 407-409.
7. M. Kirschning and R. H. Jansen, "Accurate Wide-Range Design Equations for the Frequency-Dependent Characteristics of Parallel Coupled Microstrip Lines," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-32, January 1984, pp. 83-89.

MLANG6 (Microstrip Lange Coupler (6-Fingered))

Symbol

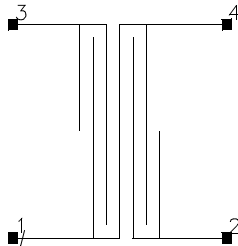

Illustration

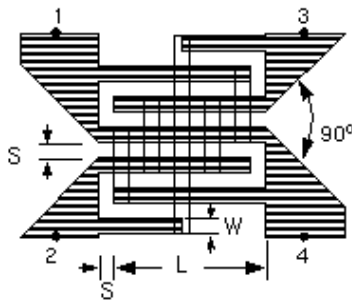

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

S = conductor spacing, in specified units

L = conductor length, in specified units

Temp = physical temperature, in °C

W1 = (for Layout Option) width of transmission lines that connect to pins 1, 2, 3, 4

Range of Usage

$$1 \leq \epsilon_r \leq 18$$

$$0.01 < \frac{W}{H} < 10$$

$$0.01 < \frac{S}{H} < 10$$

$$\text{Simulation frequency} \leq \frac{25}{H(mm)} \text{ (GHz)}$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)


$(3W + 2S) \geq W1 \geq 0$ for proper layout

Notes/Equations/References


1. The frequency-domain analytical model is a distributed, coupled-line model. Even- and odd-mode capacitances are calculated for each unit-cell of the interdigitated structure. Alternate fingers are assumed to be at the same potential. Only coupling between adjacent fingers is included in the model. The per-unit-length coupling capacitances are calculated using the formula developed by Kirschning and Jansen for parallel coupled microstrip lines, and the formula developed by Hammerstad and Jensen for single microstrip line. Dispersion and conductor loss are included. The even- and odd-mode line impedances are calculated based on the coupling capacitances and conductor losses. Then, this result is used to calculate the network parameters of the distributed, coupled-line model.
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. W1 is a layout-only parameter and does not affect the simulation results.
5. The conductor drawn on the layer mapped to the Cond2 parameter, as well as the transition drawn on the layer to the Diel2 parameter, in the MSUB component are for the purpose of modeling in Momentum. They are not modeled separately in the circuit simulator.
6. W. H. Childs, "A 3-dB Interdigitated Coupler on Fused Silica," *IEEE MTT Symposium Digest*, 1977.
7. E. Hammerstad and O. Jensen, "Accurate Models for Microstrip Computer-Aided Design," *MTT Symposium Digest*, 1980, pp. 407-409.
8. M. Kirschning and R. H. Jansen, "Accurate Wide-Range Design Equations for the Frequency-Dependent Characteristics of Parallel Coupled Microstrip Lines," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-32, January 1984, pp. 83-89.

MLANG8 (Microstrip Lange Coupler (8-Fingered))

Symbol

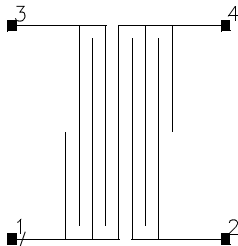

Illustration

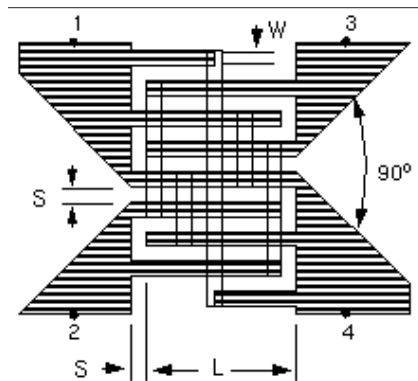

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

S = conductor spacing, in specified units

L = conductor length, in specified units

Temp = physical temperature, in °C

W1 = (for Layout Option) width of transmission lines that connect to pins 1, 2, 3, 4

Range of Usage

$$1 \leq \epsilon_r \leq 18$$

$$0.01 \leq \frac{W}{H} \leq 10$$

$$0.01 \leq \frac{S}{H} \leq 10$$

$$\text{Simulation frequency} \leq \frac{25}{H(mm)} \text{ (GHz)}$$

where

Er = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

$(5W + 4S) \geq W1 \geq 0$ for proper layout


Notes/Equations/References

1. The frequency-domain analytical model is a distributed, coupled-line model. Even- and odd-mode capacitances are calculated for each unit-cell of the interdigitated structure. Alternate fingers are assumed to be at the same potential. Only coupling between adjacent fingers is included in the model. The per-unit-length coupling capacitances are calculated using the formula developed by Kirschning and Jansen for parallel coupled microstrip lines, and the formula developed by Hammerstad and Jensen for single microstrip line. Dispersion and conductor loss are included. The even- and odd-mode line impedances are calculated based on the coupling capacitances and conductor losses. This result is used to calculate the network parameters of the distributed, coupled-line model.
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. W1 is a layout-only parameter and does not affect the simulation results.
5. The conductor drawn on the layer mapped to the Cond2 parameter, as well as the transition drawn on the layer to the Diel2 parameter, in the MSUB component are for the purpose of modeling in Momentum. They are not modeled separately in the circuit simulator.
6. W. H. Childs, "A 3-dB Interdigitated Coupler on Fused Silica," *IEEE MTT Symposium Digest*, 1977.
7. E. Hammerstad and O. Jensen, "Accurate Models for Microstrip Computer-Aided Design," *MTT Symposium Digest*, 1980, pp. 407-409.


8. M. Kirschning and R. H. Jansen, "Accurate Wide-Range Design Equations for the Frequency-Dependent Characteristics of Parallel Coupled Microstrip Lines," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-32, January 1984, pp. 83-89.

MLEF (Microstrip Line Open-End Effect)

Symbol



Illustration

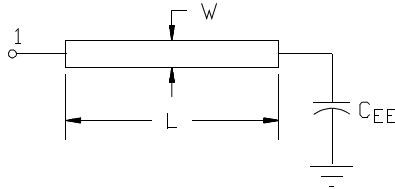

Parameters

Subst = microstrip substrate name

W = line width, in specified units

L = line length, in specified units

Wall1 = distance from near edge of strip H to first sidewall

Wall2 = distance from near edge of strip H to second sidewall

Temp = physical temperature, in °C

Range of Usage

$$2 \leq \text{Er} \leq 50$$

$$\frac{W}{H} \geq 0.2$$

where

Er = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)


Notes/Equations/References

1. The open-end effect in microstrip is modeled in the frequency domain as an extension to the length of the microstrip stub. The microstrip is modeled using the MLIN component, including conductor loss, dielectric loss and dispersion. A correction for finite line thickness is applied to the line width. The length of the microstrip extension, dl , is based on the formula developed by Kirschning, Jansen and Koster. Fringing at the open end of the line is calculated and included in the model.
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. When the Hu parameter of the substrate is less than $100 \times \text{Thickness_of_substrate}$, the impedance calculation will not be properly done if WALL1 and WALL2 are left blank.
5. Wall1 and Wall2 must satisfy the following constraints:

$$\text{Min(Wall1)} > 1/2 * \text{Maximum(Metal_Width, Substrate_Thickness)}$$

$$\text{Min(Wall2)} > 1/2 * \text{Maximum(Metal_Width, Substrate_Thickness)}$$
6. M. Kirschning, R. H. Jansen, and N. H. L. Koster. "Accurate Model for Open-End Effect of Microstrip Lines," *Electronics Letters*, Vol. 17, No. 3, February 5, 1981, pp. 123-125.

Equivalent Circuit

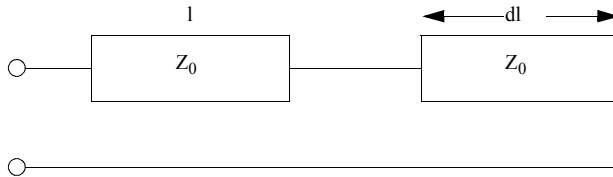


MLIN (Microstrip Line)

Symbol



Illustration

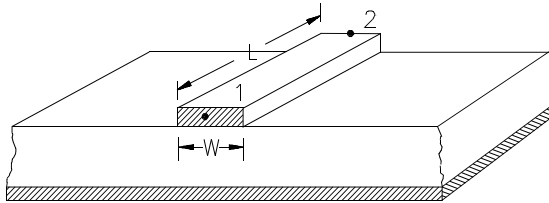

Parameters

Subst = microstrip substrate name

W = line width, in specified units

L = line length, in specified units

Wall1 = distance from near edge of strip H to first sidewall

Wall2 = distance from near edge of strip H to second sidewall

Temp = physical temperature, in °C

Mod = choice of dispersion formula

Range of Usage

$$1 \leq ER \leq 128$$

$$0.01 \leq \frac{W}{H} \leq 100$$

where

ER = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

Recommended Range for different dispersion models

Kirschning and Jansen:

$$1 \leq \epsilon_r \leq 20$$

$$0.1 * H \leq W \leq 100 * H$$

Kobayashi:

$$1 \leq \epsilon_r \leq 128$$

$$0.1 * H \leq W \leq 10 * H$$

$$0 \leq H \leq 0.13 * \lambda$$

Yamashita:

$$2 \leq \epsilon_r \leq 16$$

$$0.05 * H \leq W \leq 16 * H$$

where

λ = wavelength

freq \leq 100 GHz

Notes/Equations/References

1. The frequency-domain analytical model uses the Kirschning and Jansen formula to calculate the static impedance, Z_0 , and effective dielectric constant, ϵ_{eff} . The attenuation factor, α , is calculated using the incremental inductance rule by Wheeler. The frequency dependence of the skin effect is included in the conductor loss calculation. Dielectric loss is also included in the loss calculation.
2. Dispersion effects are included using either the improved version of the Kirschning and Jansen model, the Kobayashi model, or the Yamashita model, depending on the choice specified in Mod. The program defaults to using the Kirschning and Jansen formula.
3. For time-domain analysis, an impulse response obtained from the frequency analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. When the Hu parameter of the substrate is less than $100 * H$, the enclosure effect will not be properly calculated if Wall1 and Wall2 are left blank.
6. Wall1 and Wall2 must satisfy the following constraints:


$\text{Min}(\text{Wall1}) > 1/2 * \text{Maximum}(W, H)$

$\text{Min}(\text{Wall2}) > 1/2 * \text{Maximum}(W, H)$


7. W. J. Getsinger, "Measurement and Modeling of the Apparent Characteristic Impedance of Microstrip," *MTT-31*, August 1983.
8. E. Hammerstad and O. Jensen, "Accurate Models for Microstrip Computer-aided Design," *MTT Symposium Digest*, 1980.
9. M. Kirschning and R.H. Jansen, "Accurate Model for Effective Dielectric Constant of Microstrip and Validity up in Millimeter-Wave Frequencies", *Electron. Lett*, Vol. 18 March 18, 1982, pp. 272-273.
10. Kobayashi, M., "Frequency Dependent Characteristics of Microstrips on Anisotropic Substrates", *IEEE Trans.*, Vol. MTT-30, November 1983, pp. 89-92.
11. Kobayashi, M., "A Dispersion Formula Satisfying Recent Requirements in Microstrip CAD", *IEEE Trans.*, Vol. MTT-36, August 1990, pp. 1246-1370.
12. Yamashita, E., K. Atshi and T. Hirachata, "Microstrip Dispersion in a Wide Frequency Range", *IEEE Trans.*, Vol. MTT-29, June 1981, pp. 610-611.
13. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

MLOC (Microstrip Open-Circuited Stub)

Symbol



Illustration

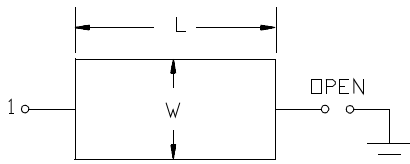

Parameters

Subst = microstrip substrate name

W = line width, in specified units

L = line length, in specified units

Wall1 = distance from near edge of strip to first sidewall

Wall2 = distance from near edge of strip to second sidewall

Temp = physical temperature, in °C

Mod = choice of dispersion formula

Range of Usage

$$1 \leq \epsilon_r \leq 128$$

$$0.01 \leq \frac{W}{H} \leq 100$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

Recommended Range for different dispersion models

Kirschning and Jansen:

$$1 \leq \epsilon_r \leq 20$$

$$0.1 \cdot H \leq W \leq 100 \cdot H$$

Kobayashi:

$$1 \leq \epsilon_r \leq 128$$

$$0.1 \cdot H \leq W \leq 10 \cdot H$$

$$0 \leq H \leq 0.13 \cdot \lambda$$

Yamashita:

$$2 \leq \epsilon_r \leq 16$$

$$0.05 \cdot H \leq W \leq 16 \cdot H$$

where

λ = wavelength

freq \leq 100 GHz

Notes/Equations/References

1. The frequency-domain analytical model uses the Kirschning and Jansen formula to calculate the static impedance, Z_0 , and effective dielectric constant, ϵ_{eff} . The attenuation factor, α , is calculated using the incremental inductance rule by Wheeler. The frequency dependence of the skin effect is included in the conductor loss calculation. Dielectric loss is also included in the loss calculation.
2. Dispersion effects are included using either the improved version of the Kirschning and Jansen model, the Kobayashi model, or the Yamashita model, depending on the choice specified in Mod. The program defaults to using the Kirschning and Jansen formula.
3. For time-domain analysis, an impulse response obtained from the frequency analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. When the Hu parameter of the substrate is less than $100 \cdot H$, the enclosure effect will not be properly calculated if Wall1 and Wall2 are left blank.
6. Wall1 and Wall2 must satisfy the following constraints:


$$\text{Min(Wall1)} > 1/2 * \text{Maximum(W, H)}$$

$$\text{Min(Wall2)} > 1/2 * \text{Maximum(W, H)}$$


7. End effects are included in the model.
8. W. J. Getsinger, "Measurement and Modeling of the Apparent Characteristic Impedance of Microstrip," *MTT-31*, August 1983.
9. E. Hammerstad and O. Jensen, "Accurate Models for Microstrip Computer-aided Design," *MTT Symposium Digest*, 1980.
10. M. Kirschning and R.H. Jansen, "Accurate Model for Effective Dielectric Constant of Microstrip and Validity up in Millimeter-Wave Frequencies", *Electron. Lett*, Vol. 18 March 18, 1982, pp. 272-273.
11. Kobayashi, M., "Frequency Dependent Characteristics of Microstrips on Anisotropic Substrates", *IEEE Trans.*, Vol. MTT-30, November 1983, pp. 89-92.
12. Kobayashi, M., "A Dispersion Formula Satisfying Recent Requirements in Microstrip CAD", *IEEE Trans.*, Vol. MTT-36, August 1990, pp. 1246-1370.
13. Yamashita, E., K. Atshi and T. Hirachata, "Microstrip Dispersion in a Wide Frequency Range", *IEEE Trans.*, Vol. MTT-29, June 1981, pp. 610-611.
14. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

MLSC (Microstrip Short-Circuited Stub)

Symbol



Illustration

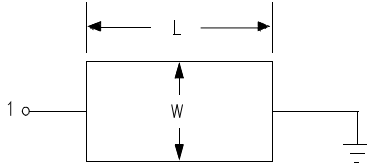

Parameters

Subst = microstrip substrate name

W = line width, in specified units

L = line length, in specified units

Wall1 = distance from near edge of strip to first sidewall

Wall2 = distance from near edge of strip to second sidewall

Temp = physical temperature, in °C

Mod = choice of dispersion formula

Range of Usage

$$1 \leq \epsilon_r \leq 128$$

$$0.01 \leq \frac{W}{H} \leq 100$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness (from associated Subst)

Recommended Range for different dispersion models

Kirschning and Jansen:

$$1 \leq \epsilon_r \leq 20$$

$$0.1 * H \leq W \leq 100 * H$$

Kobayashi:

$$1 \leq \epsilon_r \leq 128$$

$$0.1 * H \leq W \leq 10 * H$$

$$0 \leq H \leq 0.13 * \lambda$$

Yamashita:

$$2 \leq \epsilon_r \leq 16$$

$$0.05 * H \leq W \leq 16 * H$$

where

λ = wavelength

freq \leq 100 GHz

Notes/Equations/References

1. The frequency-domain analytical model uses the Kirschning and Jansen formula to calculate the static impedance, Z_0 , and effective dielectric constant, ϵ_{eff} . The attenuation factor, α , is calculated using the incremental inductance rule by Wheeler. The frequency dependence of the skin effect is included in the conductor loss calculation. Dielectric loss is also included in the loss calculation.
2. Dispersion effects are included using either the improved version of the Kirschning and Jansen model, the Kobayashi model, or the Yamashita model, depending on the choice specified in Mod. The program defaults to using the Kirschning and Jansen formula.
3. For time-domain analysis, an impulse response obtained from the frequency analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. When the H_u parameter of the substrate is less than $100 * H$, the enclosure effect will not be properly calculated if Wall1 and Wall2 are left blank. H_u and H respectively cover the height and substrate thickness specified in the associated substrate.
6. Wall1 and Wall2 must satisfy the following constraints:

$$\text{Min(Wall1)} > 1/2 * \text{Maximum(W, H)}$$


$$\text{Min(Wall2)} > 1/2 * \text{Maximum(W, H)}$$

where H is the substrate thickness specified in the associated substrate.


7. End effects are included in the model.
8. W. J. Getsinger, "Measurement and Modeling of the Apparent Characteristic Impedance of Microstrip," *MTT-31*, August 1983.
9. E. Hammerstad and O. Jensen, "Accurate Models for Microstrip Computer-aided Design," *MTT Symposium Digest*, 1980.
10. M. Kirschning and R.H. Jansen, "Accurate Model for Effective Dielectric Constant of Microstrip and Validity up in Millimeter-Wave Frequencies", *Electron. Lett*, Vol. 18 March 18, 1982, pp. 272-273.
11. Kobayashi, M., "Frequency Dependent Characteristics of Microstrips on Anisotropic Substrates", *IEEE Trans.*, Vol. MTT-30, November 1983, pp. 89-92.
12. Kobayashi, M., "A Dispersion Formula Satisfying Recent Requirements in Microstrip CAD", *IEEE Trans.*, Vol. MTT-36, August 1990, pp. 1246-1370.
13. Yamashita, E., K. Atshi and T. Hirachata, "Microstrip Dispersion in a Wide Frequency Range", *IEEE Trans.*, Vol. MTT-29, June 1981, pp. 610-611.
14. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

MRIND (Microstrip Rectangular Inductor)

Symbol

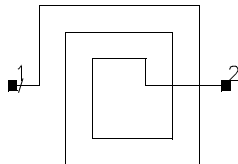

Illustration

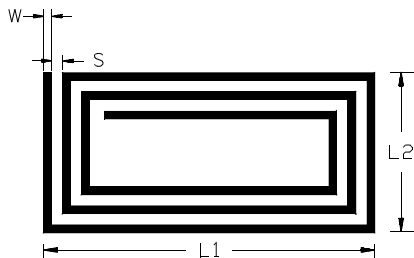

Parameters

Subst = microstrip substrate name

N = number of turns (need not be an integer)

L1 = length of second outermost segment (see illustration), in specified units

L2 = length of outermost segment (see illustration), in specified units

W = conductor width, in specified units

S = conductor spacing, in specified units

Temp = physical temperature, in °C

W1 = (for Layout option) width of line that connects to pin 1

W2 = (for Layout option) width of line that connects to pin 2

Range of Usage

$W > 0$; $S > 0$; $T > 0$

$N \leq 8$ (or the highest number of turns that will fit, given W, S, L1 and L2)

$W + S \geq 0.01 \times H$

where

T = conductor thickness (from associated Subst)


H = substrate thickness (from associated Subst)

Notes/Equations/References


1. The number of turns (N) is adjusted to the nearest quarter turn. This component does not include a connection (such as an air-bridge) from the center of the inductor to the outside.
2. The frequency-domain analytical model for this component has been developed for Agilent by William J. Getsinger. Results published in the references listed at the end of these notes were used in the development of this model. Each segment of the spiral is modeled as a lumped C-L-C π -section with mutual inductive coupling to all other parallel segments including those of an image spiral. The image spiral accounts for the effects of the microstrip ground plane. The inductive calculations include the end-effects and differing lengths of coupled segments. The capacitive components account for capacitance to ground, coupling to the parallel adjacent segments, and the coupling to the next parallel segments beyond the adjacent, on both sides. The model also accounts for conductor and dielectric loss.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. In layout, the number of turns is rounded to the nearest quarter-turn. The connection will align at the inside edge at pin 1 and the outside edge at pin 2, unless $W1 < W$ or $W2 > W$, in which case the conductors are centered.
6. C. Hoer and C. Love, "Exact inductance equations for rectangular conductors with applications to more complicated geometrics," *Journal of Research of NBS*, Vol. 69C, No. 2, April-June 1965, pp. 127-137.
7. N. Marcuvitz, *Waveguide Handbook*, McGraw-Hill, New York, 1951, sections 5.11 and 5.28.
8. V. Ghoshal and L. Smith, "Skin effects in narrow copper microstrip at 77K," *IEEE Trans. on Microwave Theory and Tech.*, Vol. 36, December 1988.
9. H. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, Sept. 1941, pp. 412-424.
10. K. Gupta, R. Garg and I. Bahl, *Microstrip lines and slotlines*, Artech House, Dedham, MA, section 2.4.5.

MRINDELA (Elevated Microstrip Rectangular Inductor)

Symbol

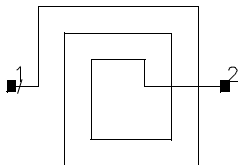

Illustration

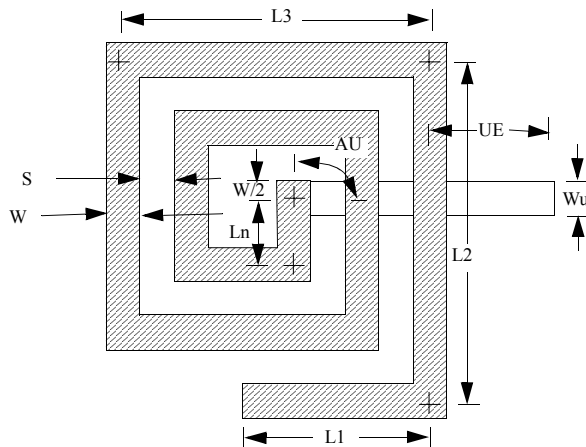

Parameters

Subst = microstrip substrate name

Ns = number of segments

$L1$ = length of first segment, in specified units

$L2$ = length of second segment, in specified units

$L3$ = length of third segment, in specified units

Ln = length of last segment, in specified units

W = conductor width, in specified units

S = conductor spacing, in specified units

Hi = elevation of inductor above substrate, in specified units

Ti = thickness of conductors, in specified units (T parameter in MSUB is ignored)

Ri = resistivity (relative to gold) of conductors

Sx = spacing limit between support posts, in specified units (0 to ignore posts)

Cc = coefficient for capacitance of corner support posts (ratio of actual post cross-sectional area to W^2)

Cs = coefficient for capacitance of support posts along segment (ratio of actual post cross-sectional area to W^2)

Wu = width of underpass strip conductor, in specified units

Au = angle of departure from innermost segment, in degrees

UE = extension of underpass beyond inductor, in specified units

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$S > 0$

$Sx > 2W$

$Au = 0^\circ, 45^\circ, \text{ or } 90^\circ$

Au must be 90° if last segment (Ln) is less than full length

$$\frac{W+S}{2} \leq Ln \leq Ln_{max} \quad \text{where } Ln_{max} \text{ is the full length of the last segment (see Note 4)}$$

$Ti \leq W$ and $Ti \leq S$

Notes/Equations/References

1. The inductor is elevated in air above the substrate with a bridge connection that is in the form of an underpass strip conductor. Effects of support posts are included. Support posts are assumed to exist at each corner, plus along the segments, depending on the value of Sx.
2. The frequency-domain analytical model for this component has been developed for Agilent by William J. Getsinger. Results published in the references listed at the end of these notes were used in the development of this model.

Each segment of the spiral is modeled as a lumped C-L-C π -section with mutual inductive coupling to all other parallel segments including those of an image spiral. The image spiral accounts for the effects of the microstrip ground plane. The inductive calculations include

the end-effects and differing lengths of coupled segments. The capacitive components account for capacitance to ground, coupling to the parallel adjacent segments, and the coupling to the next parallel segments beyond the adjacent, on both sides. The model also accounts for conductor and dielectric loss.

3. The underpass conductor (bridge) connects to the innermost segment and crosses the inductor from underneath the spiral. The bridge is capacitively coupled to each segment of the spiral that it crosses.
4. If L_n is set to 0, it is assumed to have *full length*. The *full length* (L_{nmax}) is such that the spacing from the contact reference point to the inner edge of the fourth-from-last segment is $S+W/2$.

If N_s is even: $L_{nmax} = L_2 - (N_s - 2) \times (W + S)/2$

If N_s is odd: $L_{nmax} = L_3 - (N_s - 3) \times (W + S)/2$

5. If $W_u=0$, the effect of the underpass strip conductor is not simulated.
6. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
7. To turn off noise contribution, set Temp to -273.15°C .
8. In layout, the segments of the spiral are drawn on the *cond2* layer and the support posts are drawn on the *cond* layer.

For layout purposes the last segment (L_n) is drawn such that it extends a distance of $W/2$ beyond the contact reference point. This allows for a square region of size $W \times W$, on which the contact to the underpass is centered.

The inductor segments to airbridge/underpass transition is drawn on the layer mapped to the *Diel2* parameter of the MSUB component. The transition is only for the purpose of modeling in Momentum and is not taken into account in the circuit simulator.


For the transition at pin 2, if the angle of the airbridge/underpass is 0 or 45, the width of the transition is the width of the airbridge/underpass; if the angle of the airbridge/underpass is 90, the width of the transition is the width of the inductor segment.

9. C. Hoer and C. Love, "Exact inductance equations for rectangular conductors with applications to more complicated geometries," *Journal of Research of NBS*, Vol. 69C, No. 2, April-June 1965, pp. 127-137.
10. N. Marcuvitz, *Waveguide Handbook*, McGraw-Hill, New York, 1951, sections 5.11 and 5.28.


11. V. Ghoshal and L. Smith, "Skin effects in narrow copper microstrip at 77K," *IEEE Trans. on Microwave Theory and Tech.*, Vol. 36, December 1988.
12. H. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, Sept. 1941, pp. 412-424.
13. K. Gupta, R. Garg and I. Bahl, *Microstrip lines and slotlines*, Artech House, Dedham, MA, section 2.4.5.

MRINDELM (Elevated Microstrip Rectangular Inductor (Three-Layer Substrate))

Symbol

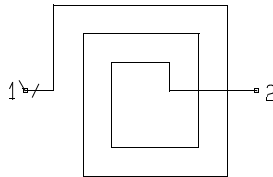

Illustration

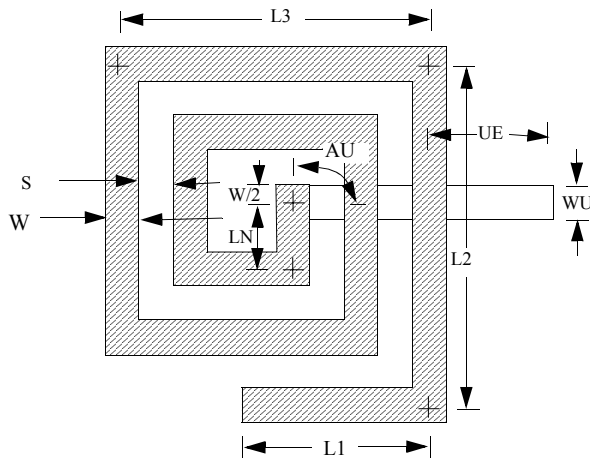

Parameters

Subst = microstrip substrate name

Ns = number of segments

L1 = length of first segment, in length units

L2 = length of second segment, in length units

L3 = length of third segment, in length units

Ln = length of last segment, in specified units

W = conductor width, in specified units

S = conductor spacing, in specified units

WU = width of underpass conductor, in length units

AU = angle of departure from innermost segment, in angle units

UE = extension of underpass beyond inductor, in length units

Temp = physical temperature, in °C

Range of Usage (including data item parameters):

$W > 0$

$S > 0$

$AU = 0^\circ, 45^\circ, \text{ or } 90^\circ$

AU must be 90° if last segment (LN) is less than full length \times

$$\frac{W + S}{2} \leq LN \leq LN_{max}$$

where LNmax is the *full length* of the last segment (see Note 5)

MSUBST3 substrate thickness H (1) > metal thickness T (1).

Notes/Equations/References

1. The inductor is elevated above a second substrate, as described by MSUBST3. The bridge connection is in the form of an underpass strip conductor that is printed on the bottom substrate (described by MSUBST3).
2. The frequency-domain analytical model for this element has been developed for Agilent by William J. Getsinger. Results published in the references listed at the end of these notes were used in the development of this model.
3. Each segment of the spiral is modeled as a lumped C-L-C π -section with mutual inductive coupling to all other parallel segments including those of an image spiral. The image spiral accounts for the effects of the microstrip ground plane. The inductive calculations include the end-effects and differing lengths of coupled segments. The capacitive elements account for capacitance to ground, coupling to the parallel adjacent segments, and the coupling to the next parallel segments beyond the adjacent, on both sides. The model also accounts for conductor and dielectric loss.
4. The underpass conductor (bridge) connects to the innermost segment and crosses the inductor from underneath the spiral. The bridge is capacitively coupled to each segment of the spiral that it crosses.

5. If LN is set to zero, it is assumed to have *full length*. The *full length* (LNmax) is such that the spacing from the contact reference point to the inner edge of the fourth-from-last segment is $S+W/2$.

If NS is even: $LN_{max} = L2 - (NS - 2) \cdot (W + S)/2$

If NS is odd: $LN_{max} = L3 - (NS - 3) \cdot (W + S)/2$

6. If $WU=0$, the effect of the underpass strip conductor is not simulated.
7. For transient analysis, microstrip inductors are modeled using a lumped RLC circuit.
8. For convolution analysis, the frequency-domain analytical model is used.
9. In Layout, the spiral inductor is mapped to the layer assigned to the LayerName[1] parameter of the MSUBST3 component referenced by the MRINDELM component. The underpass is mapped to the layer assigned to the LayerName[2] parameter of the MBSUBST3 component referenced by the MRINDELM component.

For layout purposes the last segment (LN) is drawn such that it extends a distance of $W/2$ beyond the contact reference point. This allows for a square region of size $W \times W$, on which the contact to the underpass is centered.


The inductor segments to air-bridge/underpass transition is mapped to the layer assigned to the LayerViaName[1] parameter of the MSUBST3 component referenced in the MRINDELM component. The transition is only for the purpose of modeling in Momentum and is not taken into account in the circuit simulator.

For the transition at pin 2, if the angle of the air-bridge/underpass is 0 or 45, the width of the transition is the width of the air-bridge/underpass; if the angle of the air-bridge/underpass is 90, the width of the transition is the width of the inductor segment.


10. C. Hoer and C. Love, "Exact inductance equations for rectangular conductors with applications to more complicated geometrics," *Journal of Research of NBS*, Vol. 69C, No. 2, April-June 1965, pp. 127-137.
11. N. Marcuvitz, *Waveguide Handbook*, McGraw-Hill, New York, 1951, sections 5.11 and 5.28.
12. V. Ghoshal and L. Smith, "Skin effects in narrow copper microstrip at 77K," *IEEE Trans. on Microwave Theory and Tech.*, Vol. 36, December 1988.
13. H. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, Sept. 1941, pp. 412-424.
14. K. Gupta, R. Garg and I. Bahl, *Microstrip lines and slotlines*, Artech House, Dedham, MA, section 2.4.5.

MRINDNBR (Microstrip Rectangular Inductor (No Bridge))

Symbol

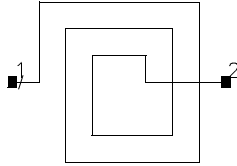

Illustration

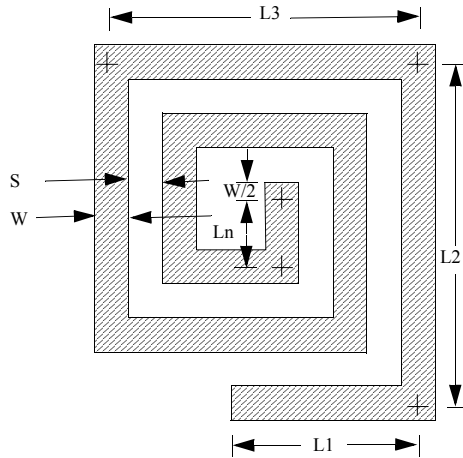

Parameters

Subst = microstrip substrate name

Ns = number of segments

$L1$ = length of first segment, in specified units

$L2$ = length of second segment, in specified units

$L3$ = length of third segment, in specified units

L_n = length of last segment, in specified units

W = conductor width, in specified units

S = conductor spacing, in specified units

Temp = physical temperature, in $^{\circ}C$

Range of UsagRange of Usage

$$W > 0$$

$$S > 0$$

$$\frac{W + S}{2} \leq L_n \leq L_{nmax}$$

where L_{nmax} is the *full length* of the last segment (see Note 3)

Notes/Equations/References

1. This component model is the same as that for MRIND. As with MRIND, this component does not include a connection (such as an airbridge) from the enter of the inductor to the outside.
2. The frequency-domain analytical model for this component has been developed for Agilent by William J. Getsinger. Results published in the references listed at the end of these notes were used in the development of this model.

Each segment of the spiral is modeled as a lumped C-L-C π -section with mutual inductive coupling to all other parallel segments including those of an image spiral. The image spiral accounts for the effects of the microstrip ground plane. The inductive calculations include the end-effects and differing lengths of coupled segments. The capacitive components account for capacitance to ground, coupling to the parallel adjacent segments, and the coupling to the next parallel segments beyond the adjacent, on both sides. The model also accounts for conductor and dielectric loss.

3. If L_n is set to zero, it is assumed to have *full length*. The *full length* (L_{nmax}) is such that the spacing from the contact reference point to the inner edge of the fourth-from-last segment is $S+W/2$.

$$\text{If } N_s \text{ is even: } L_{nmax} = L_2 - (N_s - 2) \times (W + S)/2$$


$$\text{If } N_s \text{ is odd: } L_{nmax} = L_3 - (N_s - 3) \times (W + S)/2$$

4. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
5. To turn off noise contribution, set Temp to -273.15°C .
6. For layout purposes, the last segment (L_n) is drawn such that it extends a distance of $W/2$ beyond the contact reference point. This allows for a square region of size $W \times W$, on which the contact to the inner pin is centered.


7. C. Hoer and C. Love, "Exact inductance equations for rectangular conductors with applications to more complicated geometrics," *Journal of Research of NBS*, Vol. 69C, No. 2, April-June 1965, pp. 127-137.
8. N. Marcuvitz, *Waveguide Handbook*, McGraw-Hill, New York, 1951, sections 5.11 and 5.28.

MRINDSBR (Microstrip Rectangular Inductor (Strip Bridge, Three-Layer Substrate))

Symbol

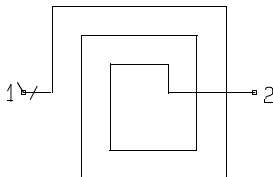

Illustration

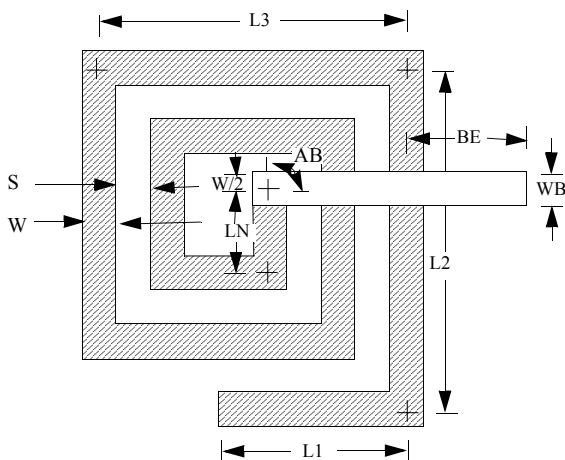

Parameters

Subst = microstrip substrate name

Ns = number of segments

$L1$ = length of first segment, in length units

$L2$ = length of second segment, in length units

$L3$ = length of third segment, in length units

LN = length of last segment, in length units

W = conductor width, in length units

S = conductor spacing, in length units

WB = width of bridge strip conductor, in length units

AB = angle of departure from innermost segment, in angle units

BE = extension of bridge beyond inductor, in length units

Temp = physical temperature, in °C

Range of Usage (including data item parameters):

$W > 0$

$S > 0$

$AB = 0^\circ, 45^\circ, \text{ or } 90^\circ$

AB must be 90° if last segment is less than full length

$$\frac{W + S}{2} \leq LN \leq LN_{max}$$

where

LN_{max} is the *full length* of the last segment (see Note 5)

Notes/Equations/References

1. The inductor is modeled as printed on the substrate described by MSUBST3. The bridge strip is modeled as printed on a dielectric that is described by MSUBST3.
2. The frequency-domain analytical model for this element has been developed for Agilent by William J. Getsinger. Results published in the references listed at the end of these notes were used in the development of this model.
3. Each segment of the spiral is modeled as a lumped C-L-C π -section with mutual inductive coupling to all other parallel segments including those of an image spiral. The image spiral accounts for the effects of the microstrip ground plane. The inductive calculations include the end-effects and differing lengths of coupled segments. The capacitive elements account for capacitance to ground, coupling to the parallel adjacent segments, and the coupling to the next parallel segments beyond the adjacent, on both sides. The model also accounts for conductor and dielectric loss.
4. The bridge conductor connects to the innermost segment and crosses the spiral from the top. The bridge is capacitively coupled to each segment of the spiral that it crosses.
5. If LN is set to zero, it is assumed to have *full length*. The *full length* (LN_{max}) is such that the spacing from the contact reference point to the inner edge of the fourth-from-last segment is $S+W/2$.

If NS is even: $LN_{max} = L2 - (NS - 2) \cdot (W + S)/2$

If NS is odd: $LN_{max} = L3 - (NS - 3) \cdot (W + S)/2$

6. If WB=0, the effect of the bridge strip conductor is not simulated.
7. For transient analysis, microstrip inductors are modeled using a lumped RLC circuit.
8. For convolution analysis, the frequency-domain analytical model is used.
9. In Layout, the spiral inductor is mapped to the layer assigned to the LayerName[2] parameter of the MSUBST3 component referenced by the MRINDSBR component. The strip bridge is mapped to the layer assigned to the LayerName[1] parameter of the MBSUBST3 component referenced by the MRINDSBR component.


For layout purposes, the last segment (LN) is drawn such that it extends a distance of W/2 beyond the contact reference point. This allows for a square region of size W×W, on which the contact to the bridge is connected.

The inductor segments to air-bridge/underpass transition is mapped to the layer assigned to the LayerViaName[1] parameter of the MSUBST3 component. referenced by the MRINDSBR component. The transition is only for the purpose of modeling in Momentum and is not taken into account in the circuit simulator.


For the transition at pin 2, if the angle of the air-bridge/underpass is 0 or 45, the width of the transition is the width of the air-bridge/underpass; if the angle of the air-bridge/underpass is 90, the width of the transition is the width of the inductor segment.

MRINDWBR (Microstrip Rectangular Inductor (Wire Bridge))

Symbol

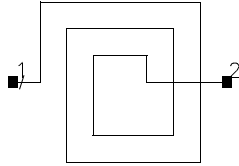

Illustration

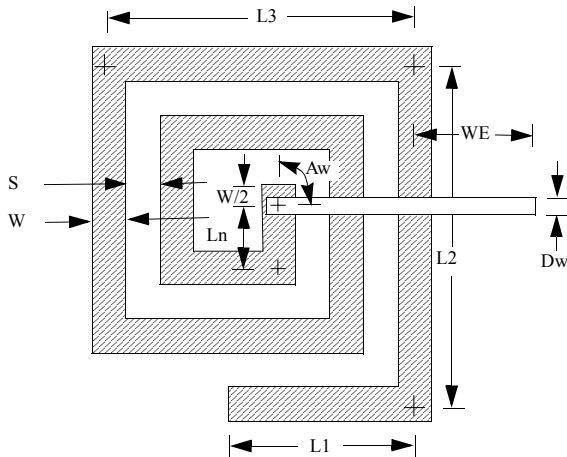

Parameters

Subst = microstrip substrate name

Ns = number of segments

L1 = length of first segment, in length units

L2 = length of second segment, in length units

L3 = length of third segment, in length units

L_n = length of last segment, in length units

W = conductor width, in length units

S = conductor spacing, in length units

WB = width of bridge strip conductor, in length units

AB = angle of departure from innermost segment, in angle units

BE = extension of bridge beyond inductor, in length units

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$S > 0$

$A_w = 0^\circ, 45^\circ, \text{ or } 90^\circ$

A_w must be 90° if last segment is less than full length

$$\frac{W + S}{2} \leq L_n \leq L_{nmax}$$

where L_{nmax} is the *full length* of the last segment (see Note 3)

Notes/Equations/References

1. This inductor is modeled as printed on the substrate described by Subst. The airbridge is in the form of a round wire that connects from the center of the spiral to the outside.
2. The frequency-domain analytical model for this component has been developed for Agilent by William J. Getsinger. Results published in the references listed at the end of these notes were used in the development of this model.

Each segment of the spiral is modeled as a lumped C-L-C π -section with mutual inductive coupling to all other parallel segments including those of an image spiral. The image spiral accounts for the effects of the microstrip ground plane. The inductive calculations include the end-effects and differing lengths of coupled segments. The capacitive components account for capacitance to ground, coupling to the parallel adjacent segments, and the coupling to the next parallel segments beyond the adjacent, on both sides. The model also accounts for conductor and dielectric loss.

3. If L_n is set to zero, it is assumed to have *full length*. The *full length* (L_{nmax}) is such that the spacing from the contact reference point to the inner edge of the fourth-from-last segment is $S+W/2$.

If N_s is even: $L_{nmax} = L_2 - (N_s - 2) \times (W + S)/2$

If N_s is odd: $L_{nmax} = L_3 - (N_s - 3) \times (W + S)/2$

4. If $D_w=0$, the effect of the wire bridge is not simulated.

5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
6. To turn off noise contribution, set Temp to -273.15°C .
7. In layout, the segments of the spiral are drawn on *cond* layer. The wire bridge is drawn on the *bond* layer.


For layout purposes the last segment (L_n) is drawn such that it extends a distance of $W/2$ beyond the contact reference point. This allows for a square region of size $W \times W$, on which the contact to the wire bridge is centered.

The inductor segments to airbridge/underpass transition is drawn on the layer mapped to the Die12 parameter of the MSUB component. The transition is only for the purpose of modeling in Momentum and is not taken into account in the circuit simulator.


For the transition at pin 2, if the angle of the air-bridge/underpass is 0 or 45, the width of the transition is the width of the air-bridge/underpass; if the angle of the air-bridge/underpass is 90, the width of the transition is the width of the inductor segment.
8. C. Hoer and C. Love, "Exact inductance equations for rectangular conductors with applications to more complicated geometries," *Journal of Research of NBS*, Vol. 69C, No. 2, April-June 1965, pp. 127-137.
9. N. Marcuvitz, *Waveguide Handbook*, McGraw-Hill, New York, 1951, sections 5.11 and 5.28.
10. V. Ghoshal and L. Smith, "Skin effects in narrow copper microstrip at 77K," *IEEE Trans. on Microwave Theory and Tech.*, Vol. 36, December 1988.
11. H. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, Sept. 1941, pp. 412-424.
12. K. Gupta, R. Garg and I. Bahl, *Microstrip lines and slotlines*, Artech House, Dedham, MA, section 2.4.5.

MRSTUB (Microstrip Radial Stub)

Symbol

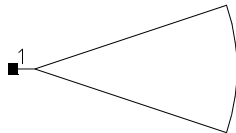

Illustration

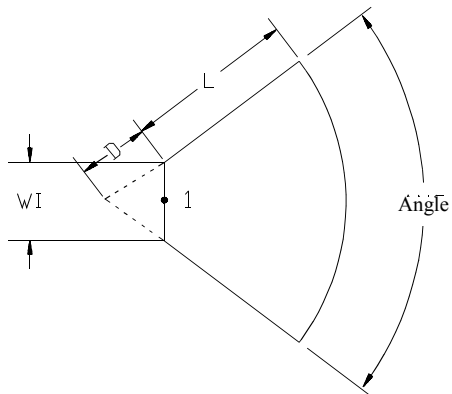

Parameters

Subst = microstrip substrate name

W_i = width of input line, in specified units

L = length of stub, in specified units

Angle = angle subtended by stub, in degrees

Temp = physical temperature, in °C

Range of Usage

$Er \leq 128$

$10^\circ \leq \text{Angle} \leq 170^\circ$

$0.01 \leq \frac{W_i}{H} \leq 100$

$(L + D) \times \text{Angle (radians)} \leq 100 \times H$ (see illustration)

where

ϵ_r = dielectric constant (from associated Subst)


H = substrate thickness (from associated Subst)

Notes/Equations/References


1. The frequency-domain analytical model is a microstrip line macro-model developed by Agilent. The radial stub is constructed from a series of *straight* microstrip sections of various widths that are cascaded together. The microstrip line model is the MLIN model. The number of sections is frequency dependent. Dispersion effects in the microstrip sections are included. The frequency-domain analytical model is lossless.
2. MRSTUB should be used with MTEE or MCROS when used as a stub in shunt with a transmission line.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .

MSIND (Microstrip Round Spiral Inductor)

Symbol

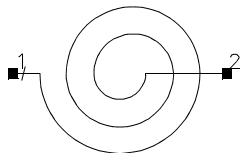

Illustration

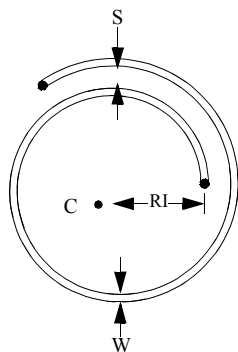

Parameters

Subst = microstrip substrate name

N = number of turns

Ri = inner radius measured to the center of the conductor, in specified units

W = conductor width, in specified units

S = conductor spacing, in specified units

Temp = physical temperature, in °C

W1 = (for Layout option) width of strip ending at pin 1

W2 = (for Layout option) width of strip ending at pin 2

Range of Usage

$R_i > W/2$


$N > 1$

Notes/Equations/References


1. The frequency-domain analytical model is a low-pass, series R-L and shunt C structure. Each R-L-C section corresponds to one turn of the inductor. The inductor L of each section is calculated using the formulas of Remke and Burdick, which do include ground plane inductance. Formulas given by Pettenpaul and his co-authors are used to calculate the series resistance R. These formulas provide a smooth transition from dc resistance to resistance due to skin effect at high frequencies. The value of the shunt capacitance C is based on coupled transmission line theory. Dielectric losses are not included.
2. R_i is measured to the center of the conductor.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. Ewald Pettenpaul, Harmut Kapusta, Address Weisgerber, Heinrich Mampe, Jurgen Luginsland, and Ingo Wolff. *CAD Models of Lumped Elements on GaAs up to 18 GHz*, IEEE Transactions on Microwave Theory and Techniques, Vol. 36, No. 2, February 1988, pp. 294-304.
6. Ronald L. Remke and Glenn A. Burdick. *Spiral Inductors for Hybrid and Microwave Applications*, Proc. 24th Electron Components Conference, Washington, D.C., May 1974, pp. 152-161.

MSLIT (Microstrip Slit)

Symbol



Illustration

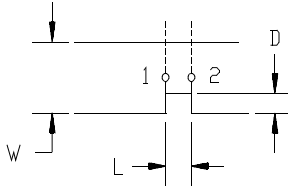

Parameters

Subst = microstrip substrate name

W = width, in specified units

D = depth of slit, in specified units

L = length of slit, in specified units

Temp = physical temperature, in °C

Range of Usage

$D \leq (0.9 \times W)$ or $(W - 0.01 \times H)$ whichever is smaller

$$L < \frac{\lambda}{10}$$

$$L \leq H$$

$$0.01 \leq \frac{W}{H} \leq 100$$

where

λ = wavelength in the dielectric

H = substrate thickness (from associated Subst)

Notes/Equations/References

1. The frequency-domain analytical model consists of a static, lumped, equivalent circuit. The equivalent circuit parameters are calculated based on the expressions given by Hofer. The

reference plane of the lumped model is at the center of the slit. Two reference plane shifts are added to move the reference plane to the outside edge of the slit, so that they are coincident with the layout dimensions. These reference plane shifts are modeled using a MLIN microstrip model that includes loss and dispersion. The characteristics of the microstrip lines are calculated based on the constricted width of the slit $W-D$. The formulas are given below, where Z_o and ϵ_{eff} are calculated for width W ; Z_o and ϵ_{eff} are calculated for width $W-D$; and, C_{gap} is the gap capacitance associated with a gap of length L and width $2D$ (c_o is the velocity of light in air).


$$\frac{\Delta L}{H} = \frac{\pi\mu_0}{2} \left(1 - \frac{Z_o}{Z_o'} \sqrt{\frac{\epsilon_{eff}}{\epsilon_{eff'}}} \right)$$

$$C_s = \frac{C_{gap}}{2}$$

$$C_p = \frac{\sqrt{\epsilon_{eff'}} L}{2c_o Z_o'}$$


2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. E. Hammerstad, "Computer-Aided Design of Microstrip Couples with Accurate Discontinuity Models," *IEEE MTT Symposium Digest*, June 1981, pp. 54-56.
5. W. J. R. Hoefer, "Fine Tuning of Microwave Integrated Circuits Through Longitudinal and Transverse Slits of Variable Length," *NTZ (German)*, Vol.30, May 1977, pp. 421-424.
6. W. J. R. Hoefer, "Theoretical and Experimental Characterization of Narrow Transverse Slits in Microstrip," *NTZ (German)*, Vol. 30, July 1977, pp. 582-585.
7. W. J. R. Hoefer, "Equivalent Series Inductivity of a Narrow Transverse Slit in Microstrip," *MTT Transactions*, Vol. MTT- 25, October 1977, pp. 822-824.

Equivalent Circuit

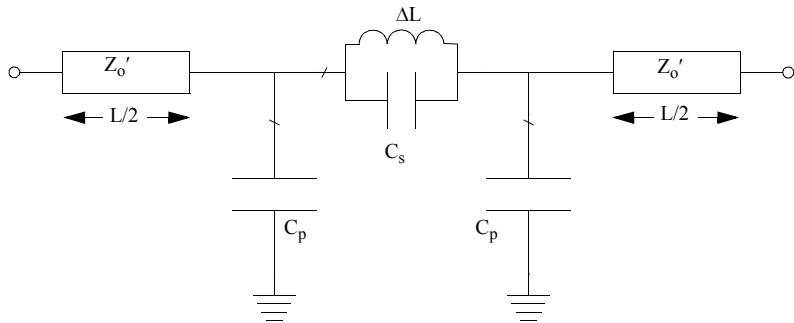


MSOP (Microstrip Symmetric Pair of Open Stubs)

Symbol

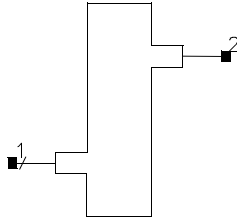

Illustration

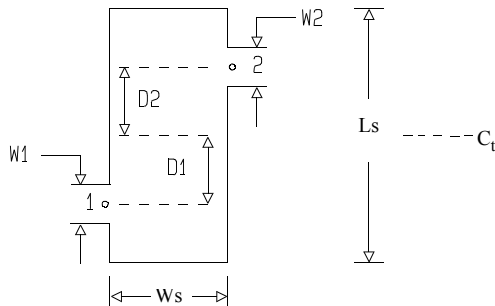

Parameters

Subst = microstrip substrate name

W1 = width of input line, in specified units

D1 = distance between centerlines of input line and stub-pair, in specified units

W2 = width of output line, in specified units

D2 = distance between centerlines of output line and of stub-pair, in specified units

Ws = width of stubs, in specified units

Ls = combined length of stubs, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.01 \leq \frac{W1}{H} \leq 100$$

$$0.01 \leq \frac{W^2}{H} \leq 100$$

$$W_s > 0$$

$$L_s > 0$$

where

H = substrate thickness (from associated Subst)

Notes/Equations/References


1. The frequency-domain analytical model ignores conductor losses, dielectric losses, and metal thickness.
2. A positive (negative) D1 implies that the input line is below (above) the center of the stub-pair.
A positive (negative) D2 implies that the output line is above (below) the center of the stub-pair.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. G. D’Inzeo, F. Giannini, C. Sodi, and R. Sorrentino. “Method of Analysis and Filtering Properties of Microwave Planar Networks,” *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-26, No. 7, July 1978, pp. 467-471.

MSSPLC_MDS (MDS Microstrip Center-Fed Rectangular Spiral Inductor)

Symbol



Illustration

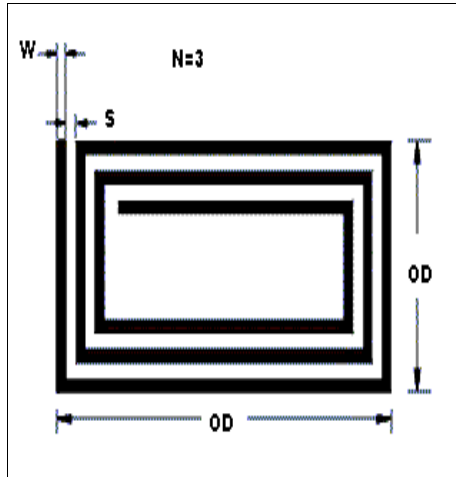

Parameters

Subst = microstrip substrate name

N = number of turns (should be an integer)

W = Conductor width, in specified length units

S = Conductor spacing, in specified length units

OD = Overall dimension, in specified length units

Range of Usage

Following is the recommended range of usage.

$$OD > (2N+1)(W+S)$$

$$Er < 50$$

$$10 H > W > 0.1 H$$

$$10 H > S > 10 H$$

Frequency $< 2 f_0$, where f_0 is the open-circuit resonant frequency of the inductor

$$\text{Frequency (Ghz)} * H \text{ (mm)} \leq 25$$

Notes/Equations/References


1. Noise that is contributed by this component appears in all simulations.
2. H. Wheeler, "Formulas for the Skin Effect", *Proc. IRE*, Vol. 30 Sept. 1941, pp. 412-424

MSSPLR_MDS (MDS Microstrip Round Spiral Inductor)

Symbol



Illustration

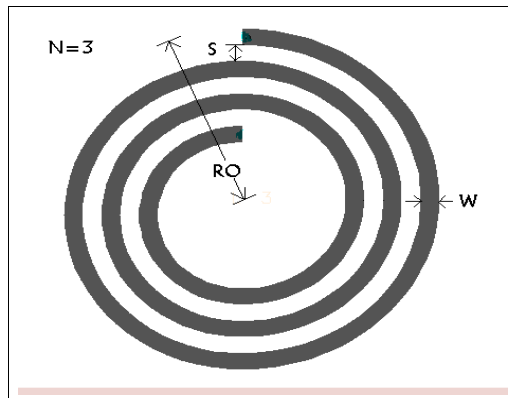

Parameters

Subst = microstrip substrate name

N = number of turns (should be an integer)

W = Conductor width, in specified length units

S = Conductor spacing, in specified length units

RO = Outer Radius, in specified length units

Range of Usage

Following is the recommended range of usage.

$$RO > (N+0.5)(W+S)$$

$$1 < Er < 50$$

$$10 H > W > 0.1 H$$

$$10 H > S > 0.1 H$$

Frequency $< 2 f_0$, where f_0 is the open-circuit resonant frequency of the inductor

$$\text{Frequency (Ghz)} * H \text{ (mm)} \leq 25$$

Notes/Equations/References


1. Noise that is contributed by this component appears in all simulations.
2. H. Wheeler, "Formulas for the Skin Effect", *Proc. IRE*, Vol. 30 Sept. 1941, pp. 412-424

MSSPLS_MDS (MDS Microstrip Side-Fed Rectangular Spiral Inductor)

Symbol



Illustration

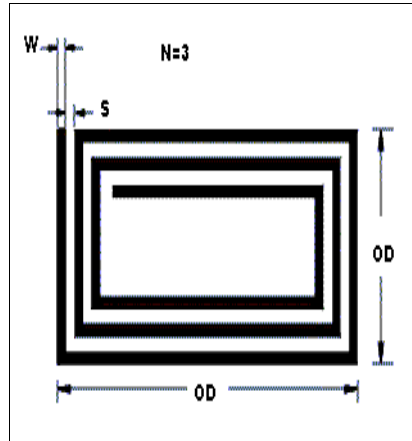

Parameters

Subst = microstrip substrate name

N = number of turns (should be an integer)

W = Conductor width, in specified length units

S = Conductor spacing, in specified length units

OD = Overall dimension, in specified length units

Range of Usage

Following is the recommended range of usage.

$$OD > (2N+1)(W+S)$$

$$Er < 50$$

$$10 H > W > 0.1 H$$

$$10 H > S > 10 H$$

Frequency $< 2 f_0$, where f_0 is the open-circuit resonant frequency of the inductor


$$\text{Frequency (Ghz)} * H \text{ (mm)} \leq 25$$

Notes/Equations/References


1. Noise that is contributed by this component appears in all simulations.
2. H. Wheeler, "Formulas for the Skin Effect", *Proc. IRE*, Vol. 30 Sept. 1941, pp. 412-424

MSTEP (Microstrip Step in Width)

Symbol



Illustration

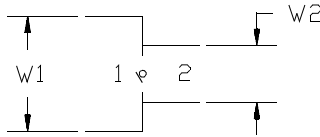

Parameters

Subst = microstrip substrate name

W1 = conductor width at pin 1, in specified units

W2 = conductor width at pin 2, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.1 \leq \frac{W2}{W1} \leq 10$$

where

Er = dielectric constant (from associated Subst)


Notes/Equations/References

1. Although the references listed here have validated the model for $Er \leq 10$, it does not mean that the model is inaccurate for $Er > 10$.
2. The frequency-domain analytical model is derived from a TEM (fundamental mode) planar waveguide model of the discontinuity. In the derivation, the planar waveguide model is transformed into a rectangular waveguide model, and the expression for the series inductance, L_s , is formulated based on an analysis of the current concentration at the discontinuity. This formula is documented in *Handbook of Microwave Integrated Circuits* by R. Hoffman. The reference plane shift, Δl , is calculated based on an analysis of the

scattered electric fields at the front edge of the wider conductor. In addition, dispersion is accounted for in the model.

3. To turn off noise contribution, set Temp to -273.15°C .
4. In layout, MSTEP aligns the centerlines of the strips.
5. Reinmut K. Hoffman, *Handbook of Microwave Integrated Circuits*, Artech House, 1987, pp. 267-309.
6. G. Kompa, "Design of Stepped Microwave Components," *The Radio and Electronic Engineer*, Vol. 48, No. 1/2, January 1978, pp. 53-63.
7. Norbert H. L. Koster and Rolf H. Jansen. "The Microstrip Step Discontinuity: A Revised Description," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT 34, No. 2, February 1986, pp. 213-223 (for comparison only).

Equivalent Circuit

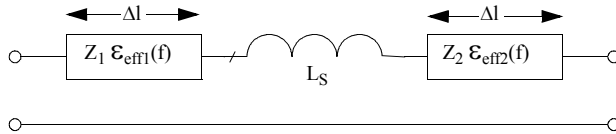


MSUB (Microstrip Substrate)

Symbol

MSub

Illustration

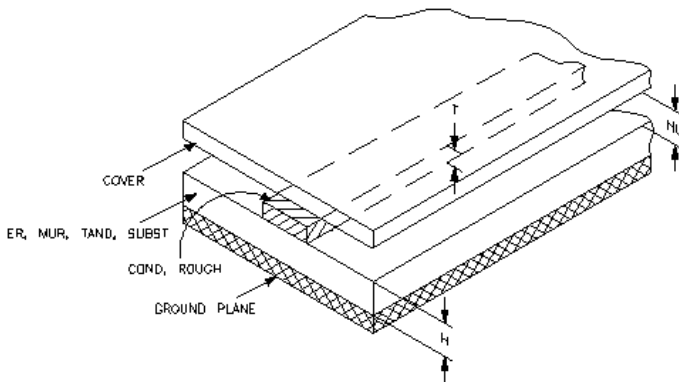

Parameters

H = substrate thickness, in specified units

Er = relative dielectric constant

Mur = relative permeability

Cond = conductor conductivity, in Siemen/meter

Hu = cover height

T = conductor thickness, in specified units

TanD = dielectric loss tangent

Rough = conductor surface roughness, in specified units; RMS value; see note 6

Cond1 = (for Layout option) layer to which *cond* is mapped; default = 1 (cond)

Cond2 = (for Layout option) layer to which *cond2* is mapped; default = 2 (cond2)

Diel1 = (for Layout option) layer to which *diel* is mapped; default = 4 (diel)

Diel2 = (for Layout option) layer to which *diel2* is mapped; default = 12 (diel2)

Hole = (for Layout option) layer to which *hole* is mapped; default = 5 (hole)

Res = (for Layout option) layer to which *hole* is mapped; default = 5 (hole)

Range of Usage

N/A

Notes/Equations/References

1. MSUB is required for all microstrip components.
2. Conductor losses are accounted for when $\text{Cond} < 4.1 \times 10^{17} \text{ S/m}$ and $T > 10^{-9}$. Gold conductivity is $4.1 \times 10^7 \text{ S/m}$. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
3. The parameters Cond1, Cond2, Diel1, Diel2, Hole, and Res control the layer on which the Mask layers are drawn. These are layout-only parameters and are not used by the simulator. Cond1 is the layer on which Metal 1 is drawn; Cond2 is for air-bridges and underpasses; Diel1 is for dielectric capacitive areas; Diel2 is for Via between *cond* and *cond2* mask layers; Hole is for Via layers used for grounding; and Res is for resistive mask layers.
4. Microstrip cover height effect is defined in the Hu parameter. The models MCFIL, MCLIN, MLEF, MLIN, MLOC, and MLSC support microstrip cover effect. The cover effect is not supported for MACLIN and MACLIN3
5. When the Hu parameter of the substrate is less than $100 \times \text{Thickness_of_substrate}$, the impedance calculation will not be properly done if Wall1 and Wall2 are left blank.
6. The microstrip cover uses a perturbational technique based on the assumption that a significant portion of energy is in the substrate between the conductor and the lower ground. It assumes that a microstrip line is beneath it. The microstrip cover (Hu) and the Er parameter were not intended to be used in the limiting case where the configuration of the MLIN with sub and cover converges to a stripline topology.
7. Regarding the Rough parameter, it is used in the following equation in MDS and ADS:

$$\text{Loss_factor} = 1 + (2/\pi) * \text{atan}(\omega * \text{We} * \text{Rough}^2)$$

where atan is arctangent; We is the factor in the surface roughness formula, which is some constant.

$\text{We} = .7 * U_0 * U_r * \sigma$ where

U_0 = magnetic permeability constant

U_r = relative magnetic permeability

σ = conductivity constant (4.1×10^7 for gold)

So if a Rough factor = 0 $\rightarrow \text{atan}(0) = 0 \rightarrow \text{Loss_factor} = 0$.


If a Rough factor = large number $\rightarrow \text{atan}(\text{large number}) = \text{close to } \pi/2 \rightarrow \text{Loss_factor} = 1 + 2/\pi * (\pi/2) = 2$

So Loss_factor = between 1 to 2 for Rough = from 0 to infinity.


8. For the Rough parameter: Hammerstead and Bekkadal, Microstrip Handbook, ELAB report STF44 A74169, page 7.

MSUBST3 (Microstrip Three-Layer Substrate)

Symbol

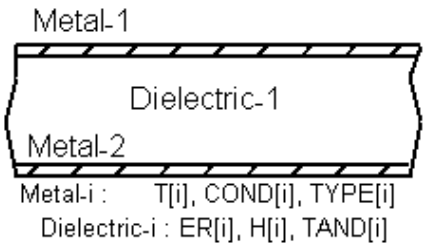

Illustration

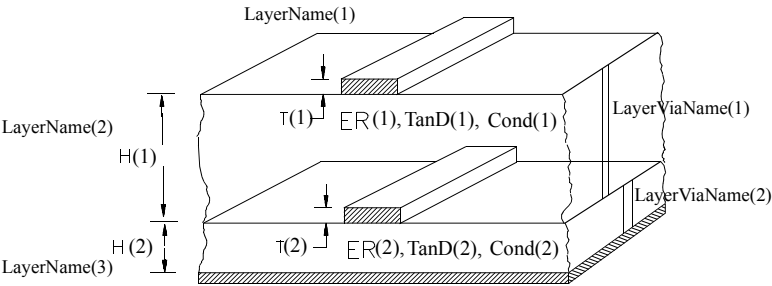

Parameters

- Er[1] = dielectric constant
- H[1] = substrate height, in specified units
- TanD[1] = dielectric loss tangent
- T[1] = conductor thickness, in specified units
- Cond[1] = conductor conductivity, in Siemen/meter
- Er[2] = dielectric constant
- H[2] = substrate height, in specified units
- TanD[2] = dielectric loss tangent
- T[2] = conductor thickness, in specified units

Cond[2] = conductor conductivity, in Siemen/meter

LayerName[1] = (for Layout option) layout layer to which conductors on the top substrate is mapped. Default is *cond*.

LayerName[2] = (for Layout option) layout layer to which conductors on the bottom substrate is mapped. Default is *cond2*.

LayerViaName[1] = (for Layout option) layout layer to which the transition between the bridge/underpass is mapped. Default is *diel2*.

Range of Usage


N/A

Notes/Equations/References


1. MSUBST3 is required for MRINDSBR and MRINDELM components. MSUBST3, which is equivalent to MLSUB3, is not intended for components using a single metal layer. MSUBST3 is intended for MRINDSBR and MRINDELM only and will generate errors if used with other components.
2. Conductor losses are accounted for when $\text{Cond} < 4.1 \times 10^{17} \text{ S/m}$ and $T > 10^{-9}$. Gold conductivity is $4.1 \times 10^7 \text{ S/m}$. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .

MTAPER (Microstrip Width Taper)

Symbol



Illustration

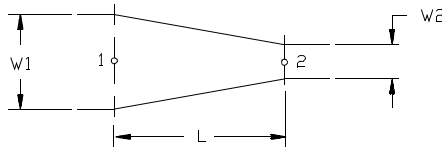

Parameters

Subst = microstrip substrate name

W1 = conductor width at pin 1, in specified units

W2 = conductor width at pin 2, in specified units

L = line length, in specified units

Temp = physical temperature, in °C

Range of Usage

$Er \leq 128$

$0.01 \times H \leq (W1, W2) \leq 100 \times H$

where

Er = dielectric constant (from associated Subst)


H = substrate thickness (from associated Subst)

Notes/Equations/References


1. The frequency-domain analytical model is a microstrip line macro-model developed by Agilent. The taper is constructed from a series of *straight* microstrip sections of various widths that are cascaded together. The microstrip line model is the MLIN model. The number of sections is frequency dependent. Dispersion, conductor loss, and dielectric loss effects are included in the microstrip model.
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

MTEE (Microstrip T-Junction)

Symbol

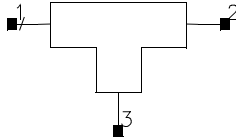

Illustration

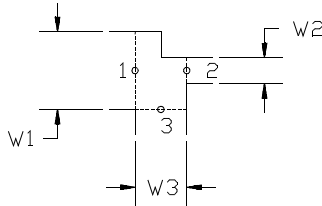

Parameters

Subst = microstrip substrate name

W1 = conductor width at pin 1, in specified units

W2 = conductor width at pin 2, in specified units

W3 = conductor width at pin 3, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.05 \times H \leq W1 \leq 20 \times H$$

$$0.05 \times H \leq W2 \leq 20 \times H$$

$$0.05 \times H \leq W3 \leq 20 \times H$$

$$Er \leq 20$$

$$W_{largest}/W_{smallest} \leq 5$$

where

$W_{largest}$, $W_{smallest}$ are the largest, smallest width among W1, W2, W3

$$f(\text{GHz}) \times H(\text{mm}) \leq 0.4 \times Z0$$


where

Z_0 is the characteristic impedance of the line with W largest

Notes/Equations/References


1. The frequency-domain model is an empirically based, analytical model. The model modifies E. Hammerstad model formula to calculate the Tee junction discontinuity at the location defined in the reference for wide range validity. A reference plan shift is added to each of the ports to make the reference planes consistent with the layout.
2. The center lines of the strips connected to pins 1 and 2 are assumed to be aligned.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. E. Hammerstad, "Computer-Aided Design of Microstrip Couplers Using Accurate Discontinuity Models," *MTT Symposium Digest*, 1981.

Equivalent Circuit

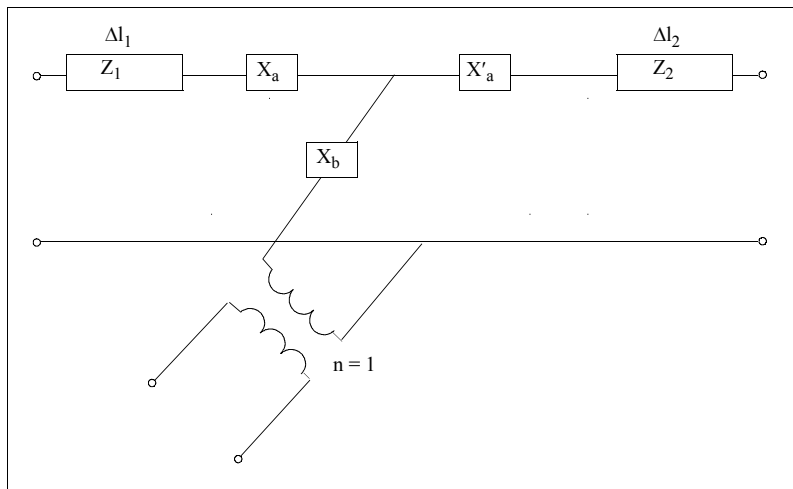


MTEE_ADS (Libra Microstrip T-Junction)

Symbol

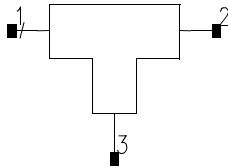

Illustration

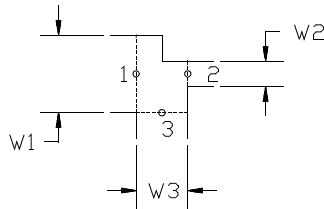

Parameters

Subst = microstrip substrate name

W1 = conductor width at pin 1, in specified units

W2 = conductor width at pin 2, in specified units

W3 = conductor width at pin 3, in specified units

Temp = physical temperature, in °C

Range of Usage

$$W1 + W3 \leq 0.5 \lambda$$

$$W2 + W3 \leq 0.5 \lambda$$

$$0.10 \times H \leq W1 \leq 10 \times H$$

$$0.10 \times H \leq W2 \leq 10 \times H$$

$$0.10 \times H \leq W3 \leq 10 \times H$$

$$\epsilon_r \leq 128$$

where

ϵ_r = dielectric constant (from associated Subst)


H = substrate thickness (from associated Subst)

λ = wavelength in the dielectric

Notes/Equations/References

1. The frequency-domain model is an empirically based, analytical model. The model presented by Hammerstad is used to calculate the discontinuity model at the location defined in the reference. A reference plan shift is then added to each of the ports to make the reference planes consistent with the layout. Dispersion is accounted for in both the reference plan shifts and the shunt susceptance calculations using the formulas of Kirschning and Jansen.
2. The center lines of the strips connected to pins 1 and 2 are assumed to be aligned.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. E. Hammerstad, "Computer-Aided Design of Microstrip Couplers Using Accurate Discontinuity Models," *MTT Symposium Digest*, 1981.
5. M. Kirschning and R. H. Jansen, *Electronics Letters*, January 18, 1982.

Equivalent Circuit

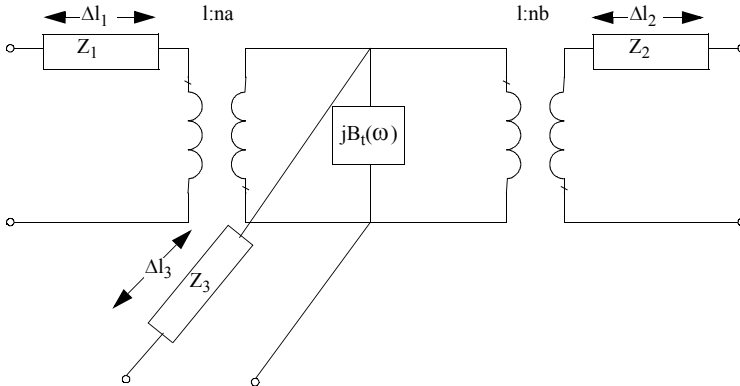

MTFC (Microstrip Thin Film Capacitor)

Symbol





Illustration (Layout):

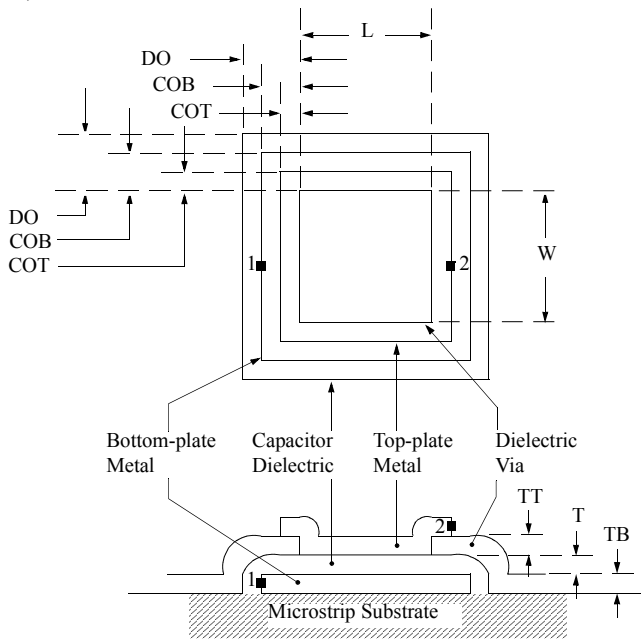

Parameters

Subst = microstrip substrate name

W = dielectric width common to both metal plates, in specified units

L = dielectric length common to both metal plates, in specified units

CPUA = capacitance per unit area, pf/mm²

T = thickness of capacitor dielectric, in specified unit

RsT = sheet resistance of top metal plate, in ohms per square

RsB = sheet resistance of bottom metal plate, in ohms per square

TT = thickness of top metal plate, in specified units

TB = thickness of bottom metal plate, in specified units

COB = bottom conductor overlap, in specified units

Temp = physical temperature, in °C

COT = (for Layout option) top conductor overlap, in specified units

DO = (for Layout option) dielectric overlap, in specified units

Range of Usage

$$0.01 \times H \leq (W + 2.0 \times \text{COB}) \leq 100.0 \times H$$

$$1 \leq \text{Er} \leq 128$$

$$\text{COB} > 0$$

$$T > 0$$

where

H = substrate thickness (from associated Subst)


Er = dielectric constant (from associated Subst)

Notes/Equations/References

1. This is a distributed MIM capacitor model based on the coupled-transmission-line approach. The conductor loss for both metal plates is calculated from the sheet resistance (skin-effect is not modeled.) The dielectric loss is calculated from the loss tangent. (The TanD specification applies to the dielectric between the two metal plates and not to the MSUB substrate.) Coupling capacitance from both metal plates to the ground plane is accounted for.
2. Thickness of the dielectric T is required for calculating the mutual coupling between the two metal plates. Thickness of the two metal plates, TT and TB, are used for calculating microstrip parameters.
3. The model does not include a connection (such as an air-bridge) from the top metal (pin 2) to the connecting transmission line. It must be included separately by the user for simulation as well as layout purposes.
4. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
5. To turn off noise contribution, set Temp to -273.15°C.


6. In the layout, the top metal will be on layer *cond2*, the bottom metal on layer *cond*, the capacitor dielectric on layer *diel*, and the dielectric via layer on layer *diel2*.
7. J. P. Mondal, An Experimental Verification of a Simple Distributed Model of MIM Capacitors for MMIC Applications, *IEEE Transactions on Microwave Theory Tech.*, Vol. MTT-35, No.4, pp. 403-408, April 1987.

Equivalent Circuit

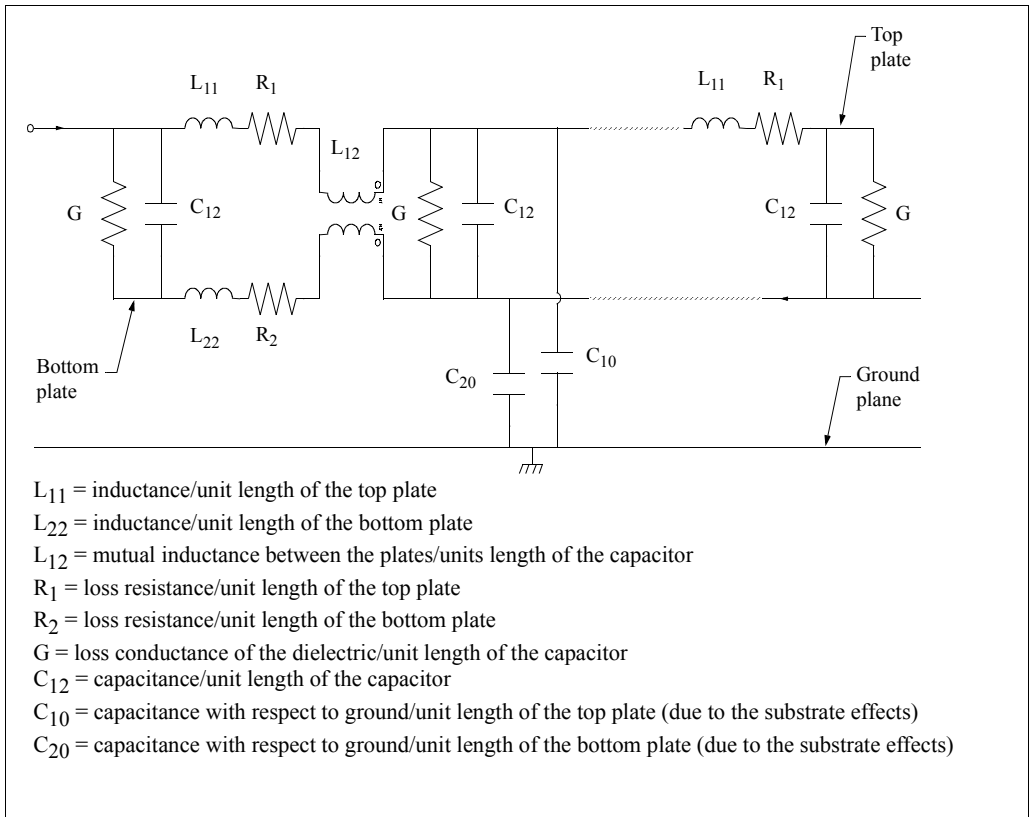


RIBBON (Ribbon)

Symbol



Illustration

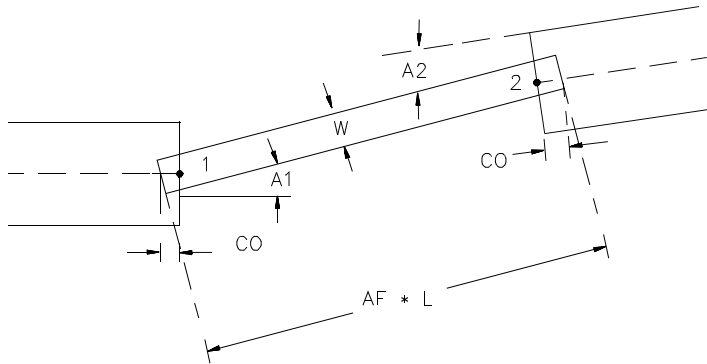

Parameters

W = conductor width, in specified units

L = conductor length, in specified units

Rho = metal resistivity (relative to gold)

Temp = physical temperature, in °C

AF = (for Layout option) arch factor; ratio of distance between bond points to actual ribbon length

CO = (for Layout option) conductor overlap; distance from edge connector

A1 = (for Layout option) angle of departure from first pin

A2 = (for Layout option) angle of departure from second pin

BandLayer = (for Layout option) layer on which the wire/ribbon is drawn; default = 6 (bond)


Range of Usage

N/A

Notes/Equations/References

1. Although this component is included in the *Microstrip Components* library, it does not use a microstrip substrate (MSUB).
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. To turn off noise contribution, set Temp to -273.15°C .
4. The ribbon *bond* layer to the *conductor* layer transition is drawn on the *diel2* layer. The width of the *diel2* layer is CO, the conductor offset. If CO is 0, the transition is drawn as a zero width polygon. The transition is only for layout purposes and is not taken into account in the circuit simulator.

Equivalent Circuit



TFC (Thin Film Capacitor)

Symbol





Illustration (Layout):

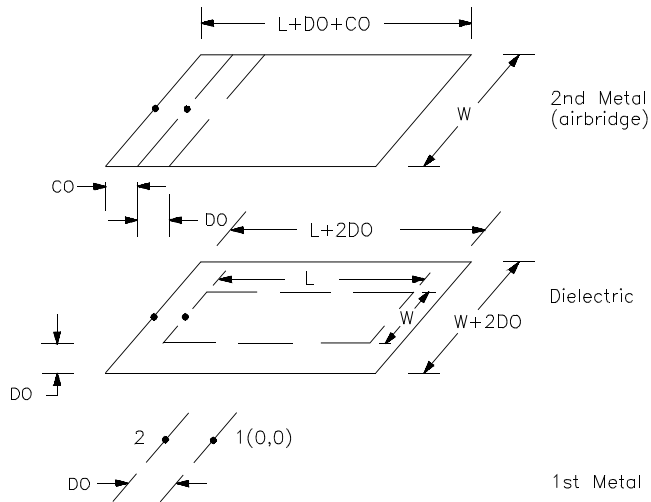

Parameters

W = conductor width, in specified units

L = conductor length, in specified units

T = dielectric thickness, in specified units

Er = relative dielectric constant

Rho = metal resistivity of conductor (relative to gold)

TanD = dielectric loss tangent value

Temp = physical temperature, in °C

CO = (for Layout option) conductor overlap

DO = (for Layout option) dielectric overlap

Diellayer = (for Layout option) layer on which the dielectric is drawn;
default = 4 (diel)

Cond2Layer = (for Layout option) layer on which the airbridge is drawn; default = 2(cond2)


Range of Usage

N/A


Notes/Equations/References

1. The frequency-domain analytical model is a series R-C, lumped component network. The conductor losses with skin effect and dielectric losses are modeled by the series resistance. The parallel plate capacitance is modeled by the series capacitance.
2. Although this component is included in the *Microstrip Components* library, it does not use a microstrip substrate (MSUB).
3. For a distributed model, use MTFC instead of TFC.
4. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
5. To turn off noise contribution, set Temp to -273.15°C .
6. Pins 1 and 2 are on the mask layer *cond* for primary metallization. The top of the capacitor is formed on the *cond2* layer, with the conductor overlapping the connecting line at pin 2 by CO.
7. K. C. Gupta, R. Garg, R. Chadha, *Computer-Aided Design of Microwave Circuits*, Artech House, 1981, pp. 213-220.

Equivalent Circuit

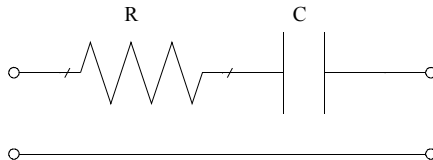

Additional Illustration

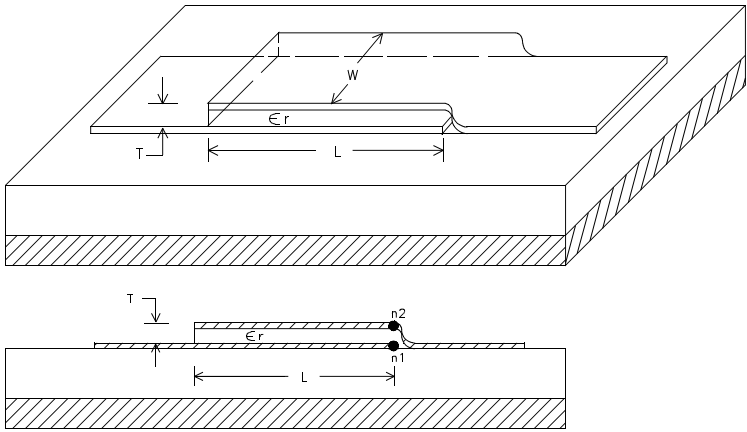


TFR (Thin Film Resistor)

Symbol



Illustration

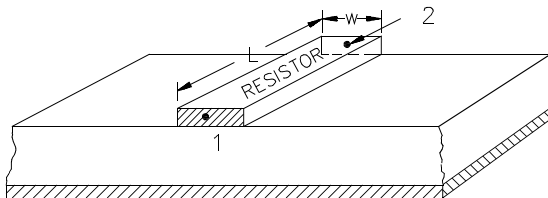

Parameters

Subst = microstrip substrate name

W = conductor width, in specified units

L = conductor length, in specified units

Rs = sheet resistivity, in ohms/square

Freq = frequency for scaling sheet resistivity, in hertz

Temp = physical temperature, in °C

CO = (for Layout option) conductor offset; in specified units

Range of Usage

$$0.01 \times H \leq W \leq 100 \times H$$

where

H = substrate thickness (from associated Subst)

Notes/Equations/References

1. The frequency-domain analytical model is a lossy microstrip line model developed by Agilent. The microstrip line model is based on the formula of Hammerstad and Jensen. Conductor loss with skin effect is included; however, dispersion, dielectric loss and thickness correction are not included.
2. If Freq is set to a value other than zero, then Rs is scaled with frequency as follows:


$$R_s(f) = R_s(\text{Freq}) \times \sqrt{f/\text{Freq}} \quad (\text{for microstrip})$$

If $\text{Freq}=0$, then R_s is constant with respect to frequency. Setting $\text{Freq}=0$ is correct in most cases.


3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. E. Hammerstad and O. Jensen, "Accurate Models for Microstrip Computer-Aided Design," *MTT Symposium Digest*, 1980, pp. 407-409.

VIA (Tapered Via Hole in Microstrip)

Symbol



Illustration

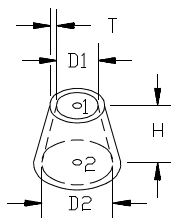

Parameters

D1 = diameter at pin 1, in specified units

D2 = diameter at pin 2, in specified units

H = substrate thickness, in specified units

T = conductor thickness, in specified units

W = (for Layout option) width of conductor attached to via hole, in specified units

Cond1Layer = (for Layout option) layer on which pin 1's transitional metal is drawn; default = 1 (cond)

HoleLaye = (for Layout option) layer on which the Via-hole is drawn; default=5(hole)

Cond2Layer = (for Layout option) layer on which pin 1's transitional metal is drawn; default=2 (cond2)

Range of Usage

$H \leq 2 \times (\text{greater of } D1 \text{ or } D2)$

$H \ll \lambda$

λ = wavelength in the dielectric

Notes/Equations/References


1. The frequency-domain analytical model is a series, lumped inductance as shown in the symbol. Conductor and dielectric losses are not modeled. The model was developed by Vijai K. Tripathi for Agilent.
2. In addition to the two circles on the conducting layers, the artwork includes a circle for the via-hole on the hole layer. The diameter for the via-hole is set by D1, the diameter at pin 1.
3. Although this component is included in the Microstrip Components library, it does not use a microstrip substrate (MSUB).

VIA2 (Cylindrical Via Hole in Microstrip)

Symbol



Illustration

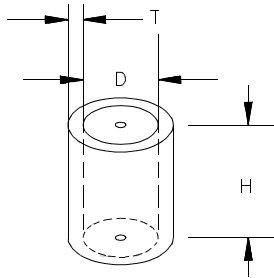

Parameters

D = diameter at pin 1, in specified units

H = substrate thickness, in specified units

T = conductor thickness, in specified units

W = (for Layout option) width of conductor attached to via hole, in specified units

Temp = physical temperature, in °C

Cond1Layer = (for Layout option) layer on which the bottom transitional metal is drawn; default = 1 (cond)

HoleLaye = (for Layout option) layer on which the Via-hole is drawn; default=5(hole)

Cond2Layer = (for Layout option) layer on which the top transitional metal is drawn; default=2 (cond2)

Range of Usage

$$100 \mu\text{M} < H < 635 \mu\text{M}$$

$$0.2 < \frac{D}{H} < 1.5$$

$$0 \leq T < \frac{D}{2}$$

$$1 < \frac{W}{H} < 2.2$$

$$W > D$$

$$2.2 < \epsilon_r < 20$$

where

ϵ_r = dielectric constant (from associated Subst)

H = substrate thickness


T = conductor thickness

Notes/Equations/References

1. The frequency-domain analytical model is a series R-L, lumped component network as shown in the symbol. The model equations are based on the numerical analysis and formula of Goldfarb and Pucel. The conductor loss with skin effect is included in the resistance calculation. The model equations provide a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is not included in the model.
2. Although this component is included in the *Microstrip Components* library, it does not use a microstrip substrate (MSUB).
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. To turn off noise contribution, set Temp to -273.15°C .
5. M. Goldfarb and R. Pucel. "Modeling Via Hole Grounds in Microstrip," *IEEE Microwave and Guided Wave Letters*, Vol. 1, No. 6, June 1991, pp. 135-137.

VIAFC (Via with Full-Circular Pads)

Symbol



Parameters

D = Diameter of via hole

ViaType = Type of via drilled hole (blind or thruhole); default = blind

T = Conductor thickness

Dpad1 = (for Layout only) Width of pad at pin 1

Dpad2 = (for Layout only) Width of pad at pin 2

Angle = (for Layout only) Angle between pads

Cond1Layer = (for Layout only) Layer on which the pad at pin 1 is drawn; default = cond1

HoleLayer = (for Layout only) Layer on which the via hole is drawn, default = hole

Cond2Layer = (for Layout only) Layer on which the pad at pin 2 is drawn, default = cond2

StartLayer = (for Layout only) Start layer for blind hole type via

StopLayer = (for Layout only) Stop layer for blind hole type via

Range of Usage

$H \leq 2 \times D$

$H < \lambda$ where λ is wavelength in the dielectric


$D_{pad1} > D$

$D_{pad2} > D$

Notes


1. This via is similar to VIASC except that the pads are complete circles.
2. Electrical model for this via is the same as for VIA in the ADS-equivalent.

3.

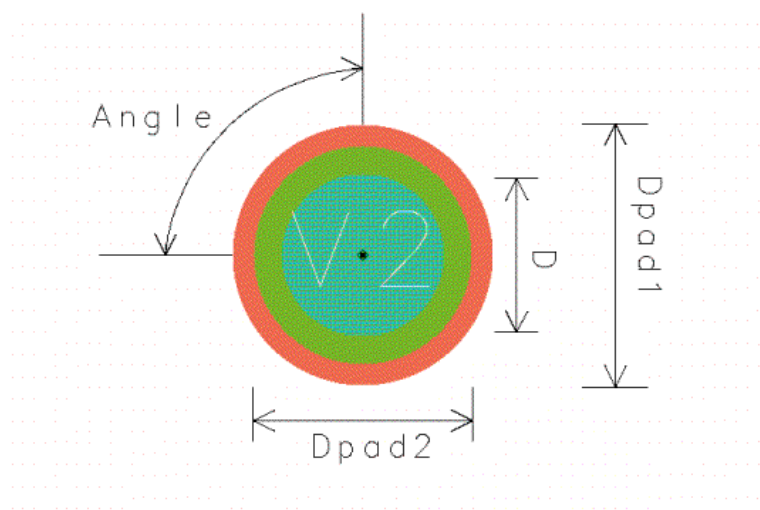

VIAHS (Via with Half-Square Pads)

Symbol



Parameters

D = Diameter of via hole

H = Substrate thickness

T = Conductor thickness

Dpad1 = (for Layout only) Width of pad at pin 1

Dpad2 = (for Layout only) Width of pad at pin 2

Angle = (for Layout only) Angle between pads

Cond1Layer = (for Layout only) Layer on which the pad at pin 1 is drawn; default = cond1

HoleLayer = (for Layout only) Layer on which the via hole is drawn, default = hole

Cond2Layer = (for Layout only) Layer on which the pad at pin 2 is drawn, default = cond2

StartLayer = (for Layout only) Start layer for blind hole type via

StopLayer = (for Layout only) Stop layer for blind hole type via

Range of Usage

$$H \leq 2 \times D$$

$$H < \lambda \text{ where } \lambda \text{ is wavelength in the dielectric}$$


$$D_{\text{pad1}} > D$$

$$D_{\text{pad2}} > D$$

Notes


1. This via is similar to the existing VIA component in the ADS-equivalent RF library; but it is more flexible in that the widths of the pads can be different and their orientations can be of arbitrary angles.
2. Electrical model for this via is the same as for VIA in the ADS-equivalent.

3.

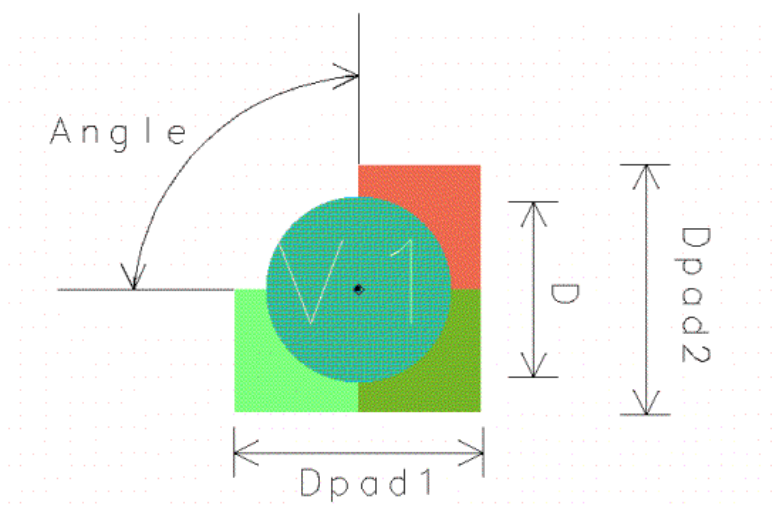

VIAQC (Via with Quasi-Circular Pads)

Symbol



Parameters

D = Diameter of via hole

H = Substrate thickness

T = Conductor thickness

W1 = (for Layout only) Width of transmission line connected to pin 1

W2 = (for Layout only) Width of transmission line connected to pin 2

Dpad1 = (for Layout only) Diameter of pad at pin 1

Dpad2 = (for Layout only) Diameter of pad at pin 2

Angle = (for Layout only) Angle between pads

Cond1Layer = (for Layout only) Layer on which the pad at pin 1 is drawn; default = cond1

HoleLayer = (for Layout only) Layer on which the via hole is drawn, default = hole

Cond2Layer = (for Layout only) Layer on which the pad at pin 2 is drawn, default = cond2

StartLayer = (for Layout only) Start layer for blind hole type via

StopLayer = (for Layout only) Stop layer for blind hole type via

Range of Usage

$H \leq 2 \times D$

$H < \lambda$ where λ is wavelength in the dielectric


$D_{pad1} > D, W1$

$D_{pad2} > D, W2$

Notes


1. This via is similar to VIAHS but the pads are circles with one side being cutoff by the connecting transmission lines.
2. Electrical model for this via is the same as for VIA in the ADS-equivalent

3.

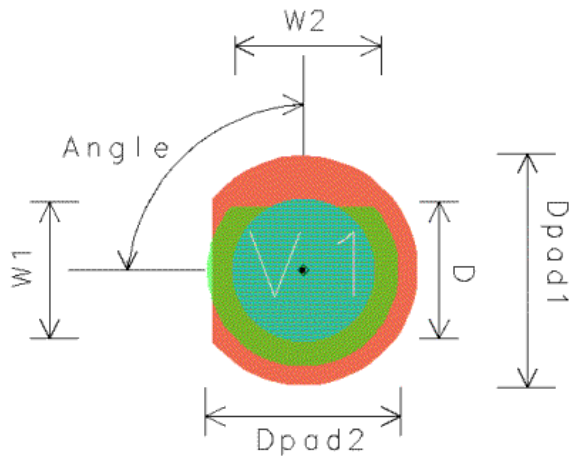

VIASC (Via with Semi-Circular Pads)

Symbol



Parameters

D = Diameter of via hole

H = Substrate thickness

T = Conductor thickness

Dpad1 = (for Layout only) Width of pad at pin 1

Dpad2 = (for Layout only) Width of pad at pin 2

Angle = (for Layout only) Angle between pads

Cond1Layer = (for Layout only) Layer on which the pad at pin 1 is drawn; default = cond1

HoleLayer = (for Layout only) Layer on which the via hole is drawn, default = hole

Cond2Layer = (for Layout only) Layer on which the pad at pin 2 is drawn, default = cond2

StartLayer = (for Layout only) Start layer for blind hole type via

StopLayer = (for Layout only) Stop layer for blind hole type via

Range of Usage

$$H \leq 2 \times D$$

$$H < \lambda \text{ where } \lambda \text{ is wavelength in the dielectric}$$


$$D_{\text{pad1}} > D$$

$$D_{\text{pad2}} > D$$

Notes


1. This via is similar to VIAHS but the pads are circles with one side being cutoff by the connecting transmission lines.
2. Electrical model for this via is the same as for VIA in the ADS-equivalent RF library.

3.

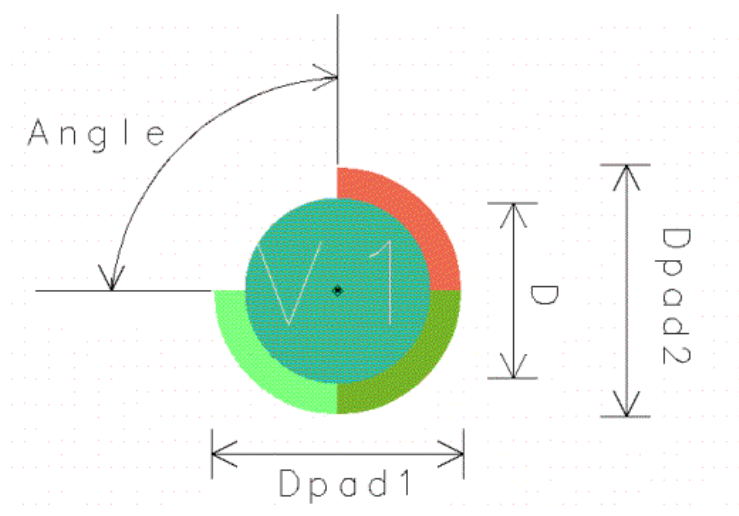

VIASSTD (Via with Smooth Tear Drop Pads)

Symbol



Parameters

D = Diameter of via hole

H = Substrate thickness

T = Conductor thickness

W1 = (for Layout only) Width of transmission line connected to pin 1

W2 = (for Layout only) Width of transmission line connected to pin 2

L1 = (for Layout only) Length of tear drop from via hole center to pin 1

L2 = (for Layout only) Length of tear drop from via hole center to pin 2

Dpad1 = (for Layout only) Diameter of pad at pin 1

Dpad2 = (for Layout only) Diameter of pad at pin 2

Angle = (for Layout only) Angle between pads

Cond1Layer = (for Layout only) Layer on which the pad at pin 1 is drawn; default = cond1

HoleLayer = (for Layout only) Layer on which the via hole is drawn, default = hole

Cond2Layer = (for Layout only) Layer on which the pad at pin 2 is drawn, default = cond2

StartLayer = (for Layout only) Start layer for blind hole type via

StopLayer = (for Layout only) Stop layer for blind hole type via

Range of Usage

$H \leq 2 \times D$

$H < \lambda$, where λ is wavelength in the dielectric

$D_{pad1} > D, W1$


$D_{pad2} > D, W2$

$L1 > 0.5 \times D_{pad1}$

$L2 > 0.5 \times D_{pad2}$


Notes

1. This via is similar to VIATDD but the pads have smooth tear drop shapes. The tear drops are tangential to the connecting transmission lines.
2. Electrical model for this via is the same as for VIA in the ADS-equivalent RF library.
- 3.

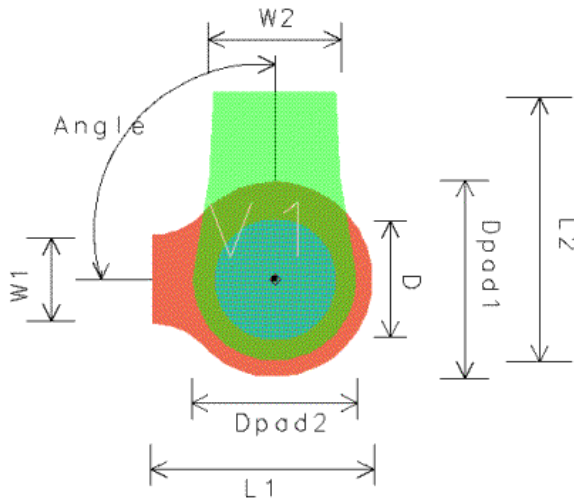

VIATTD (Libra Via Hole in Microstrip with Tear Drop Pads)

Symbol



Parameters

D = Diameter of via hole

H = Substrate thickness

T = Conductor thickness

W1 = (for Layout only) Width of transmission line connected to pin 1

W2 = (for Layout only) Width of transmission line connected to pin 2

L1 = (for Layout only) Length of tear drop from via hole center to pin 1

L2 = (for Layout only) Length of tear drop from via hole center to pin 2

Dpad1 = (for Layout only) Diameter of pad at pin 1

Dpad2 = (for Layout only) Diameter of pad at pin 2

Angle = (for Layout only) Angle between pads

Cond1Layer = (for Layout only) Layer on which the pad at pin 1 is drawn; default = cond1

HoleLayer = (for Layout only) Layer on which the via hole is drawn, default = hole

Cond2Layer = (for Layout only) Layer on which the pad at pin 2 is drawn, default = cond2

StartLayer = (for Layout only) Start layer for blind hole type via

StopLayer = (for Layout only) Stop layer for blind hole type via

Range of Usage

$H \leq 2 \times D$

$H < \lambda$, where λ is wavelength in the dielectric

$D_{pad1} > D, W1$


$D_{pad2} > D, W2$

$L1 > 0.5 \times D_{pad1}$

$L2 > 0.5 \times D_{pad2}$

Notes

1. This via is similar to VIAHS but the pads have triangular tear drop shapes. The tear drops are not tangential to the connecting transmission lines.
2. Electrical model for this via is the same as for VIA in the ADS-equivalent RF library.
- 3.

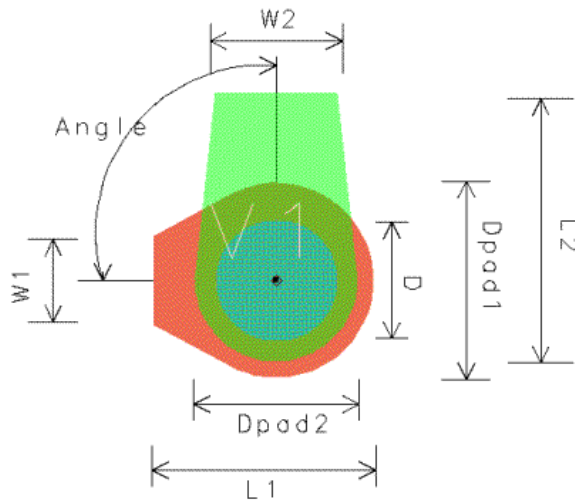


WIRE (Round Wire)

Symbol



Illustration

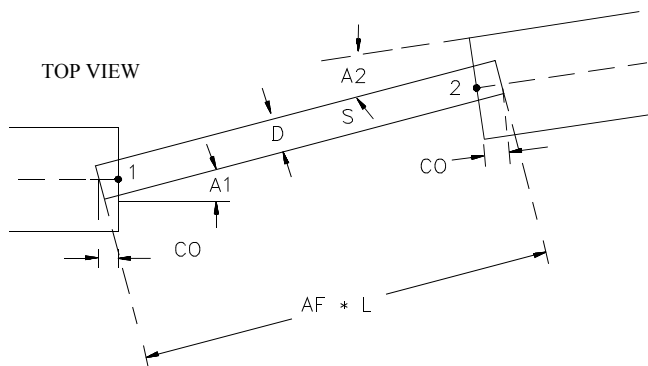

Parameters

D = wire diameter, in specified units

L = wire length, in specified units

Rho = metal resistivity (relative to gold)

Temp = physical temperature, in °C

AF = (for Layout option) arch factor; ratio of distance between two pins to wire length

CO = (for Layout option) conductor offset; distance from edge of conductor

A1 = (for Layout option) angle of departure from first pin

A2 = (for Layout option) angle between direction of first and second pins

BondLayer = (for Layout option) layer on which the wire/ribbon is drawn; default=6 (bond)


Range of Usage

N/A

Notes/Equations/References

1. Although this component is included in the *Microstrip Components* library, it does not use a microstrip substrate (MSUB).
2. Wire and Ribbon components serve as air bridges that are parallel to the surface of the substrate. This provides a way to connect the center of MRIND, MRINDNBR, and MSIND components.
3. Bulk resistivity of gold is used for $Rho = 2.44$ microhm-cm.
4. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
5. To turn off noise contribution, set Temp to -273.15°C .
6. The wire *bond* layer to the *conductor* layer transition is drawn on the *diel2* layer. The width of the *diel2* layer is CO, the conductor offset. If CO is zero, the transition is drawn as a zero width polygon. The transition is only for layout purposes and is not taken into account in the circuit simulator.

Equivalent Circuit



Chapter 3: Multilayer Interconnects


Following is a description of the differences between the Multilayer library and the Printed Circuit Board library, which is documented in Chapter 8.

The PCB library was originally developed at the University of Oregon, and was integrated into EEsof's Libra program in 1992. This library is based on a finite difference method of solving a Poisson equation. It requires the structure to be enclosed in a metal box. It assumes zero-thickness metal. Metal loss is calculated based on Zs. It also requires the dielectric to be uniform. It is included with the purchase of ADS.

The multilayer library was first integrated into MDS in 1994. It is based on method of moments and Green's function method. It handles arbitrary dielectric layers and arbitrary metal thickness. Skin effect resistance matrix is calculated numerically. It has structures such as coupled tapers, coupled bends, coupled cross-overs, and coupled slanted lines. It can be purchased from Agilent as an optional feature.

COMBINE2ML (Combine 2 Coupled-Line Components)

Symbol



Parameters

Coupled[1] = first component to be combined

Coupled[2] = second component to be combined


S = spacing between Coupled[1] and Coupled[2]

Range of Usage

N/A


Notes/Equations/References

- 1. Combining coupled-line components allows you to create a component of more coupled lines by combining several individual components into a single component. For example, to create 20 coupled lines, you can combine two 10-line components. Or, use them to combine small sets of lines instead of reinserting components with a greater number of lines.
- 2. You can combine coupled lines of constant width and spacing, coupled lines with varying width and spacing, and coupled pads and lines. The components to be combined must refer to the same substrate, be parallel, and be of the same length.

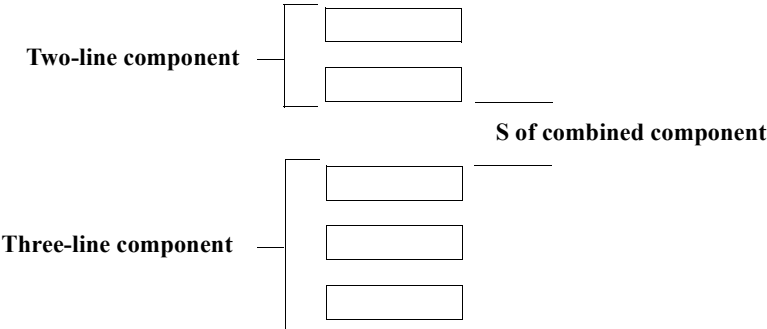

COMBINE3ML (Combine 3 Coupled-Line Components)

Symbol



Parameters

Coupled[1] = first component to be combined

Coupled[2] = second component to be combined

Coupled[3] = third component to be combined

S[1] = spacing between Coupled[1] and Coupled[2]

S[2] = spacing between Coupled[2] and Coupled[3]

Range of Usage


N/A

Notes/Equations/References

1. Combining coupled-line components allows you to create a component of more coupled lines by combining several individual components into a single component. For example, to create 20 coupled lines, you can combine two 10-line components. Or, use them to combine small sets of lines instead of reinserting components with a greater number of lines.
2. You can combine coupled lines of constant width and spacing, coupled lines with varying width and spacing, and coupled pads and lines. The components to be combined must refer to the same substrate, be parallel, and be of the same length.

COMBINE4ML (Combine 4 Coupled-Line Components)

Symbol



Parameters

Coupled[1] =first component to be combined

Coupled[2] =second component to be combined

Coupled[3] =third component to be combined

Coupled[4] =fourth component to be combined

S[1] =spacing between Coupled[1] and Coupled[2]

S[2] =spacing between Coupled[2] and Coupled[3]

S[3] =spacing between Coupled[3] and Coupled[4]

Range of Usage


N/A

Notes/Equations/References

1. Combining coupled-line components allows you to create a component of more coupled lines by combining several individual components into a single component. For example, to create 20 coupled lines, you can combine two 10-line components. Or, use them to combine small sets of lines instead of reinserting components with a greater number of lines.
2. You can combine coupled lines of constant width and spacing, coupled lines with varying width and spacing, and coupled pads and lines. The components to be combined must refer to the same substrate, be parallel, and be of the same length.

COMBINE5ML (Combine 5 Coupled-Line Components)

Symbol



Parameters

Coupled[1] =first component to be combined

Coupled[2] =second component to be combined

Coupled[3] =third component to be combined

Coupled[4] =fourth component to be combined

Coupled[5] =fifth component to be combined

S[1] =spacing between Coupled[1] and Coupled[2]

S[2] =spacing between Coupled[2] and Coupled[3]

S[3] =spacing between Coupled[3] and Coupled[4]

S[4] =spacing between Coupled[4] and Coupled[5]

Range of Usage

N/A

Notes/Equations/References


1. Combining coupled-line components allows you to create a component of more coupled lines by combining several individual components into a single component. For example, to create 20 coupled lines, you can combine two 10-line components. Or, use them to combine small sets of lines instead of reinserting components with a greater number of lines.
2. You can combine coupled lines of constant width and spacing, coupled lines with varying width and spacing, and coupled pads and lines. The components to be combined must refer to the same substrate, be parallel, and be of the same length.

Coupled Lines, Constant Width & Spacing

ML1CTL_C to ML8CTL_C (1-8 Coupled Lines, Constant Width & Spacing)

ML16CTL_C (16 Coupled Lines, Constant Width & Spacing)

Symbol

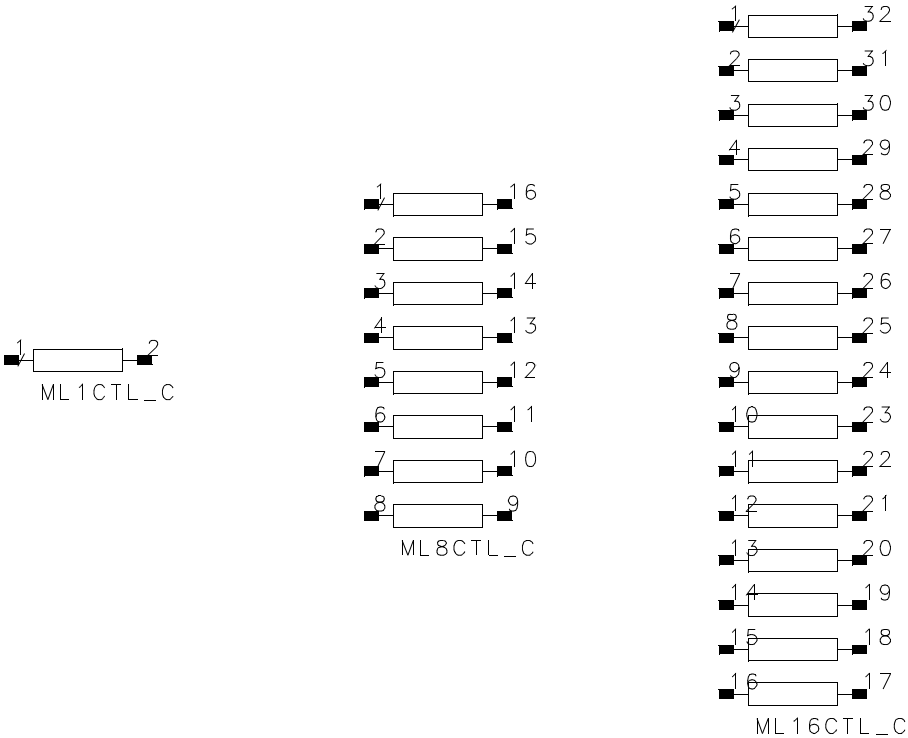

Parameters

Subst =substrate name

Length =line length, in specified units

W =width of conductors, in specified units

S = spacing; default: 5.0 mil; also um mm, cm, meter, in

Layer =layer number of conductor (value type: integer)

RLGC_File = name of RLGC file

Reuse RLGC = yes to reuse the RLGC matrices stored in RLGC_File; no to not reuse. See Note 5.

Side = (for Layout option) top or bottom; specify side or board to place instance

Range of Usage

$W > 0$

$S > 0$


Notes/Equations/References

1. Dispersion due to skin effect and dielectric loss is calculated. Dispersion due to inhomogeneous dielectrics is not considered.
2. These models are implemented as the numerical solution of Maxwell's Equations for the two-dimensional cross-section geometry that is defined by the model parameters. Because a new numerical computation is performed for each unique set of geometric or material parameters, the evaluation of these models may take a few seconds on some platforms. One effect of this implementation is that optimization of any set of the geometric or material parameters for these models may result in a time-consuming analysis. Only one numerical computation is required for an analysis that is only swept with respect to frequency. The evaluation time for this model is significantly reduced for conductors of 0 thickness.
3. Conductor loss (and its contribution to noise) is *not* considered if conductivity is infinite or conductor thickness is 0.
4. A substrate must be named as the *Subst* parameter and a multilayer interconnect substrate definition that corresponds to this name must appear on the schematic.
5. If *Reuse_RLGC* is set to *yes*, the RLGC matrices will be read from the file stored on your disk. If you have changed the substrate parameters or transition parameters, setting *Reuse_RLGC* to *yes* will cause invalid results. In most cases, a setting of *no* is recommended. In cases in which you know that the substrate and transmission parameters are fixed in your simulation, you can set *Reuse_RLGC* to *yes* to save some computer time, as the RLGC matrices will not be re-computed.

Coupled Lines, Variable Width & Spacing

ML2CTL_V to ML10CTL_V (2 to 10 Coupled Lines, Variable Width & Spacing)

Symbol

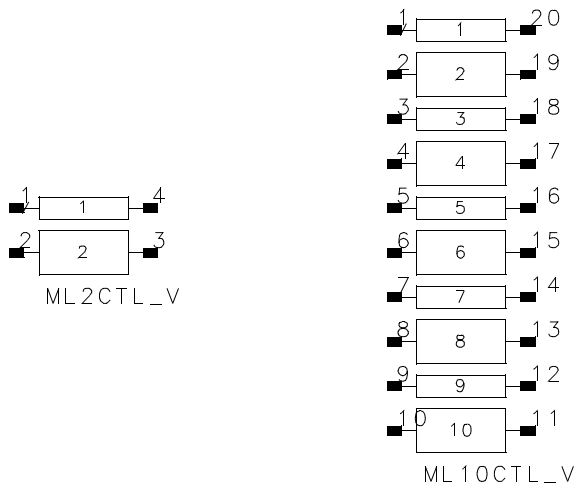

Parameters


- Subst =substrate name
- Length =length, in specified units
- W[i] =width of ith conductor, in specified units
- S(i) = spacing between ith and (i+1)th conductors, in specified units. See note 5.
- Layer(i) =layer number of conductor (value type: integer)
- RLGC_File = name of RLGC file
- Reuse RLGC = yes to reuse the RLGC matrices stored in RLGC_File; no to not reuse. See Note 5.
- Side = (for Layout option) top or bottom; specify side or board to place instance

Range of Usage

- Length > 0
- W > 0

Notes/Equations/References

1. Dispersion due to skin effect and dielectric loss is calculated. Dispersion due to inhomogeneous dielectrics is not considered.
2. These models are implemented as the numerical solution of Maxwell's Equations for the two-dimensional cross-section geometry that is defined by the model parameters. Because a new numerical computation is performed for each unique set of geometric or material parameters, the evaluation of these models may take a few seconds on some platforms. One effect of this implementation is that optimization of any set of the geometric or material parameters for these models may result in a time-consuming analysis. Only one numerical computation is required for an analysis that is only swept with respect to frequency. The evaluation time for this model is significantly reduced for conductors of 0 thickness.
3. Conductor loss (and its contribution to noise) is not considered if conductivity is infinite or conductor thickness is 0.
4. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must be placed in the schematic.
5. If Reuse_RLGC is set to *yes*, the RLGC matrices will be read from the file stored on your disk. If you have changed the substrate parameters or transition parameters, setting Reuse_RLGC to *yes* will cause invalid results. In most cases, a setting of *no* is recommended. In cases in which you know that the substrate and transmission parameters are fixed in your simulation, you can set Reuse_RLGC to *yes* to save some computer time, as the RLGC matrices will not be re-computed.
6. Spacing $S[i]$ is measured from the right edge of the i th conductor to the left edge of $(i+1)$ th conductor. If $(i+1)$ th conductor overlays with i th conductor, $S[i]$ will be negative, as illustrated.

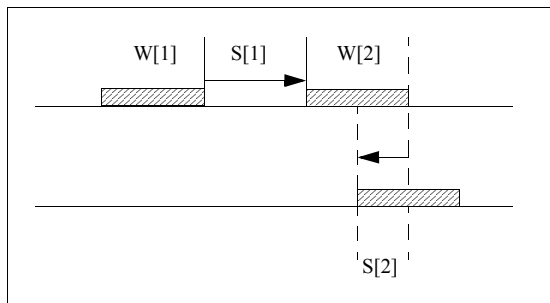

MLACRNR (190-degree Corner, Changing Width)

Symbol



Parameters

Subst =substrate name

W1 =width on one side, in specified units

W2 =width on the other side, in specified units

Layer =layer number of conductor (value type: integer)

Range of Usage

$W1 > 0$

$W2 > 0$

Notes/Equations/References


1. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.

Coupled 90-degree Corners, Changing Pitch

MLACRNR2 to MLACRNR8 (2 to 8 Coupled 90-degree Corners, Changing Pitch)

MLACRNR16 (16 Coupled 90-degree Corners, Changing Pitch)

Symbol

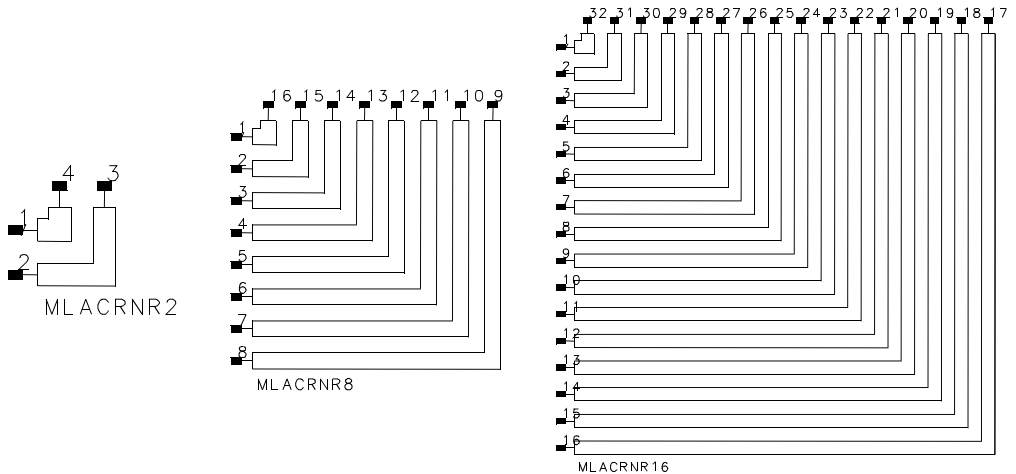

Parameters

Subst =substrate name

W1 =conductor width on one side, in specified units

S1 =conductor spacing on one side, in specified units

W2 =conductor width on the other side, in specified units

S2 =conductor spacing on the other side, in specified units

Layer =layer number of conductor (value type: integer)

Range of Usage

$W1 > 0$

$W2 > 0$

Notes/Equations/References

1. Coupled line corners are modeled as staggered coupled lines. The discontinuity effect of corners is not modeled.

2. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.

MLCLE (Via Clearance)

Symbol



Parameters

Subst =substrate name

DiamClear =clearance diameter, in specified units

DiamPad =pad diameter, in specified units

Layer =layer number of the clearance (value type: integer)

Range of Usage

DiamClear > 0


DiamPad > 0


DiamClear > DiamPad

Notes/Equations/References

1. This component is modeled as a capacitor to ground.
2. A substrate must be named in the Subst field and a multilayer substrate definition that corresponds to this name must appear on the circuit page.
3. A via clearance must be located on a ground layer or a power layer. The pins of MLCLE should be connected to the pins of MLVIAHOLE. MLCLE models the parasitic capacitance between the via hole and the power/ground plane on which MLCLE is located.

4. Circuit Using Via Components to create a Path to Multiple Board Layers

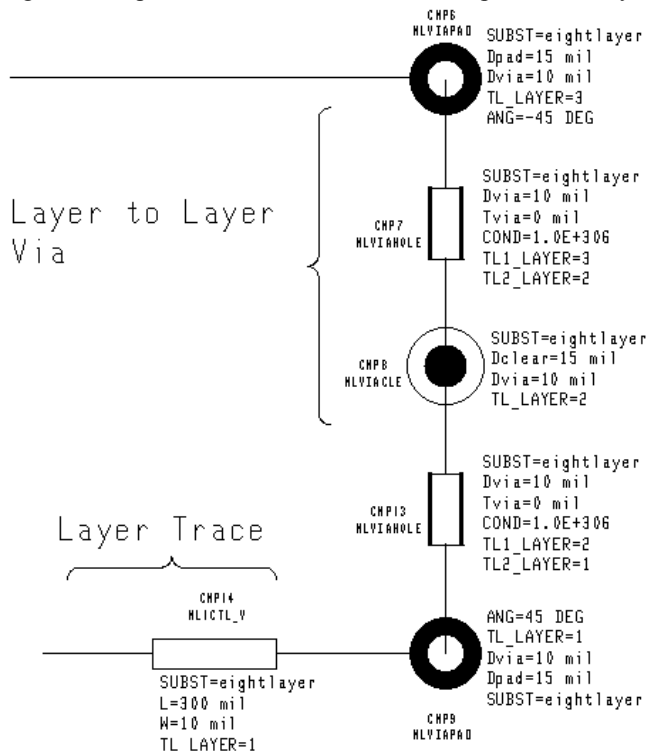

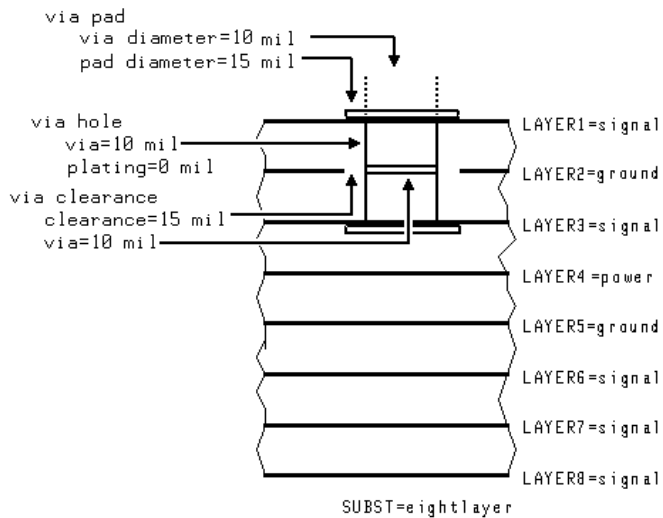


Coupled Angled Corners, Constant Pitch

MLCRNR1 to MLCRNR8 (1 to 8 Coupled Angled Corners, Constant Pitch)

MLCRNR16 (16 Coupled Angled Corners, Constant Pitch)

Symbol

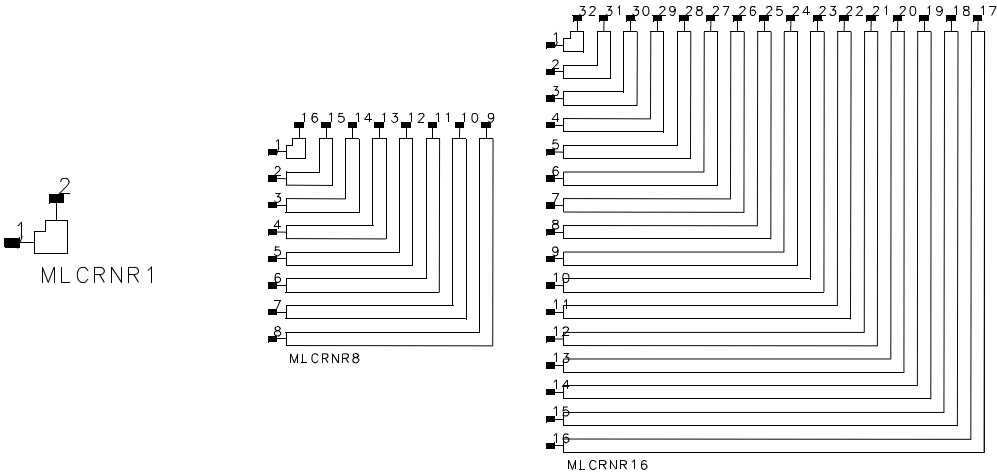

Parameters

Subst =substrate name

Angle =angle of bend, in degrees

W =width of conductors, in specified units

S =spacing between conductors, in specified unit

layer =layer number of conductor (value type: integer)

Range of Usage

$W > 0$

$S > 0$

$0 \leq \text{Angle} \leq 90^\circ$

Notes/Equations/References


- 1. Coupled line corners are modeled as staggered coupled lines. The discontinuity effect of corners is not modeled.

2. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.

Coupled Crossovers

MLCROSSOVER1 to MLCROSSOVER8 (1 to 8 Crossovers)

Symbol

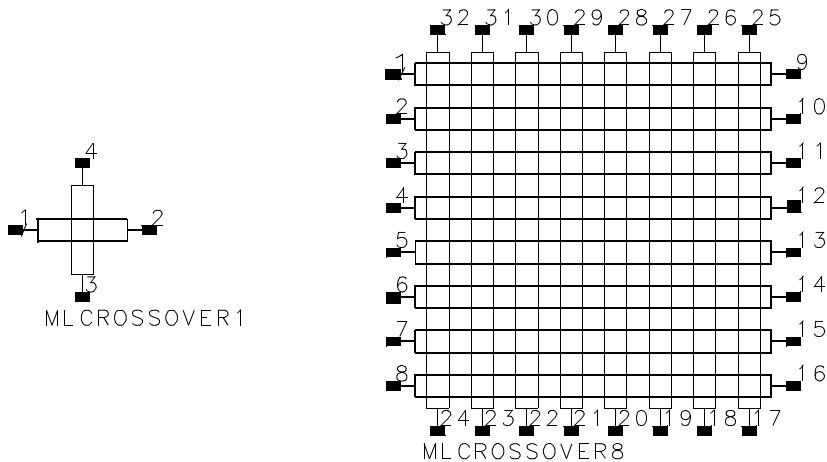

Parameters

Subst =substrate name

W_Top =width of top conductors, in specified units

W_Bottom =width of bottom conductors, in specified units

S_Top =spacing between top conductors, in specified units

S_Bottom =spacing between bottom conductors, in specified units

LayerTop =top layer number (value type: integer)

LayerBottom =bottom layer number (value type: integer)

Range of Usage

W_Top > 0

W_Bottom > 0

S_Top > 0

S_Bottom > 0

Notes/Equations/References

1. An important discontinuity in high-speed digital design is the crossover between two adjacent signal layers. The crossover causes parasitic capacitance, resulting in high-frequency crosstalk. These crossover models are modeled as coupled lines cascaded with junction coupling capacitors. The models are quasi-static.
2. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.
3. Port reference planes are located at the edge of each crossover region, as shown in [Figure 3-1](#). The capacitor is at the junction where a horizontal and vertical line cross.


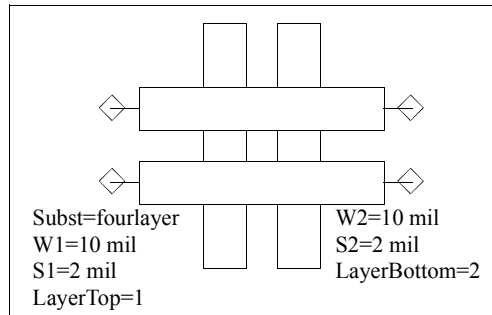


Figure 3-1. Crossover region with port reference planes

MLJCROSS (Cross Junction)

Symbol

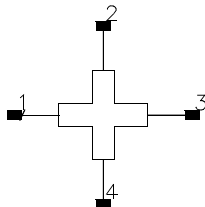

Parameters

Subst =substrate name

W1 =width of conductor 1, in specified units

W2 =width of conductor 2, in specified units

W3 =width of conductor 3, in specified units

W4 =width of conductor 4, in specified units

Layer =layer number (value type: integer)

Range of Usage

$W1 > 0$

$W2 > 0$

$W3 > 0$


$W4 > 0$

Notes/Equations/References

1. The cross junction is treated as an ideal connection between pins 1, 2, 3, and 4, and is provided to facilitate interconnections between lines in layout.
2. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.

MLJGAP (Open Gap)

Symbol



Parameters

Subst =substrate name

G =width of gap, in specified units

W =width of conductor, in specified units

Layer =layer number (value type: integer)

Range of Usage

$G > 0$


$W > 0$

Notes/Equations/References

1. The gap is treated as an ideal open circuit between pins 1 and 2, and is provided to facilitate layout.
2. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.

MLJTEE (Tee Junction)

Symbol

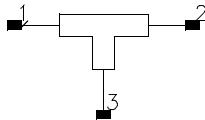

Parameters

Subst =substrate name

W1 =width of conductor 1, in specified units

W2 =width of conductor 2, in specified units

W3 =width of conductor 3, in specified units

Layer =layer number (value type: integer)

Range of Usage


$W[n] > 0$

Notes/Equations/References

1. The tee junction is treated as an ideal connection between pins 1, 2, and 3, and is provided to facilitate interconnections between lines oriented at different angles in layout.
2. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.

MLOPENSTUB (Open Stub)

Symbol



Parameters

Subst =substrate name

Length =length of conductor, in specified units

W =width of conductor, in specified units

Layer =layer number (value type: integer)

Range of Usage

$W > 0$

$L > 0$



Notes/Equations/References

1. If the length of the stub is zero, this component simulates an open-end effect. If the length is greater than zero, this component simulates a length of line and an open-end effect.
2. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.

Coupled Radial Lines

MLRADIAL1 to MLRADIAL5 (1 to 5 Radial Lines)

Symbol

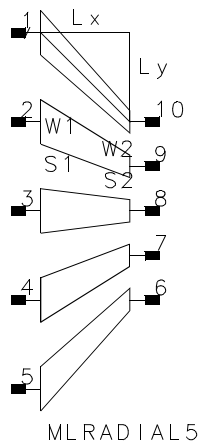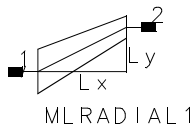

Parameters

Subst =substrate name

X_Offset =horizontal offset

Y_Offset =vertical offset

W_Left =width of conductor on left side, in specified units

W_Right =width of conductor on right side, in specified units

S_Left =spacing between conductors on left side, in specified units

S_Right =spacing between conductors on right side, in specified units

Layer =layer number of conductor (value type: integer)

Range of Usage

X_Offset > 0

Y_Offset > 0

W_Left > 0

W_Right > 0

$S_Left > 0$

$S_Right > 0$


Notes/Equations/References

1. Radial lines are modeled as a cascade of uniform coupled line segments. Each segment is implemented as the numerical solution of Maxwell's Equations for the two-dimensional cross-section geometry. For optimization or tuning, zero-thickness conductor is suggested to speed up the run time.
2. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.

Slanted Coupled Lines

MLSLANTED1 to MLSLANTED8 (1 to 8 Slanted Coupled Lines)
MLSLANTED16 (16 Slanted Coupled Lines)

Symbol

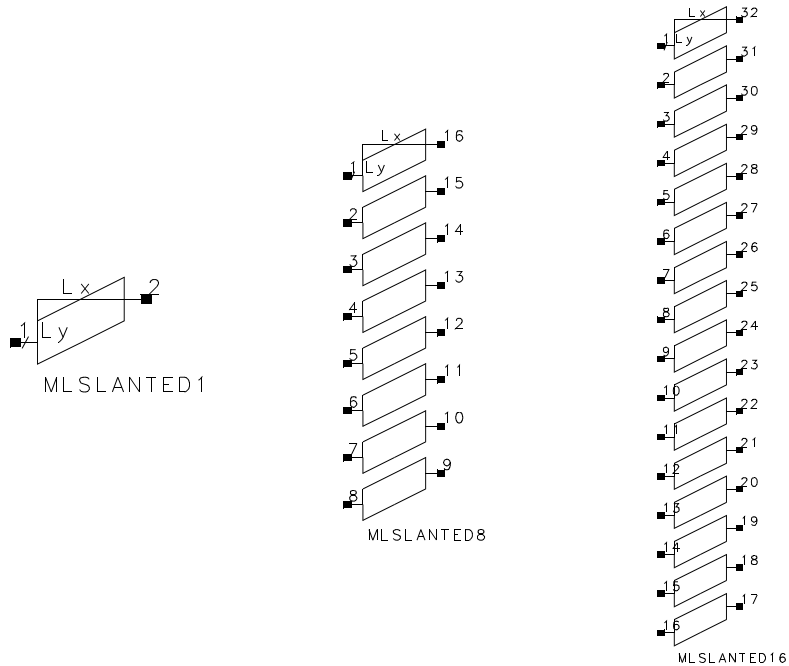

Parameters

- Subst =substrate name
- X_Offset =horizontal offset
- Y_Offset =vertical offset
- W =width of conductors, in specified units
- S =spacing between conductors, in specified units
- Layer =layer number of conductors (value type: integer)

Range of Usage

X_Offset > 0

$Y_Offset > 0$

$W > 0$


$S > 0$

Notes/Equations/References

1. Dispersion due to skin effect and dielectric loss is calculated. Dispersion due to inhomogeneous dielectrics is not considered.
2. These models are implemented as the numerical solution of Maxwell's Equations for the two-dimensional cross-section geometry that is defined by the model parameters. Because a new numerical computation is performed for each unique set of geometric or material parameters, the evaluation of these models may take a few seconds on some platforms. One effect of this implementation is that optimization of any set of the geometric or material parameters for these models may result in a time-consuming analysis. Only one numerical computation is required for an analysis that is only swept with respect to frequency. The evaluation time for this model is significantly reduced for conductors of 0 thickness.
3. Conductor loss (and its contribution to noise) is *not* considered if conductivity is infinite or conductor thickness is 0.
4. A substrate must be named in the Subst field and a multilayer interconnect substrate definition that corresponds to this name must appear on the circuit page.


MLSUBSTRATEN (Dielectric Constant for N Layers)

Symbol

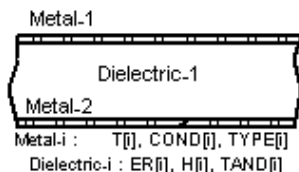

Illustration

MLSUBSTRATE *N*

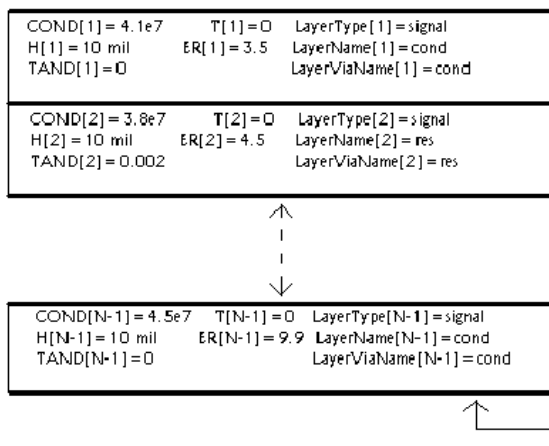

Parameters

Er[n] = dielectric constant

H[n] = height of substrate, in specified length units

TanD[n] = dielectric loss tangent

T[n] = metal thickness, in specified units

Cond[n] = conductivity, in conductance per meters

LayerType[n] = type of the metal layer: blank, signal, ground, power

LayerName[n] = layer name (for layout use)

LayerViaName[n] = layer name of the via (for layout use)

Range of Usage

Following are recommended ranges of usage.

$Er[n] > 0$


$H[n] > 0$

$TanD[n] > 0$

$Cond[n] > 0$

Notes/Equations/References

1. $N-1$ defines the number of dielectric layers being used as a multilayer substrate. The number of dielectric layers supported are $N=2, 3, 4, 5, 6, 7, 8, 10, 12, 14, 16, 32$ and 40 .
2. At least one substrate component must be inserted as part of any multilayer circuit design. The name of the substrate must be inserted in the Subst field of every multilayer interconnect component displaying the field in the circuit. Substrate names can be up to 10 characters long; they must begin with a letter, not a number or a symbol.
3. If the conductor thickness $T[n]$ is set to zero or if the conductivity $Cond[n]$ is set to infinity, the conductor is assumed to have zero loss. $T[n]$ can be used to specify the position of the trace on a substrate. If $T[n]$ is positive, the trace grows up into the dielectric material; if $T[n]$ is negative, the trace grows down into the material. For ground and power supply layers, assigning $T[n]$ as positive or negative has no effect. See the figure following these notes.
4. The substrate schematic symbol appears as a cross-section of a substrate. Each layer is labeled, and you can easily set the parameters for each layer. A signal layer has components on it. A power or ground layer is a solid sheet of metal. No components are on this layer other than clearance holes.
5. The substrate schematic symbol appears as a cross-section of a substrate. Each layer is labeled, and you can easily set the parameters for each layer. A signal layer has components on it. A power or ground layer is a solid sheet of metal. No components are on this layer other than clearance holes, as shown here.

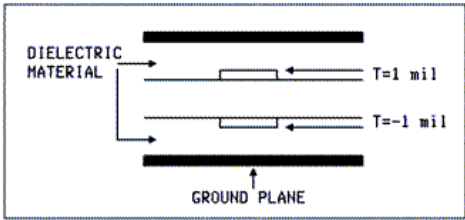

MLVIAHOLE (Via Hole)

Symbol



Parameters

Subst =substrate name

DiamVia =via diameter, in specified units

T =via thickness, in specified units

Cond =conductivity

Layer[1] =starting layer number (value type: integer)

Layer[2] =ending layer number (value type: integer)

Range of Usage

DiamVia > 0


T > 0


Cond > 0

Notes/Equations/References

1. This component is modeled as an inductor.
2. A substrate must be named in the Subst field and a multilayer substrate definition that corresponds to this name must be placed in the schematic.


3. Circuit Using Via Components to Create a Path to Multiple Board Layers

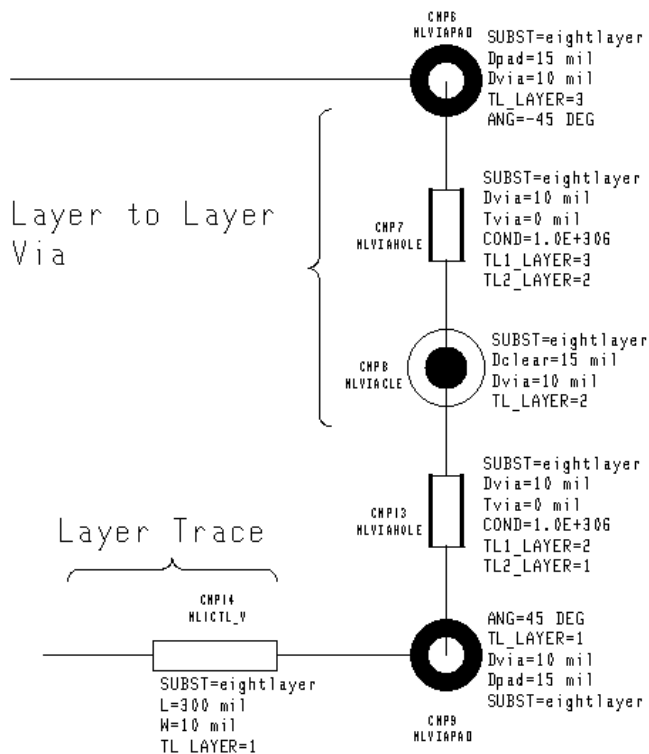

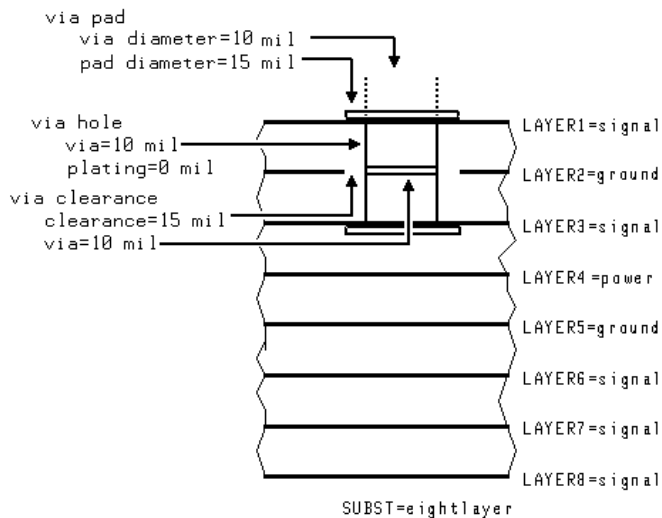

MLVIAPAD (Via Pad)

Symbol

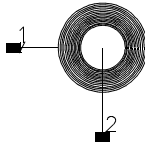

Parameters

Subst = substrate name

DiamVia = via diameter, in specified units

DiamPad = pad diameter, in specified units

Layer = layer number (value type: integer)

Angle = (Layout option) input pin to output pin angle, in degrees

Range of Usage

DiamVia > 0

DiamPad > 0

$-180^\circ \leq \text{Angle} \leq +180^\circ$

Notes/Equations/References

1. This component is modeled as a capacitor to ground.
2. A substrate must be named in the Subst field and a multilayer substrate definition that corresponds to this name must appear on the circuit page.
3. A via pad connects signal trace to a via hole. Pin 1 of MLVIAPAD should be connected to a signal trace. Pin 2 should be connected to a MLVIAHOLE.
4. Angle refers to the angle between two connecting lines and is necessary for performing layout. In [Figure 3-2](#) the angle between the two traces is 90° . The angle parameters of the two pads used in connecting these traces must be specified so that the difference between

them is 90° . Therefore, the angle of the first pad may be -45° and the second 45° , or 0° and 90° , respectively.



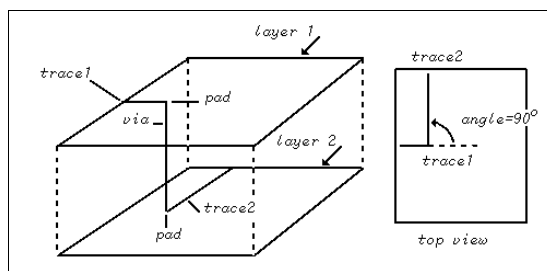


Figure 3-2. The 90° angles of the connecting lines

5. Circuit Using Via Components to Create a Path to Multiple Board Layers

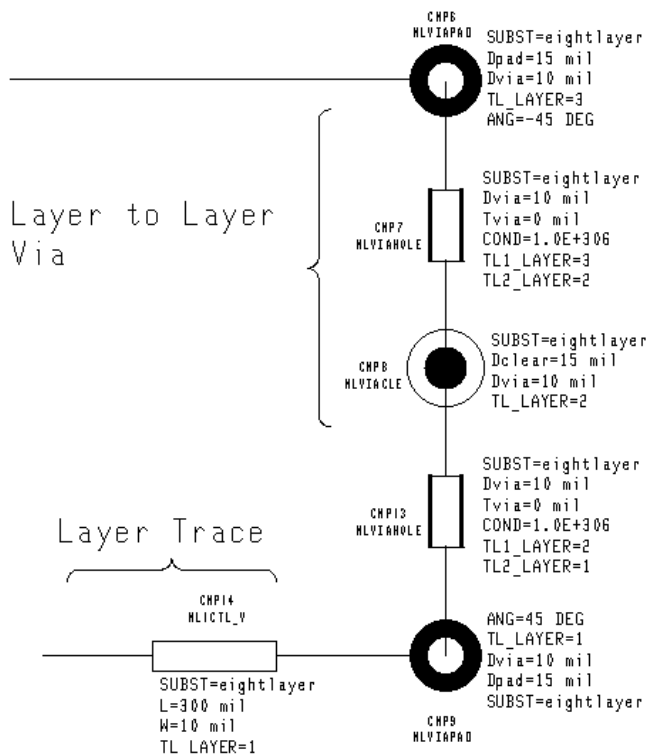


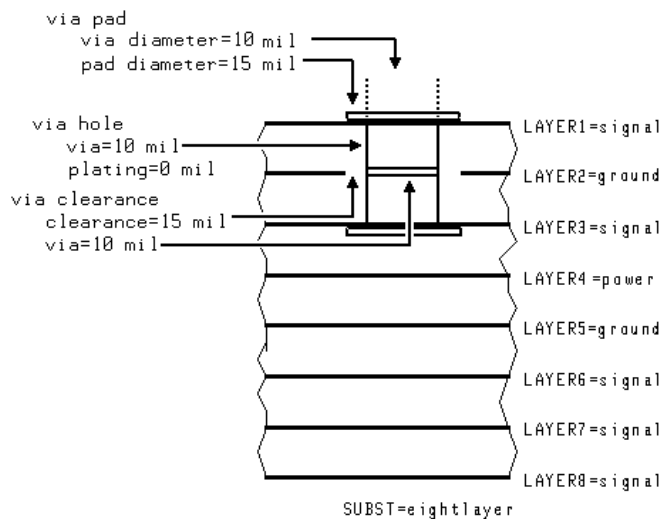


Chapter 4: Stripline Components

SBCLIN (Broadside-Coupled Lines in Stripline)

Symbol

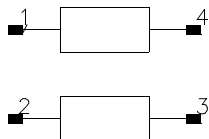

Illustration

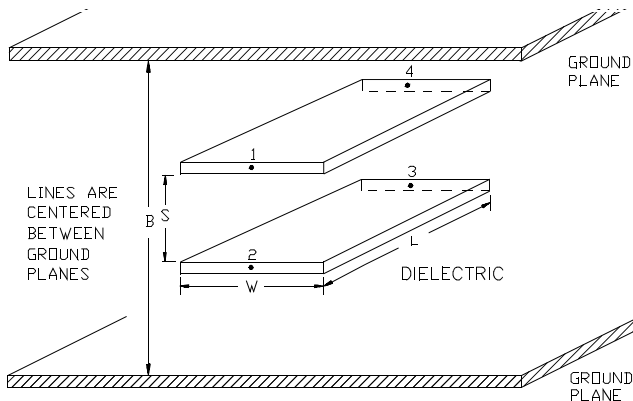

Parameters

Subst = substrate instance name

W = conductor width, in specified units

S = conductor spacing, in specified units; see Notes 3 and 4.

L = length, in specified units

Temp = physical temperature, in °C

W1 = (for Layout option) offset from pin 1 to conductor centerline

W2 = (for Layout option) offset from pin 2 to conductor centerline

W3 = (for Layout option) offset from pin 3 to conductor centerline

W4 = (for Layout option) offset from pin 4 to conductor centerline

P1Layer = (for Layout option) layer associated with pin 1 conductor;
cond1, cond2

Range of Usage

$$\epsilon_r \geq 1$$

$$\frac{W}{B-S} \geq 0.35$$

$$\frac{S}{B} \leq 0.9$$

$$\frac{W}{S} \geq 0.7$$

where

ϵ_r = dielectric constant (from associated SSUB(O))

B = ground plane spacing (from associated SSUB(O))

S = center layer thickness (conductor spacing)


Notes/Equations/References

1. Conductor thickness correction is applied in the frequency-domain analytical model.
2. Coupled lines are parallel to the ground plane.
3. Components that refer to an SSUBO with S=0 give the same simulation results as if they refer to an otherwise equivalent SSUB.
4. If the Subst parameter refers to an SSUBO, the SSUBO's spacing parameter (S) value is used rather than the component spacing parameter (S). This is true regardless of whether the component's S is set to a real value or to *unspecified*. If it is set to a real value, a warning message is displayed.
5. For coupled-stripline of negligible thickness (T=0), the even- and odd-mode characteristic line impedances are calculated from the exact formula derived by Shelton using conformal mapping. For a stripline of finite thickness, an approximate model developed by William Getsinger for Agilent and based on the formula of Shelton, Cohn, and Wheeler is used to calculate the even- and odd-mode impedances. Additionally, the attenuation formula developed by Wheeler is used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model.
6. For time-domain analysis, the frequency-domain analytical model is used.


7. S. B. Cohn, "Thickness Corrections for Capacitive Obstacles and Strip Conductors," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-8, November, 1960, pp. 638-644.
8. J. P. Shelton, "Impedance of Offset Parallel-Coupled Strip Transmission Lines," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-14, January, 1966, pp. 7-15.
9. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

SBEND (Unmitered Stripline Bend)

Symbol

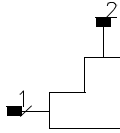

Illustration

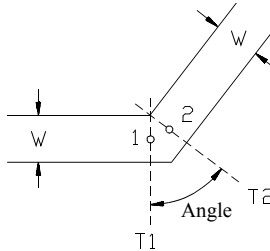

Parameters

Subst = substrate (SSUB or SSUBO) instance name

W = conductor width, in specified units

Angle = angle of bend, in degrees

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$W \geq 0$

Angle = any value in Layout

$15^\circ \leq \text{Angle} \leq 120^\circ$ (for $\frac{W}{B} \approx 1$)

$0.25 \leq \frac{W}{B} \leq 1.75$ (for Angle = 90°)


where

B = ground plane spacing (from associated SSUB)

Notes/Equations/References


1. The frequency-domain analytical model is the static, lumped component model of Altschuler and Oliner. The formulas are based on a theoretical analysis of the E-plane bend in parallel-plate waveguide. Conductor and dielectric losses are not included in the simulation.
2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. In layout, a positive value for Angle draws a bend in the counterclockwise direction from pin 1 to 2; a negative value for Angle draws a bend in the clockwise direction.
4. H. M. Altschuler and A. A. Oliner. "Discontinuities in the Center Conductor of Symmetric Strip Transmission Line," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-8, May, 1960. (Cf. Section III-H.)

Equivalent Circuit

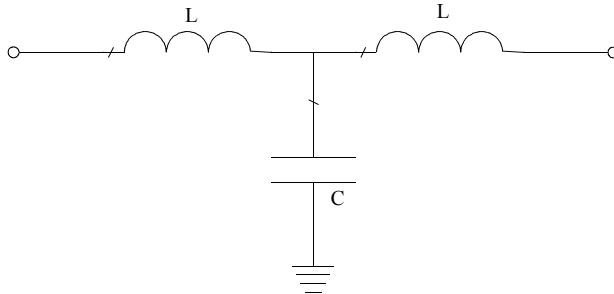


SBEND2 (Stripline Bend -- Arbitrary Angle/Miter)

Symbol



Illustration

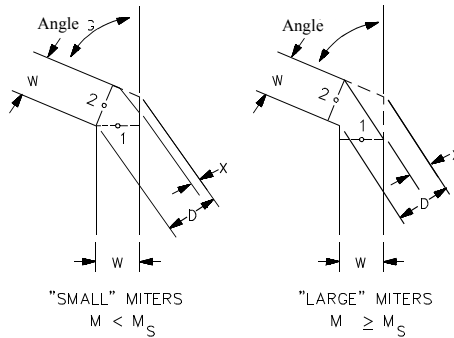

$$M = \frac{X}{D}$$

$$M_S = \sin^2\left(\frac{\text{Angle}}{2}\right)$$

Parameters

Subst = substrate (SSUB or SSUBO) instance name

W = conductor width, in specified units

Angle = angle of bend, in degrees

M = miter fraction

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$$W \leq 5.7 \times B$$

$$B \leq 0.2 \times \lambda$$

$$W \leq 0.2 \times \lambda$$

$$M \leq 0.01 \times \text{Angle (degrees)}$$

$$M \leq 0.8$$

$$20^\circ \leq \text{Angle} \leq 150^\circ$$

where

B = ground plane spacing (from associated SSUB)

λ = wavelength in the dielectric

W \geq 0 for Layout


Notes/Equations/References

1. The frequency-domain analytical model is a static, lumped component model developed for Agilent by William J. Getsinger. The model is based on the waveguide E-plane parallel-plate model analyzed by J. Schwinger and published in Marcuvitz's book, *Waveguide Handbook*. Based on the work of Oliner, the waveguide model is transformed into its dual stripline model. Conductor and dielectric losses are included in the simulation. Reference plane shifts are added for large miters ($M > M_s$).
2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. There are two possible reference plane locations available:
 - Small miters where the reference planes line up with the inner corner of the bend.
 - Large miters where the reference planes line up with the corner between the connecting strip and the mitered section.
4. In layout, a positive value for Angle draws a bend in the counterclockwise direction from pin 1 to 2; a negative value for Angle draws a bend in the clockwise direction.
5. H. M. Altschuler and A. A. Oliner. "Discontinuities in the Center Conductor of Symmetric Strip Transmission Line," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-8, May, 1960. (Cf. Section III-H.)
6. M. Kirschning, R. H. Jansen, and N. H. L. Koster. "Measurement and Computer-Aided Modeling of Microstrip Discontinuities by an Improved Resonator Method," 1983 IEEE *MTT-S International Microwave Symposium Digest*, May 1983, pp. 495-497.
7. N. Marcuvitz, *Waveguide Handbook*, McGraw-Hill, 1951, pp. 337-350.


8. A. Oliner, "Equivalent Circuits For Discontinuities in Balanced Strip Transmission Line," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-3, March 1955, pp. 134-143.

SCLIN (Edge-Coupled Lines in Stripline)

Symbol

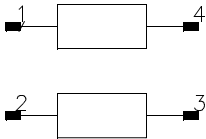

Illustration

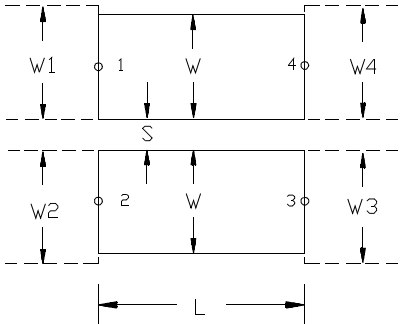

Parameters

Subst = substrate instance name

W = line width, in specified units

S = spacing between lines, in specified units

L = line length, in specified units

Temp = physical temperature, in °C

W1 = (for Layout option) width of line that connects to pin 1

W2 = (for Layout option) width of line that connects to pin 2

W3 = (for Layout option) width of line that connects to pin 3

W4 = (for Layout option) width of line that connects to pin 4

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$S > 0$

$W \geq 0.35 \times B$ (for $T > 0$)

$$W > 0 \text{ (for } T = 0 \text{)}$$

$$T < 0.1 \times B$$

where

B = ground plane spacing (from associated SSUB)


T = conductor thickness (from associated SSUB)

Notes/Equations/References


1. The frequency-domain analytical model is as follows. For centered coupled-stripline of negligible thickness ($T=0$), the even- and odd-mode characteristic line impedances are calculated from the exact formula derived by Cohn using conformal mapping. For a centered coupled-stripline of finite thickness, Cohn's approximate formula is used in conjunction with Wheeler's attenuation formula. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model.
2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. For time-domain analysis, the frequency-domain analytical model is used.
4. In generating a layout, adjacent transmission lines will be lined up with the inner edges of the conductor strips. If the connecting transmission lines are narrower than the coupled lines, they will be centered on the conductor strips.
5. H. M. Altschuler and A. A. Oliner. "Discontinuities in the Center Conductor of Symmetric Strip Transmission Line," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-8, May, 1960. (Cf. Section III-H.)
6. S. B. Cohn. "Shielded Coupled-Strip Transmission Line," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-3, October, 1955, pp. 29-38.
7. K. C. Gupta, R. Garg, and R. Chadha. *Computer-Aided Design of Microwave Circuits*, Artech House, Inc., 1981.
8. H. A. Wheeler. "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

SCROS (Stripline Cross Junction)

Symbol

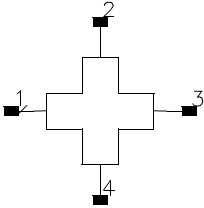

Illustration

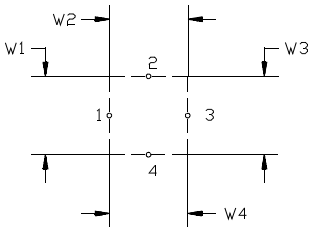

Parameters

Subst = substrate instance name

W1 = conductor width at pin 1, in specified units

W2 = conductor width at pin 2, in specified units

W3 = conductor width at pin 3, in specified units

W4 = conductor width at pin 4, in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

Simulation frequency (GHz) $\leq \frac{Z_o}{B}$

where


Z_o = characteristic impedance of the widest strip in ohms

B = ground plane spacing in millimeters

Notes/Equations/References


1. The frequency-domain analytical model is a frequency dependent, lumped component model developed for Agilent by William J. Getsinger. The model is an extension of the stripline T-junction model. The T-junction model is based on the waveguide E-plane parallel-plate model analyzed by J. Schwinger and published in Marcuvitz's book, *Waveguide Handbook*. Based on the work of Oliner, the waveguide model is transformed into its dual stripline model. Conductor and dielectric losses are not included in the simulation.
2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. For time-domain analysis, the frequency-domain analytical model is used.
4. In Layout, all pins are centered at the corresponding edges.
5. N. Marcuvitz. *Waveguide Handbook*, McGraw-Hill, 1951, pp. 337-350.
6. A. Oliner. "Equivalent Circuits For Discontinuities in Balanced Strip Transmission Line," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-3, March 1955, pp. 134-143.

Equivalent Circuit

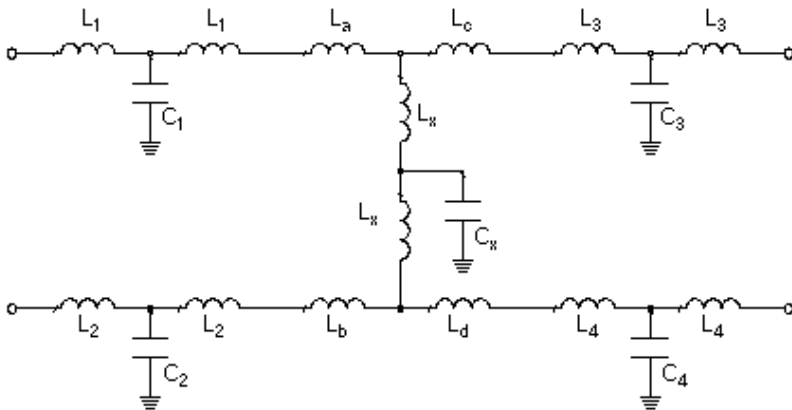


SCURVE (Curved Line in Stripline)

Symbol



Illustration

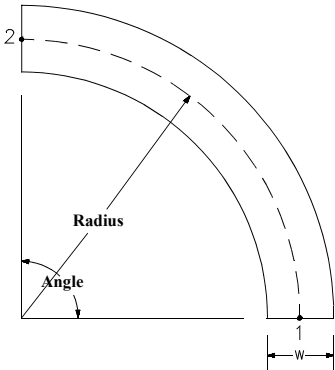

Parameters

Subst = substrate instance name

W = conductor width, in specified units

Angle = angle subtended by the bend, in degrees

Radius = radius (measured to strip centerline), in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$$RAD \geq \frac{W + B/2}{2}$$

where


B = ground plane spacing (from associated SSUB)

Notes/Equations/References


1. The frequency-domain analytical model consists of an equivalent piece of straight stripline. The model was developed for Agilent by William J. Getsinger and is based on the waveguide E-plane parallel-plate model analyzed by J. Schwinger and published in Marcuvitz's book, *Waveguide Handbook*. Following the work of Oliner, the waveguide model is transformed into its dual stripline model. Conductor and dielectric losses are included in the simulation. Discontinuity effects accounted for are those due to radius only.
2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. For time-domain analysis, the frequency-domain analytical model is used.
4. In layout, a positive value for Angle draws a curve in the counterclockwise direction; a negative value draws a curve in the clockwise direction.
5. N. Marcuvitz. *Waveguide Handbook*, McGraw-Hill, 1951, pp. 337-350.
6. A. Oliner. "Equivalent Circuits For Discontinuities in Balanced Strip Transmission Line," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-3, March 1955, pp. 134-143.

SLEF (Stripline Open End Effect)

Symbol



Illustration

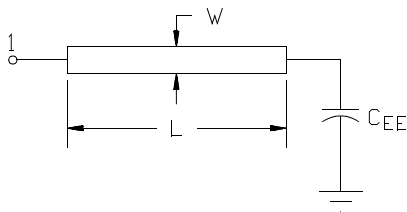

Parameters

Subst = substrate instance name

W = line width, in specified units

L = line length, in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$$\frac{W}{B} \geq 0.15$$

$$\frac{T}{B} < 0.1$$

where

B = ground plane spacing (from associated SSUB)


T = conductor thickness (from associated SSUB)

Notes/Equations/References

1. The frequency-domain analytical model consists of an extension to the length of the stripline stub. The stripline is modeled using the SLIN model for thin ($T=0$) and thick ($T>0$) stripline, including conductor and dielectric loss. The length of the extension of the stripline, dl , is based on the formula developed by Altschuler and Oliner.

2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. For time-domain analysis, the frequency-domain analytical model is used.
4. H. M. Altschuler, and A. A. Oliner, "Discontinuities in the Center Conductor of Symmetric Strip Transmission Line," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-8, May 1960, pp. 328-339.
5. K. C. Gupta, R. Garg, and R. Chadha. *Computer-Aided Design of Microwave Circuits*, Artech House, Inc., 1981.

Equivalent Circuit

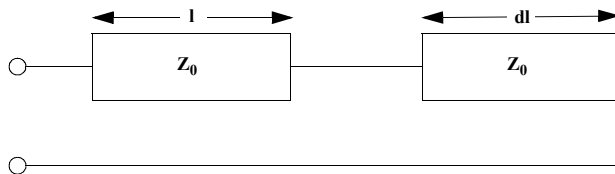


SLIN (Stripline)

Symbol



Illustration

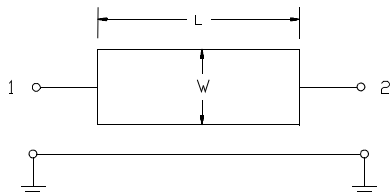

Parameters

Subst = substrate instance name

W = line width, in specified units

L = line length, in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$W > 0$ (for $T = 0$)

$W \geq 0.35 \times B$ (for $T > 0$)

$T \leq 0.25 \times B$

$S > 0.9 \times B$

where

B = ground plane spacing (from associated SSUB)

T = conductor thickness (from associated SSUB)

Notes/Equations/References


1. The frequency-domain analytical model is as follows. For centered stripline of negligible thickness ($T=0$), the characteristic line impedance is calculated from the exact formula derived by Cohn using conformal mapping. For a centered stripline of finite thickness, Wheeler's approximate formula for the characteristic line impedance and attenuation factor

are used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model.


2. For offset stripline, a model developed by William Getsinger for Agilent and based on the formula of Shelton, Cohn and Wheeler is used. For an offset stripline of negligible thickness ($T=0$), the characteristic line impedance is calculated from the exact formula derived by Shelton using conformal mapping. For an offset stripline of finite thickness, Shelton's exact formula is combined with Cohn's formula for a centered thick stripline to formulate an approximate formula. Additionally, the attenuation formula developed by Wheeler is used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model.
3. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for simulation and layout purposes. A reference to SSUBO with its spacing parameter $S=0$ is equivalent to a reference to the SSUB.
4. S. B. Cohn, "Characteristic Impedance of the Shielded-Strip Transmission Line," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-2, July, 1954, pp. 52-55.
5. S. B., Cohn, "Problems in Strip Transmission Lines," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-3, March, 1955, pp. 119-126.
6. K. C. Gupta, R. Garg, and R. Chadha. *Computer-Aided Design of Microwave Circuits*, Artech House, Inc., 1981.
7. J. P. Shelton, "Impedance of Offset Parallel-Coupled Strip Transmission Lines," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-14, January, 1966, pp. 7-15.
8. H. A. Wheeler, "Transmission Line Properties of a Stripline Between Parallel Planes," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-26, November, 1978, pp. 866-876.
9. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

SLINO (Offset Strip Transmission Line)

Symbol



Illustration

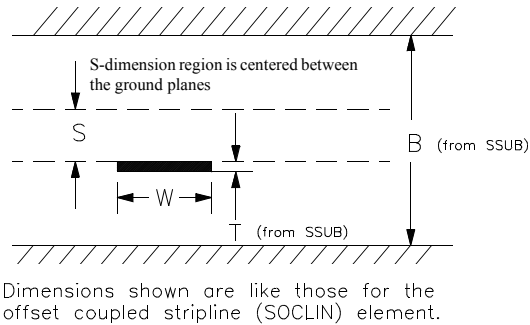

Parameters

Subst = substrate instance name

W = line width, in specified units

S = middle dielectric layer thickness, in specified units; see Notes 1 and 2.

L = line length, in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$$\frac{W}{B + S - T} \geq 0.35$$

where

B = ground plane spacing (from associated SSUB)

T = conductor thickness (from associated SSUB)

Notes/Equations/References


1. The frequency-domain analytical model is as follows. For offset stripline, a model developed by William Getsinger for negligible thickness ($T=0$), the characteristic line

impedance is calculated from the exact and based on the formula of Shelton, Cohn and Wheeler is used. For an offset stripline of negligible thickness ($T=0$), the characteristic line impedance is calculated from the exact formula derived by Shelton using conformal mapping. For an offset stripline of finite thickness, Shelton's exact formula is combined with Cohn's formula for a centered thick stripline to formulate an approximate formula. Additionally, the attenuation formula developed by Wheeler is used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model.


2. Components that refer to an SSUBO with $S=0$ give the same simulation results as if they refer to an otherwise equivalent SSUB.
3. If the Subst parameter refers to an SSUBO, the SSUBO spacing parameter (S) value is used rather than the component spacing parameter (S). This is true regardless of whether the component's S is set to a real value or to *unspecified*. If it is set to a real value, a warning message is displayed. If the Subst parameter refers to an SSUB (rather than to an SSUBO), the component's value for S is used.
4. For time-domain analysis, the frequency-domain analytical model is used.
5. S. B. Cohn, "Characteristic Impedance of the Shielded-Strip Transmission Line," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-2, July, 1954, pp. 52-55.
6. S. B. Cohn, "Problems in Strip Transmission Lines," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-3, March, 1955, pp. 119-126.
7. J. P. Shelton, "Impedance of Offset Parallel-Coupled Strip Transmission Lines," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-14, January, 1966, pp. 7-15.
8. H. A. Wheeler, "Transmission Line Properties of a Stripline Between Parallel Planes," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-26, November, 1978, pp. 866-876.
9. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

SLOC (Stripline Open-Circuited Stub)

Symbol



Illustration

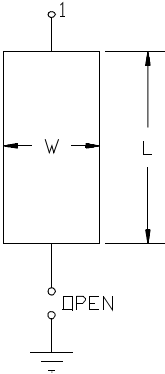

Parameters

Subst = substrate instance name

W= line width, in specified units

L = line length, in specified units

Temp = (physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$$\frac{T}{B} \leq 0.25$$

where

B = ground plane spacing (from associated SSUB)

T = conductor thickness (from associated SSUB)

Notes/Equations/References


1. The frequency-domain analytical model is as follows. For centered stripline of negligible thickness ($T=0$), the characteristic line impedance is calculated from the exact formula

derived by Cohn using conformal mapping. For a centered stripline of finite thickness, Wheeler's approximate formula for the characteristic line impedance and attenuation factor are used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model.


2. For offset stripline, a model developed by William Getsinger for Agilent and based on the formula of Shelton, Cohn and Wheeler is used. For an offset stripline of negligible thickness ($T=0$), the characteristic line impedance is calculated from the exact formula derived by Shelton using conformal mapping. For an offset stripline of finite thickness, Shelton's exact formula is combined with Cohn's formula for a centered thick stripline to formulate an approximate formula. Additionally, the attenuation formula developed by Wheeler is used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model. No end effects are included in the model.
3. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for simulation and layout purposes. A reference to SSUBO with its spacing parameter $S=0$ is equivalent to a reference to SSUB.
4. For time-domain analysis, the frequency-domain analytical model is used.
5. S. B. Cohn, "Characteristic Impedance of the Shielded-Strip Transmission Line," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-2, July, 1954, pp. 52-55.
6. S. B. Cohn, "Problems in Strip Transmission Lines," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-3, March, 1955, pp. 119-126.
7. K. C. Gupta, R. Garg, and R. Chadha. *Computer-Aided Design of Microwave Circuits*, Artech House, Inc., 1981.
8. J. P. Shelton, "Impedance of Offset Parallel-Coupled Strip Transmission Lines," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-14, January, 1966, pp. 7-15.
9. H. A. Wheeler, "Transmission Line Properties of a Stripline Between Parallel Planes," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-26, November, 1978, pp. 866-876.
10. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

SLSC (Stripline Short-Circuited Stub)

Symbol



Illustration

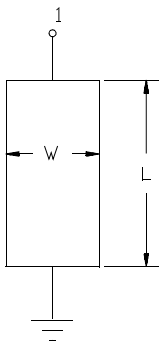

Parameters

Subst = substrate instance name

W = line width, in specified units

L = line length, in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: cond1, cond2

Range of Usage

$$\frac{T}{B} \leq 0.25$$

where

B = ground plane spacing (from associated SSUB)

T = conductor thickness (from associated SSUB)

Notes/Equations/References


1. For centered stripline of negligible thickness ($T = 0$), the characteristic line impedance is calculated from the exact formula derived by Cohn using conformal mapping. For a centered stripline of finite thickness, Wheeler's approximate formula for the characteristic

line impedance and attenuation factor are used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model.


2. For offset stripline, a model developed by William Getsinger for Agilent and based on the formula of Shelton, Cohn and Wheeler is used. For an offset stripline of negligible thickness ($T=0$), the characteristic line impedance is calculated from the exact formula derived by Shelton using conformal mapping. For an offset stripline of finite thickness, Shelton's exact formula is combined with Cohn's formula for a centered thick stripline to formulate an approximate formula. Additionally, the attenuation formula developed by Wheeler is used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model. No end effects are included in the model.
3. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for simulation and layout purposes. A reference to SSUBO with its spacing parameter $S=0$ is equivalent to a reference to SSUB.
4. For time-domain analysis, the frequency-domain analytical model is used.
5. S. B. Cohn, "Characteristic Impedance of the Shielded-Strip Transmission Line," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-2, July, 1954, pp. 52-55.
6. S. B. Cohn, "Problems in Strip Transmission Lines," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-3, March, 1955, pp. 119-126.
7. K. C. Gupta, R. Garg, and R. Chadha. *Computer-Aided Design of Microwave Circuits*, Artech House, Inc., 1981.
8. J. P. Shelton, "Impedance of Offset Parallel-Coupled Strip Transmission Lines," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-14, January, 1966, pp. 7-15.
9. H. A. Wheeler, "Transmission Line Properties of a Stripline Between Parallel Planes," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-26, November, 1978, pp. 866-876.
10. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

SMITER (90-degree Stripline Bend -- Optimally Mitered)

Symbol



Illustration

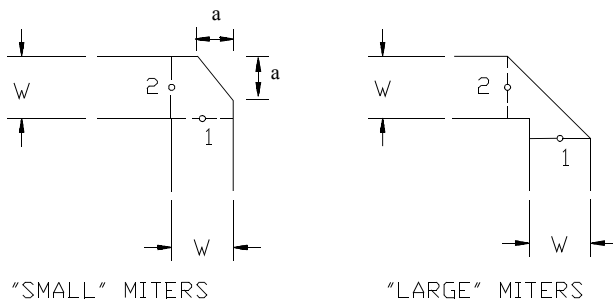

Parameters

Subst = substrate instance name

W = conductor width, in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$$0.2 \times B \leq W \leq 3 \times B$$

where

B = ground plane spacing (from associated SSUB)

Notes/Equations/References

1. The frequency-domain model is an empirically based, analytical model. The chamfered bend is modeled as a matched stripline line of length, $\Delta l_o + l_{ext}$. The effective length of the bend and the optimal chamfered dimension are calculated based on curve fits to empirical data in Matthaei, Young, and Jones. The stripline is modeled using the SLIN model for thin ($T=0$) and thick ($T>0$) stripline, including conductor and dielectric loss.

For Δl_o :

If $(W/B \leq 0.2)$

$$\Delta l_o = 0.56528 + 0.023434 \times (W/B - 0.2)$$

If $(0.2 < W/B \leq 3.0)$

$$\Delta l_o = 0.56528 + 0.01369 \times (W/B - 0.2)^{0.77684} \\ + 0.01443 \times (W/B - 0.2)^{2.42053}$$

If $(W/B > 3.0)$

$$\Delta l_o = 0.770175 + 0.155473 \times (W/B - 3.0)$$

For l_{ext} :

If $(a > W)$

$$l_{ext} = 2 \times (a - W)$$

If $(a \leq W)$

$$l_{ext} = 0.0$$

2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. The artwork is dependent on the parameters given in the SSUB or SSUBO. Layout artwork requires placing a SSUB or SSUBO, prior to placing the component directly in the Layout window.
4. The miter fraction (a/W) is calculated using one of the formulae given below depending on the parameter values.

$$\text{If } (W/B < 0.2), a/W = 1.267472 - 0.35041 \times (W/B - 0.2).$$

If $(0.2 \leq W/B \leq 1.6)$,


$$a/W = 1.012 + (1.6 - W/B) \times (0.08 + (1.6 - W/B) \\ \times (0.013 + ((1.6 - W/B) \times 0.043))).$$

$$\text{If } (1.6 \leq W/B \leq 14.25), a/W = 0.884 + 0.08 \times (3.2 - W/B).$$

5. Harlan Howe, Jr, *Stripline Circuit Design*, Artech House, Inc., 1982.


6. G. Matthaei, L. Young, E. M. T. Jones. *Microwave Filters, Impedance-Matching Networks and Coupling Structures*, Artech House, Inc., 1980, pp 203, 206.

Equivalent Circuit

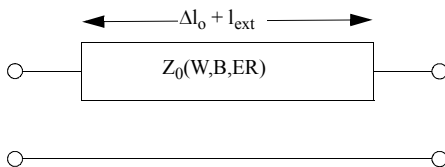


SOCLIN (Offset-Coupled Lines in Stripline)

Symbol

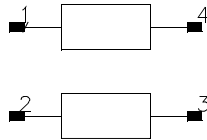

Illustration

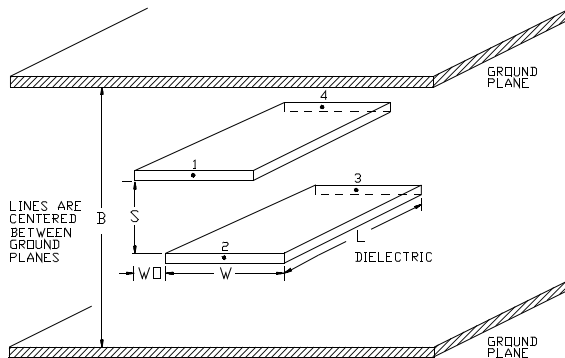

Parameters

Subst = substrate instance name

W = conductor width, in specified units

WO = conductor offset, in specified units

S = conductor spacing, in specified units

L = conductor length, in specified units

Temp = physical temperature, in °C

W1 = (for Layout option) offset from pin 1 to conductor centerline

W2 = (for Layout option) offset from pin 2 to conductor centerline

W3 = (for Layout option) offset from pin 3 to conductor centerline

W4 = (for Layout option) offset from pin 4 to conductor centerline

P1Layer = (for Layout option) layer associated with pin 1 conductor: *cond1*, *cond2*

Range of Usage

$$\epsilon_r \geq 1$$

$$\frac{W}{B-S} \geq 0.35$$

$$\frac{S}{B} \leq 0.9$$

where

B = ground plane spacing (from associated SSUB)

ϵ_r = dielectric constant (from associated SSUB)


Notes/Equations/References

1. The frequency-domain analytical model is as follows. For laterally-offset coupled-stripline of negligible thickness ($T=0$), the even- and odd-mode characteristic line impedances are calculated from the exact formula derived by Shelton using conformal mapping. For a laterally-offset coupled-stripline of finite thickness, a model developed by William Getsinger for Agilent and based on the formula of Shelton, Cohn and Wheeler is used to calculate the even- and odd-mode impedances. Additionally, the attenuation formula developed by Wheeler is used. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dielectric loss is also included in the model.
2. Coupled lines are parallel to the ground plane.
3. Components that refer to an SSUBO with $S=0$ give the same simulation results as if they refer to an otherwise equivalent SSUB.
4. If the Subst parameter refers to an SSUBO, the SSUBO spacing parameter (S) value is used rather than the component spacing parameter (S). This is true regardless of whether the component's S is set to a real value or to unspecified. If it is set to a real value, a warning message is displayed. If the Subst parameter refers to an SSUB (rather than to an SSUBO), the component's value for S is used.
5. For time-domain analysis, the frequency-domain analytical model is used.
6. W1, W2, W3 and W4 are layout-only parameters and only affect the electromagnetic simulation results. W1, W2, W3 and W4 cannot exceed $W/2$.
7. S. B. Cohn, "Thickness Corrections for Capacitive Obstacles and Strip Conductors," *IRE Trans. Microwave Theory and Techniques*, Vol. MTT-8, November, 1960, pp. 638-644.


8. J. Paul Shelton, Jr. "Impedances of Offset Parallel-Coupled Strip Transmission Lines," *IEEE Transactions On Microwave Theory and Techniques*, Vol. MTT-14, January, 1966, pp. 7-15.
9. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424

SSTEP (Stripline Step in Width)

Symbol



Illustration

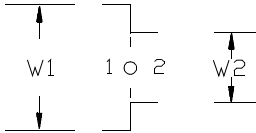

Parameters

Subst = substrate instance name

W1 = conductor width at pin 1, in specified units

W2 = conductor width at pin 2, in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$$0.1 \leq \frac{W2}{W1} \leq 10$$

$$W1 \leq 0.2 \times \lambda$$

$$W2 = 0.2 \times \lambda$$

where


λ = wave length in the dielectric

Notes/Equations/References

1. The frequency-domain analytical model is the lumped component model of Altschuler and Oliner. The model includes reference plane adjustments to align the *natural* reference plane of the discontinuity with the reference plane of the layout. The SLIN stripline model is used to model these reference plane shifts.


2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. In layout, SSTEP aligns the centerlines of the strips.
4. H. M. Altschuler and A. A. Oliner. "Discontinuities in the Center Conductor of Symmetric Strip Transmission Line," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-8, May 1960. (Cf. Section III-H.)

Equivalent Circuit

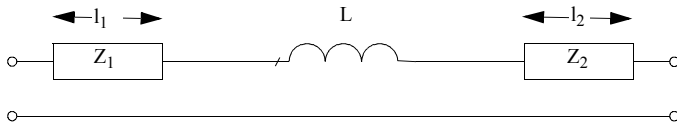


SSUB (Stripline Substrate)

Symbol



Illustration

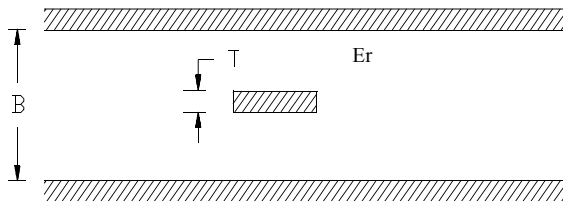

Parameters

Er = relative dielectric constant

Mur = relative permeability

B = ground plane spacing, in specified units

T = conductor thickness, in specified units

Cond = conductor conductivity, in Siemen/meter

TanD = dielectric loss tangent

Cond 1 (for Layout Option) layer to which *cond* is mapped; default = 1 (cond)

Cond2 (for Layout Option) layer to which *cond2* is mapped; default = 2 (cond2)

Range of Usage

$Er \geq 1.0$

$B > 0$

$T \geq 0$

Notes/Equations/References

1. SSUB sets up stripline substrate parameters for one or more stripline components. Either an SSUB or SSUBO is required for all stripline components. For offset center conductor layers, use SSUBO.

2. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
3. The parameters Cond1 and Cond2 control the mask layers on which the conductors are drawn. These are layout-only parameters and are not used by the simulator.

In the case of SBCLIN and SOCLIN, the component parameter P1Layer identifies the virtual layer (*cond1* or *cond2*) that the conductor associated with pin 1 is drawn on. All other stripline components have a Layer parameter that identifies the virtual layer (*cond1* or *cond2*) on which the conductor is drawn.


The virtual layer referred to by P1Layer or Layer (*cond1* or *cond2*) is mapped to an actual mask layer by the Cond1 or Cond2 parameter of the appropriate SSUB or SSUBO.

SSUBO (Offset Stripline Substrate)

Symbol



Illustration

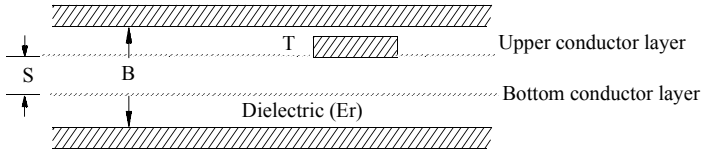

Parameters

Er = relative dielectric constant

Mur = relative permeability

S = inter-layer (conductor) spacing, in specified units

B = ground plane spacing, in specified units

T = conductor thickness, in specified units

Cond = conductor conductivity

TanD =dielectric loss tangent

Cond1 = (for Layout Option) layer to which cond1 is mapped; default = 1 (cond)

Cond2 = (for Layout Option) layer to which cond2 is mapped; default = 2 (cond2)

Range of Usage

$Er \geq 1.0$

$S \geq 0$

$B > 0$

$T \geq 0$

$S < 0.9 \times B$

Notes/Equations/References


1. This item specifies stripline substrate with two conductor layers located symmetrically between ground planes. It can also be used for specifying stripline substrate with an offset

center conductor layer. The only difference between SSUB and SSUBO is that spacing parameter S is added to SSUBO to support the offset conductor. SSUBO with S=0 is the same as SSUB.


2. A stripline Subst parameter can either refer to an SSUB or an SSUBO. From a simulation viewpoint, reference to SSUBO is meaningful only for the SBCLIN, SOCLIN, SLINO, SLIN, SLOC, SLEF, and SLSC, because the intrinsic models for these components support offset conductor configuration. For all other stripline components, a reference to SSUBO is effectively the same as a reference to SSUB because the spacing parameter of SSUBO is ignored.
3. An SSUBO or an SSUB is required for all stripline components.
4. Cond1 and Cond2 control the mask layers on which the conductors are drawn. These are layout-only parameters and are not used by the simulator.
5. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
6. In the case of SBCLIN and SOCLIN, the parameter P1Layer identifies the virtual layer (*cond1* or *cond2*) that the conductor associated with pin 1 is drawn on. All other stripline components have a Layer parameter that identifies the virtual layer (*cond1* or *cond2*) on which the conductor is drawn.
7. The virtual layer referred to by P1Layer or Layer (*cond1* or *cond2*) is mapped to an actual mask layer by the Cond1 or Cond2 parameter of the appropriate SSUB or SSUBO.

STEE (Stripline T-Junction)

Symbol

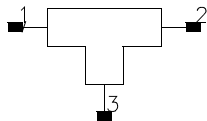

Illustration

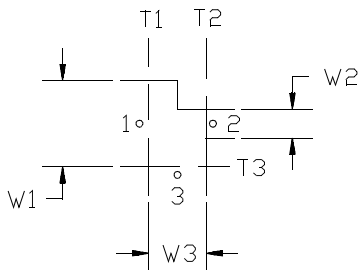

Parameters

Subst = substrate instance name

W1 = conductor width at pin 1, in specified units

W2 = conductor width at pin 2, in specified units

W3 = conductor width at pin 3, in specified units

Temp = physical temperature, in °C

Layer = (for Layout option) conductor layer number: *cond1*, *cond2*

Range of Usage

$$0.1 \leq Z_{01} / Z_{03} \leq 2.0$$

where

Z_{01} = characteristic impedance of line connected to pin 1

Z_{03} = characteristic impedance of line connected to pin 3


Notes/Equations/References

1. The frequency-domain analytical model is a frequency dependent, lumped component model developed for Agilent by William J. Getsinger. The model is based on the waveguide

E-plane parallel-plate model analyzed by J. Schwinger and published in Marcuvitz's book, *Waveguide Handbook*. Based on the work of Oliner, the waveguide model is transformed into its dual stripline model. Conductor and dielectric losses are not included in the simulation.

2. If the Subst parameter refers to an SSUBO whose spacing parameter S has a non-zero value, the component is considered offset for layout and electromagnetic analysis purposes. For other types of analyses, the offset is ignored.
3. Model assumes $W_1 = W_2$. If $W_1 \neq W_2$, then the width is calculated as $\sqrt{W_1 \times W_2}$
4. For time-domain analysis, the frequency-domain analytical model is used.
5. N. Marcuvitz, *Waveguide Handbook*, McGraw-Hill, 1951, pp. 337-350.
6. A. Oliner, "Equivalent Circuits For Discontinuities in Balanced Strip Transmission Line," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-3, March 1955, pp. 134-143.


Equivalent Circuit

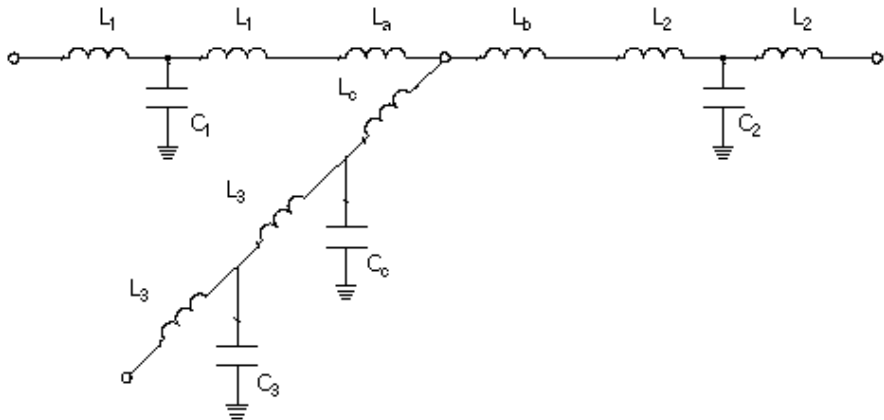


Chapter 5: Suspended Substrate Components

SSCLIN (Suspended Substrate Coupled Lines)

Symbol

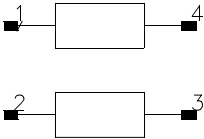

Illustration

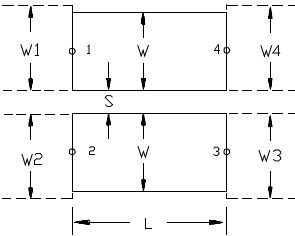

Parameters

Subst = substrate instance name

W = line width, in specified units

S = line spacing, in specified units

L = line length, in specified units

Temp = physical temperature

W1 = (for Layout option) width of line that connects to pin 1

W2 = (for Layout option) width of line that connects to pin 2

W3 = (for Layout option) width of line that connects to pin 3

W4 = (for Layout option) width of line that connects to pin 4

Range of Usage

$Er \geq 1.3$

$Hu \geq H$

$$\frac{H}{100} \leq Hl \leq 100 \times H$$

$$\frac{H}{50} \leq W \leq 50 \times H$$

$$\frac{H}{10} \leq S \leq 10 \times H$$

where

ϵ_r = dielectric constant (from SSSUB)

H = substrate thickness (from SSSUB)

Hl = lower ground plane to substrate spacing (from SSSUB)


Hu = upper ground plane to substrate spacing (from SSSUB)

Notes/Equations/References:


1. The frequency-domain analytical model is a non-dispersive static and lossless model. Conductor thickness is ignored.
2. In generating a layout, adjacent transmission lines will be lined up with the inner edges of the conductor strips. If the connecting transmission lines are narrower than the coupled lines, they will be centered on the conductor strips.
3. W1, W2, W3 and W4 are layout-only parameters and do not affect the simulation results.
4. John I. Smith, "The Even- and Odd-Mode Capacitance Parameters for Coupled Lines in Suspended Substrate," *IEEE Trans. Microwave Theory and Techniques*, Vol. MTT-19, May 1971, pp. 424-431.

SSLIN (Suspended Substrate Line)

Symbol



Illustration

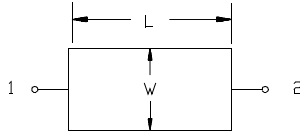

Parameters

Subst = substrate instance name

W = line width, in specified units

L = line length, in specified units

Temp = physical temperature

Range of Usage

$\epsilon_r \geq 1.0$

$H_u \geq H$

$$\frac{H}{50} \leq W \leq H$$

where

ϵ_r = dielectric constant (of the associated substrate)

H_u = Height of the cover (of the associated substrate)

H = substrate thickness (of the associated substrate)

Notes/Equations/References:


1. Conductor loss and dielectric loss are included in the frequency-domain analytical model.
2. A.K. Verma and G. Hassani Sadr, “Unified Dispersion Model for Multilayer Microstrip Line”, *IEEE Trans.*, MYY-40, July 1992.

SSSUB (Suspended Substrate)

Symbol

SSSub

Illustration

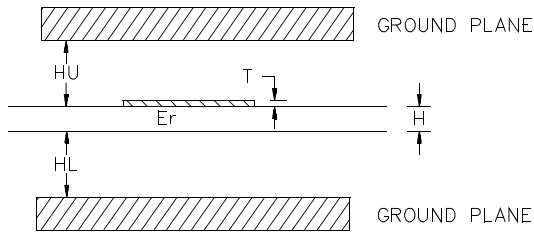

Parameters

None

Range of Usage

$$Er \geq 1.3$$

$$Hu \geq H$$

$$0.01 \times H \leq Hl \leq 100 \times H$$


Notes/Equations/References

1. SSSUB sets up substrate parameters for suspended substrate components and is required for all suspended substrates.
2. Cond1 controls the layer on which the Mask layer is drawn; it is a layout-only parameter and is not used by the simulator.

Chapter 6: Transmission Line Components

CLIN (Ideal Coupled Transmission Lines)

Symbol

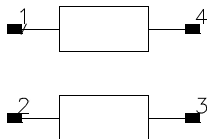

Parameters

Z_e = even-mode characteristic impedance, in ohms

Z_o = odd-mode characteristic impedance, in ohms

E = electrical length, in degrees

F = reference frequency for electrical length, in hertz

Range of Usage


$$\begin{array}{lll} Z_e > 0 & Z_e > Z_o & Z_o > 0 \\ E \neq 0 & F > 0 & \end{array}$$

Notes/Equations/References

1. Odd- and even-mode phase velocities are assumed equal.
2. This component has no default artwork associated with it.

CLINP (Lossy Coupled Transmission Lines)

Symbol

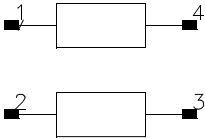

Parameters

Z_e = even-mode characteristic impedance, in ohms

Z_o = odd-mode characteristic impedance, in ohms

L = physical length, in specified units

K_e = even-mode effective dielectric constant

K_o = odd-mode effective dielectric constant

A_e = even-mode attenuation, in dB per unit meter

A_o = odd-mode attenuation, in dB per unit meter

Temp = physical temperature, in °C

Range of Usage


$Z_e > 0$	$Z_e > Z_o$	$Z_o > 0$
$K_e > 0$	$K_o > 0$	$A_e \geq 0$ $A_o \geq 0$

Notes/Equations/References


1. This component has no default artwork associated with it.

COAX (Coaxial Cable)

Symbol

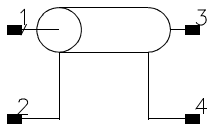

Illustration

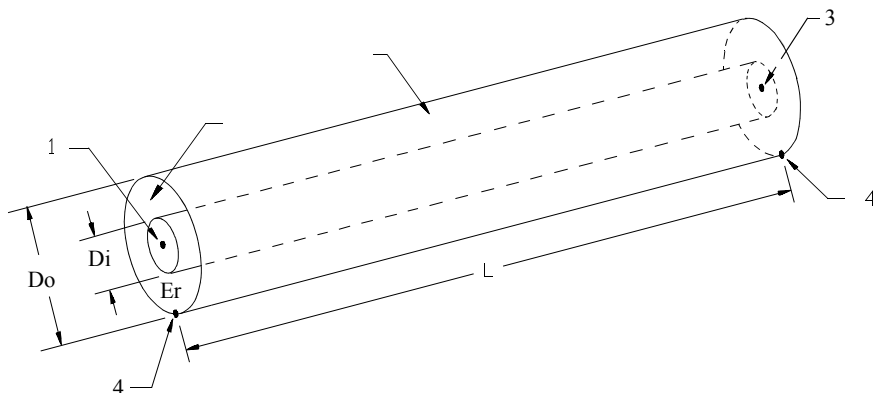

Parameters

D_i = diameter of inner conductor, in specified units

D_o = inner diameter of outer conductor, in specified units

L = length, in specified units

E_r = dielectric constant of dielectric between inner and outer conductors

$\tan \delta$ = dielectric loss tangent

ρ = conductor resistivity (relative to copper)

σ = dielectric conductivity

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

Dimensions must support only TEM mode.

$\tan \delta \geq 0$

$$\text{Rho} \geq 0$$

$$\text{Er} \geq 1$$

$$\text{Do} > \text{Di}$$


$$\text{Simulation frequency} < \frac{190 \text{ GHz}}{\sqrt{\text{Er}} \times [\text{Di}(\text{mm}) + \text{Do}(\text{mm})]}$$

Notes/Equations/References

1. This component has no default artwork associated with it.
2. Simon Ramo, John R. Whinnery, and Theodore Van Duzer. *Fields and Waves in Communication Electronics*, John Wiley and Sons, 1984, Table 5.11b, p. 252.

CoaxTee (Coaxial 3-Port T-Junction, Ideal, Lossless)

Symbol

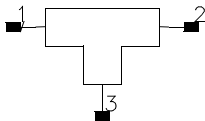

Parameters

Z = line characteristic impedance, in specified units (value type: real, var)

L = length of all T-junction branches, in specified units (value type: real, var)

K = effective dielectric constant (value type: real, var)

Range of Usage

$Z > 0$

$L \geq 0$


$K \geq 1.0$

Notes/Equations/References

None

DR (Cylindrical Dielectric Resonator Coupled Transmission Line Section)

Symbol

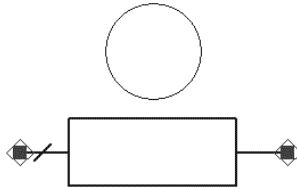

Parameters

Z = Impedance of Coupled Line

K = Coupling Coefficient

ϵ_r = Dielectric Constant of the Dielectric Resonator

Mode = Mode of Operation, eg. Mode=1 means TE_{01x} mode

Q_{dr} = Q-factor of the Dielectric Resonator

Rad = Radius of the Dielectric Resonator

H = Thickness of the Dielectric Resonator

ϵ_{rL} = Dielectric Constant of the Substrate Suspending the Dielectric Resonator

H_L = Thickness of the Substrate Suspending the Dielectric Resonator

ϵ_{rU} = Dielectric Constant of the Superstrate Above

H_U = Height of the Cover, Measured from the Top of the Dielectric Resonator

Cond = Conductivity of the upper and lower metal plates

Range of Usage

$H, H_L, H_U, \text{Rad}, Q_{dr}, \text{Cond} > 0$

$\epsilon_r > \epsilon_{rL} > \epsilon_{rU} \geq 1.0$

Notes/Equations/References

1. The unloaded resonant frequency are calculated using variational technique

The unloaded quality factor is determined using:


$$1/Q_u = 1/Q_{dr} + 1/Q_{cond}$$

where the Q_{cond} is the quality factor due to the finite conductivity of the upper and lower conductor plates.

2. The coupling coefficient is not modeled in this release, due to the proximity effect between the dielectric resonator and the transmission line .
3. T. Itoh and R. S Rudokas, "New method for computing the resonant frequencies of dielectric resonators, " *IEEE Trans.*, MTT-25, pp.52-54, Jan 1977.
4. R.K. Mongia, "Resonant Frequency of Cylindrical Dielectric Resonator Placed in an MIC Environment", *IEEE Trans.*, MTT-38, pp. 802-804, June 1990.

RCLIN (Distributed R-C Network)

Symbol



Parameters

R = series resistance per meter

C = shunt capacitance per meter

L = length, in specified units

Temp = physical temperature, in °C


Range of Usage

N/A


Notes/Equations/References

1. Total series resistance = $R \times L$; total shunt capacitance = $C \times L$
2. This component has no default artwork associated with it.

Equivalent Circuit

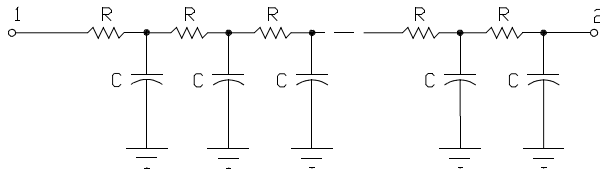


For transient analysis, a simplified lumped model is used, as shown below.

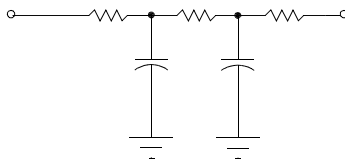


TLIN (Ideal 2-Terminal Transmission Line)

Symbol



Illustration

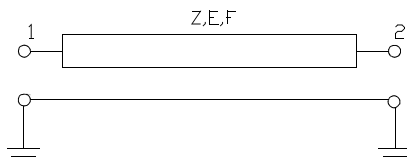

Parameters

Z = characteristic impedance, in ohms

E = electrical length, in degrees

F = reference frequency for electrical length, in hertz

Range of Usage

$Z \neq 0$


$F \neq 0$

Notes/Equations/References

1. This component has no default artwork associated with it.

TLIN4 (Ideal 4-Terminal Transmission Line)

Symbol

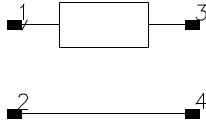

Parameters

Z = characteristic impedance, in ohms

E = electrical length, in degrees

F = reference frequency for electrical length, in hertz

Range of Usage

$Z \neq 0$

$F \neq 0$

Notes/Equations/References


1. This component has no default artwork associated with it.

TLINP (2-Terminal Physical Transmission Line)

Symbol



Illustration

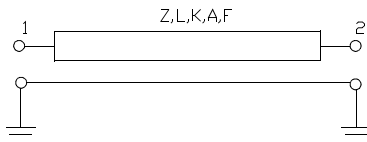

Parameters

Z = characteristic impedance, in ohms

L = physical length, in specified units

K = effective dielectric constant

A = attenuation, in dB per unit meter

F = frequency for scaling attenuation, in hertz

TanD = dielectric loss tangent

Mur = relative permeability

TanM = permeability

Sigma = dielectric conductivity

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

$Z > 0$ $K \geq 1$ $A \geq 0$ $F \geq 0$

Notes/Equations/References

1. The A parameter specifies conductor loss only. To specify dielectric loss, specify non-zero value for TanD (to specify a frequency-dependent dielectric loss) or Sigma (to specify a constant dielectric loss).
2. Because conductor and dielectric losses can be specified separately, the component is not assumed to be distortionless. Therefore, the actual characteristic impedance of the line may be complex and frequency-dependent. This may cause reflections in your circuit that would not occur if a distortionless approximation were made.

3. $A(f) = A$ (for $F = 0$)

$$A(f) = A(F) \times \sqrt{\frac{f}{F}} \quad (\text{for } F \neq 0)$$

where

f = simulation frequency


F = reference frequency

4. For time-domain analysis, the frequency-domain analytical model is used.

5. This component has no default artwork associated with it.

TLINP4 (4-Terminal Physical Transmission Line)

Symbol

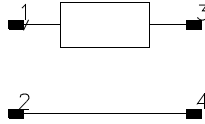

Parameters

Z = characteristic impedance, in ohms

L = physical length, in specified units

K = effective dielectric constant

A = attenuation, in dB per unit meter

F = frequency for scaling attenuation, in hertz

TanD = dielectric loss tangent

Mur = relative permeability

TanM = permeability

Sigma = dielectric conductivity

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

$Z > 0$ $K \geq 1$ $A \geq 0$ $F \geq 0$

Notes/Equations/References

1. The A parameter specifies conductor loss only. To specify dielectric loss, specify non-zero value for TanD (to specify a frequency-dependent dielectric loss) or Sigma (to specify a constant dielectric loss).
2. Since conductor and dielectric losses can be specified separately, the component is not assumed to be distortionless. Therefore, the actual characteristic impedance of the line may be complex and frequency-dependent. This may cause reflections in your circuit that would not occur if a distortionless approximation were made.
3. $A(f) = A$ (for $F = 0$)

$$A(f) = A(F) \times \sqrt{\frac{f}{F}} \quad (\text{for } F \neq 0)$$

where


f = simulation frequency

F = reference frequency


4. For time-domain analysis, the frequency-domain analytical model is used.
5. This component has no default artwork associated with it.

TLOC (Ideal Transmission Line Open-Circuited Stub)

Symbol

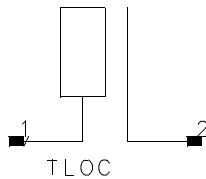

Illustration

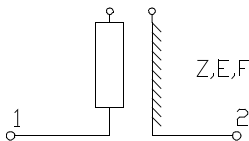

Parameters

Z = characteristic impedance, in ohms

E = electrical length, in degrees

F = reference frequency for electrical length, in hertz

Range of Usage

$Z \neq 0$


$F \neq 0$

Notes/Equations/References


1. This component has no default artwork associated with it.
2. Port 2 should be connected to the system ground reference.

TLPOC (Physical Transmission Line Open-Circuited Stub)

Symbol

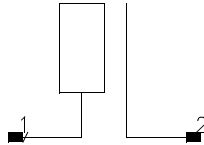

Illustration

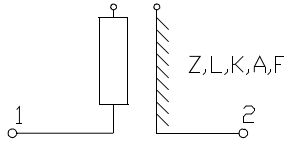

Parameters

Z = characteristic impedance, in ohms

L = physical length, in specified units

K = effective dielectric constant

A = attenuation, in dB per unit meter

F = frequency for scaling attenuation, in hertz

TanD = dielectric loss tangent

Mur = relative permeability

TanM = permeability

Sigma = dielectric conductivity

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

$Z > 0$ $K \geq 1$ $A \geq 0$ $F \geq 0$

Notes/Equations/References

1. The A parameter specifies conductor loss only. To specify dielectric loss, specify non-zero value for TanD (to specify a frequency-dependent dielectric loss) or Sigma (to specify a constant dielectric loss).
2. Since conductor and dielectric losses can be specified separately, the component is not assumed to be distortionless. Therefore, the actual characteristic impedance of the line may

be complex and frequency-dependent. This may cause reflections in your circuit that would not occur if a distortionless approximation were made.

3. $A(f) = A$ (for $F = 0$)

$$A(f) = A(F) \times \sqrt{\frac{f}{F}} \quad (\text{for } F \neq 0)$$

where

f = simulation frequency


F = reference frequency

4. For time-domain analysis, the frequency-domain analytical model is used.


5. This component has no default artwork associated with it.

TLPSC (Physical Transmission Line Short-Circuited Stub)

Symbol

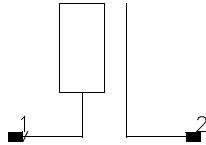

Illustration

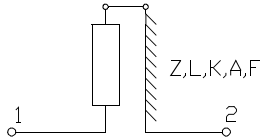

Parameters

Z = characteristic impedance, in ohms

L = physical length, in specified units

K = effective dielectric constant

A = attenuation, in dB per unit meter

F = frequency for scaling attenuation, in hertz

TanD = dielectric loss tangent

Mur = relative permeability

TanM = permeability

Sigma = dielectric conductivity

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

$Z > 0$ $K \geq 1$ $A \geq 0$ $F \geq 0$

Notes/Equations/References

1. The A parameter specifies conductor loss only. To specify dielectric loss, specify non-zero value for TanD (to specify a frequency-dependent dielectric loss) or Sigma (to specify a constant dielectric loss).

2. Because conductor and dielectric losses can be specified separately, the component is not assumed to be distortionless. Therefore, the actual characteristic impedance of the line may be complex and frequency-dependent. This may cause reflections in your circuit that would not occur if a distortionless approximation were made.

3. $A(f) = A$ (for $F = 0$)

$$A(f) = A(F) \times \sqrt{\frac{f}{F}} \quad (\text{for } F \neq 0)$$

where

f = simulation frequency


F = reference frequency

4. For time-domain analysis, the frequency-domain analytical model is used.


5. This component has no default artwork associated with it.

TLSC (Ideal Transmission Line Short-Circuited Stub)

Symbol

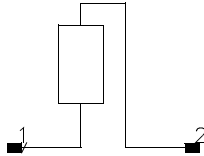

Illustration

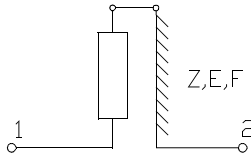

Parameters

Z = characteristic impedance, in ohms

E = electrical length, in degrees

F = reference frequency for electrical length, in hertz

Range of Usage

$Z \neq 0$

$F \neq 0$


Notes/Equations/References

1. This component has no default artwork associated with it.
2. Port 2 should be connected to the system ground reference.


Chapter 7: Waveguide Components

CPW (Coplanar Waveguide)

Symbol



Illustration

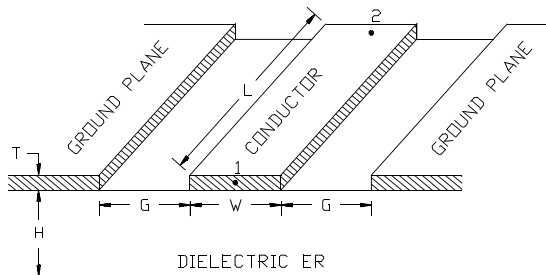

Parameters

Subst= substrate instance name

W = center conductor width, in specified units

G = gap (spacing) between center conductor and ground plane, in specified units

L = center conductor length, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.125 \times W \leq G \leq 4.5 \times W$$

$$W + 2G \leq 20 \times H$$

$$W > 0$$

$$G > 0$$

Notes/Equations/References

1. The frequency-domain analytical model for the coplanar waveguide was developed for Agilent by William J. Getsinger and is based on a conformal mapping technique. The resulting formulas for the characteristic line impedance and effective dielectric constant are virtually the same as those published by Ghione and Naldi. However, the formulas are


extended to account for conductors of finite thickness, conductor losses and dielectric losses.

The thickness correction is based on a technique proposed by Cohn. The conductor losses are calculated using Wheeler's incremental inductance rule. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dispersion at high frequencies is not included in the model.


2. No lower ground plane is included.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. S. B. Cohn, "Thickness Corrections for Capacitive obstacles and Strip Conductors," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-8, November 1960, pp. 638-644.
5. G. Ghione and C. Naldi. "Analytical Formulas for Coplanar Lines in Hybrid and Monolithic MICs," *Electronics Letters*, Vol. 20, No. 4, February 16, 1984, pp. 179-181.
6. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

CPWCGAP (Coplanar Waveguide, Center-Conductor Gap)

Symbol



Illustration

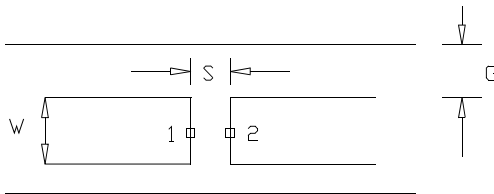

Parameters

Subst = substrate instance name

W = center conductor width, in specified units

G = gap (spacing) between center conductor and ground plane, in specified units

S = gap between end of center conductor and ground plane, in specified units

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$G > 0$


$W \leq S \leq 1.4 \times W$

Notes/Equations/References

1. The center conductor gap in coplanar waveguide is modeled as a static, lumped component circuit. More specifically, the network is a pi-network with capacitive coupling between the center conductors and fringing capacitance from the center conductors to ground. The value of the capacitances are calculated from formula developed by William Getsinger for Agilent. The formula is based on an analysis of an analogous twin-strip configuration of the coplanar discontinuity as proposed by Getsinger. Additionally, metallization thickness correction is applied.


2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. Getsinger, W. J., "Circuit Duals on Planar Transmission Media," *IEEE MTT-S Int'l Microwave Symposium Digest*, 1983, pp. 154-156.

Equivalent Circuit

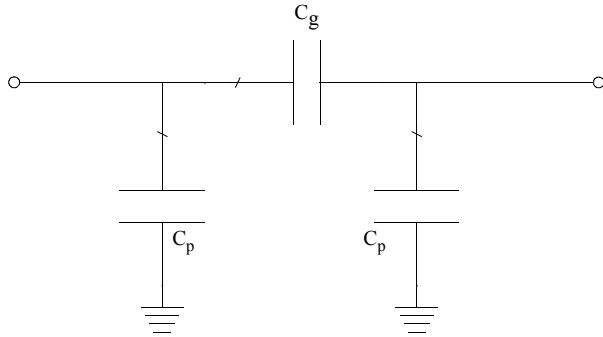


CPWCPL2 (Coplanar Waveguide Coupler (2 Center Conductors))

Symbol

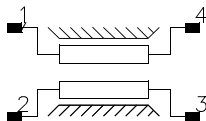

Illustration

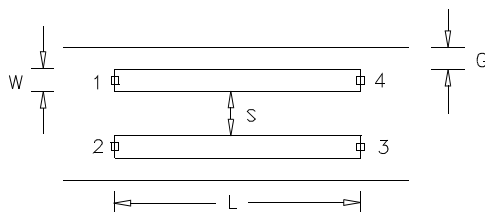

Parameters

Subst = substrate instance name

W = center conductor width, in specified units

G = gap (spacing) between center conductor and ground plane, in specified units

S = gap between end of center conductor and ground plane, in specified units

L = center conductor length, in specified units

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$G > 0$

$S > 0$

Notes/Equations/References


1. The frequency-domain analytical model for a 2-conductor coupler in coplanar waveguide was developed for Agilent by William J. Getsinger and is based on a conformal mapping technique. The resulting formulas for the even and odd-mode characteristic line impedances and effective dielectric constants include the effects of finite conductor thickness, conductor losses and dielectric losses.

The thickness correction is based on a technique proposed by Cohn. The conductor losses are calculated using Wheeler's incremental inductance rule. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dispersion at high frequencies is not included in the model.


2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. Bastida, E. and N. Fanelli. "Interdigital Coplanar Directional Couplers," *Electronic Letters*, Vol. 16, August 14, 1980, pp. 645-646.
4. S. B. Cohn, "Thickness Corrections for Capacitive obstacles and Strip Conductors," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-8, November 1960, pp. 638-644.
5. C. P. Wen, "Coplanar Waveguide Directional Couplers," *IEEE Transaction - MTT-18*, June 1970, pp. 318-322.
6. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

CPWCPL4 (Coplanar Waveguide Coupler) 4 Center Conductors))

Symbol

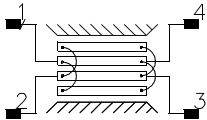

Illustration

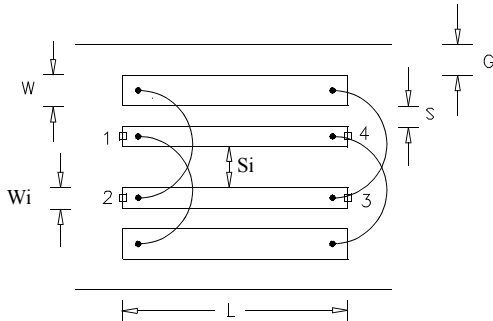

Parameters

Subst = substrate instance name

W = width of outer center conductors, in specified units

G = gap (spacing) between center conductors and ground plane, in specified units

S = gap between outer and inner center conductors, in specified units

W_i = width of inner center conductors, in specified units

S_i = gap between inner center conductors, in specified units

L = center conductor length, in specified units

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$G > 0$

$S > 0$

$W_i > 0$

$S_i > 0$

Notes/Equations/References


1. The frequency-domain analytical model for a 4-conductor coupler in coplanar waveguide was developed for Agilent by William J. Getsinger and is based on a conformal mapping technique. The resulting formulas for the even and odd-mode characteristic line impedances and effective dielectric constants include the effects of finite conductor thickness, conductor losses and dielectric losses.

The thickness correction is based on a technique proposed by Cohn. The conductor losses are calculated using Wheeler's incremental inductance rule. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dispersion at high frequencies is not included in the model.


2. Alternate center conductors are directly connected at ends of CPWCPL4 coupler.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. E. Bastida and N. Fanelli. "Interdigital Coplanar Directional Couplers," *Electronic Letters*, Vol. 16, August 14, 1980, pp. 645-646.
5. S. B. Cohn, "Thickness Corrections for Capacitive obstacles and Strip Conductors," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-8, November 1960, pp. 638-644.
6. C. P. Wen, "Coplanar Waveguide Directional Couplers," *IEEE Transaction - MTT-18*, June, 1970, pp. 318-322.
7. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

CPWEF (Coplanar Waveguide, Open-End Effect)

Symbol



Illustration

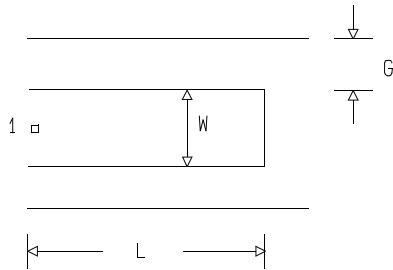

Parameters

Subst = substrate instance name

W = center conductor width, in specified units

G = gap (spacing) between center conductor and ground plane, in specified units

L = center conductor length, in specified units

Temp = physical temperature, in °C

Range of Usage

$$W > 0$$

$$G > 0$$

$$W + 2 \times G \leq 20 \times H$$

$$0.125 \times W \leq G \leq 4.5 \times W$$

where

H = substrate thickness (from associated CPWSUB)

Notes/Equations/References

1. The frequency-domain analytical model for the coplanar waveguide was developed for Agilent by William J. Getsinger and is based on a conformal mapping technique. The


resulting formulas for the characteristic line impedance and effective dielectric constant are virtually the same as those published by Ghione and Naldi. However, the formulas are extended to account for conductors of finite thickness, conductor losses and dielectric losses. The thickness correction is based on a technique proposed by Cohn.

The conductor losses are calculated using Wheeler's incremental inductance rule. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dispersion at high frequencies is not included in the model.


2. The end effect of the abruptly terminated line is modeled as a lumped capacitance to ground. The value of the capacitance is calculated from formula developed by William Getsinger for Agilent. The formula is based on an analysis of an analogous twin-strip configuration of the coplanar discontinuity as proposed by Getsinger.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. S. B. Cohn, "Thickness Corrections for Capacitive obstacles and Strip Conductors," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-8, November 1960, pp. 638-644.
5. G. Ghione and C. Naldi, "Analytical Formulas for Coplanar Line in Hybrid and Monolithic MICs," *Electronics Letters*, Vol. 20, No. 4, February 16, 1984, pp. 179-181.
6. W. J. Getsinger, "Circuit Duals on Planar Transmission Media," *IEEE MTT-S Int'l Microwave Symposium Digest*, 1983, pp. 154-156.
7. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

CPWEGAP (Coplanar Waveguide, End Gap)

Symbol



Illustration

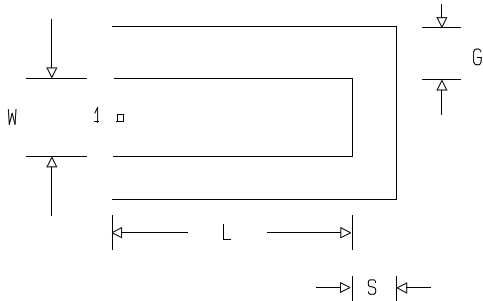

Parameters

Subst = substrate instance name

W = center conductor width, in specified units

G = gap (spacing) between center conductor and ground plane, in specified units

S = gap between end of center conductor and ground plane, in specified units

L = center conductor length, in specified units

Temp = physical temperature, in °C

Range of Usage

$$W > 0, G > 0$$

$$W \leq S \leq 1.4 \times W$$

$$0.125 \times W \leq G \leq 4.5 \times W$$

$$W + 2 \times G \leq 20 \times H$$

where


H = substrate thickness (from associated CPWSUB)

Notes/Equations/References


1. The frequency-domain analytical model for the coplanar waveguide was developed for Agilent by William J. Getsinger and is based on a conformal mapping technique. The resulting formulas for the characteristic line impedance and effective dielectric constant are virtually the same as those published by Ghione and Naldi. However, the formulas are extended to account for conductors of finite thickness, conductor losses and dielectric losses. The thickness correction is based on a technique proposed by Cohn. The conductor losses are calculated using Wheeler's incremental inductance rule. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dispersion at high frequencies is not included in the model.
2. The end effect of the abruptly terminated line is modeled as a lumped capacitance to ground. The value of the capacitance is calculated from formula developed by William Getsinger for Agilent. The formula is based on an analysis of an analogous twin-strip configuration of the coplanar discontinuity as proposed by Getsinger.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. S. B. Cohn, "Thickness Corrections for Capacitive obstacles and Strip Conductors," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-8, November 1960, pp. 638-644.
5. W. J. Getsinger, "Circuit Duals on Planar Transmission Media," *IEEE MTT-S Int'l Microwave Symposium Digest*, 1983, pp. 154-156.
6. G. Ghione, and C. Naldi, "Analytical Formulas for Coplanar Line in Hybrid and Monolithic MICs," *Electronics Letters*, Vol. 20, No. 4, February 16, 1984, pp. 179-181.
7. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

CPWG (Coplanar Waveguide with Lower Ground Plane)

Symbol



Illustration

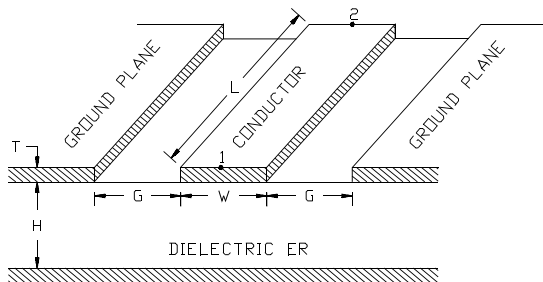

Parameters

Subst = substrate instance name

W = center conductor width, in specified units

G = gap (spacing) between center conductor and ground plane, in specified units

L = center conductor length, in specified units

Temp = physical temperature, in °C

Range of Usage

$$0.125 \times W \leq G \leq 4.5 \times W$$

$$W + 2 \times G \leq 10 \times H$$

$$W > 0$$

$$G > 0$$

where

$$H = \text{substrate thickness}$$

Notes/Equations/References


1. The frequency-domain analytical model for the coplanar waveguide was developed for Agilent by William J. Getsinger and is based on a conformal mapping technique. The

resulting formulas for the characteristic line impedance and effective dielectric constant are virtually the same as those published by Ghione and Naldi. However, the formulas are extended to account for conductors of finite thickness, conductor losses and dielectric losses. The thickness correction is based on a technique proposed by Cohn. The conductor losses are calculated using Wheeler's incremental inductance rule. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dispersion at high frequencies is not included in the model.


2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. G. Ghione and C. Naldi. "Parameters of Coplanar Waveguides with Lower Common Planes," *Electronics Letters*, Vol. 19, No. 18, September 1, 1983, pp. 734-735.
4. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

CPWOC (Coplanar Waveguide, Open-Circuited Stub)

Symbol



Illustration

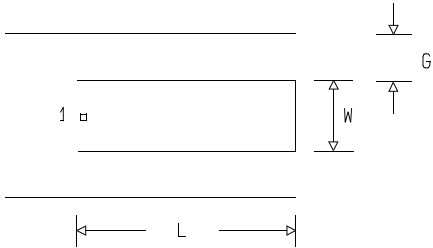

Parameters

Subst = substrate instance name

W = center conductor width, in specified units

G = gap (spacing) between center conductor and ground plane, in specified units

L = center conductor length, in specified units

Temp = physical temperature, in °C

Range of Usage

$$W > 0$$

$$G > 0$$

$$0.125 \times W \leq G \leq 4.5 \times W$$

$$W + 2 \times G \leq 20 \times H$$

where

H = substrate thickness (from associated CPWSUB)

Notes/Equations/References

1. The frequency-domain analytical model for the coplanar waveguide was developed for Agilent by William J. Getsinger and is based on a conformal mapping technique. The resulting formulas for the characteristic line impedance and effective dielectric constant are


virtually the same as those published by Ghione and Naldi. However, the formulas are extended to account for conductors of finite thickness, conductor losses and dielectric losses. The thickness correction is based on a technique proposed by Cohn.

The conductor losses are calculated using Wheeler's incremental inductance rule. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dispersion at high frequencies is not included in the model. No end effects are included in the model.


2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. S. B. Cohn, "Thickness Corrections for Capacitive Obstacles and Strip Conductors," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-8, November 1960, pp. 638-644.
4. G. Ghione and C. Naldi, "Analytical Formulas for Coplanar Line in Hybrid and Monolithic MICs," *Electronics Letters*, Vol. 20, No. 4, February 16, 1984, pp. 179-181.
5. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

CPWSC (Coplanar Waveguide, Short-Circuited Stub)

Symbol



Illustration

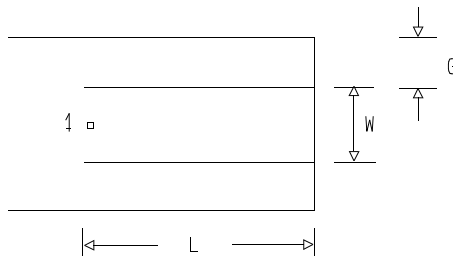

Parameters

Subst = substrate instance name

W = center conductor width, in specified units

G = gap (spacing) between center conductor and ground plane, in specified units

L = center conductor length, in specified units

Temp = physical temperature, in °C

Range of Usage

$$W > 0$$

$$G > 0$$

$$0.125 \times W \leq G \leq 4.5 \times W$$

$$W + 2 \times G \leq 20 \times H$$

where

H = substrate thickness (from associated CPWSUB)

Notes/Equations/References

1. The frequency-domain analytical model for the coplanar waveguide was developed for Agilent by William J. Getsinger and is based on a conformal mapping technique. The resulting formulas for the characteristic line impedance and effective dielectric constant are

virtually the same as those published by Ghione and Naldi. However, the formulas are extended to account for conductors of finite thickness, conductor losses and dielectric losses. The thickness correction is based on a technique proposed by Cohn.

The conductor losses are calculated using Wheeler's incremental inductance rule. The attenuation formula provides a smooth transition from dc resistance to resistance due to skin effect at high frequencies. Dispersion at high frequencies is not included in the model.

2. The end effect of the abruptly terminated line is modeled as a lumped inductance to ground. The value of the inductance is calculated from formula developed by William Getsinger for Agilent. The formula is based on an analysis of an analogous twin-strip configuration of the coplanar discontinuity as proposed by Getsinger.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. S. B. Cohn, "Thickness Corrections for Capacitive obstacles and Strip Conductors," *IRE Trans. on Microwave Theory and Techniques*, Vol. MTT-8, November 1960, pp. 638-644.
5. W. J. Getsinger, "Circuit Duals on Planar Transmission Media," *IEEE MTT-S Int'l Microwave Symposium Digest*, 1983, pp. 154-156.
6. G. Ghione, and C. Naldi, "Analytical Formulas for Coplanar Line in Hybrid and Monolithic MICs," *Electronics Letters*, Vol. 20, No. 4, February 16, 1984, pp. 179-181.
7. H. A. Wheeler, "Formulas for the Skin Effect," *Proc. IRE*, Vol. 30, September, 1942, pp. 412-424.

CPWSUB (Coplanar Waveguide Substrate)

Symbol

CPWS_{ub}

Parameters

H = substrate thickness, in specified units

Er = relative dielectric constant

Mur = relative permeability

Cond = conductor conductivity

Hu = cover height, in specified units

T = conductor thickness, in specified units

TanD = dielectric loss tangent

Rough = conductor surface roughness, in specified units

Cond1 = (for Layout option) layer to which Cond is mapped; default=*cond*

Range of Usage

$H > 0$

$Er \geq 1.0$


$T \geq 0$

Notes/Equations/References


1. CPWSUB is required for all coplanar waveguide components.
2. The substrate defined by this component does not have a lower ground plane.
3. Losses are accounted for when $Rough > 0$ and $T > 0$. The Rough parameter modifies the loss calculations.
4. Cond1 controls the layer on which the Mask layer is drawn; it is a Layout-only parameter and is not used by the simulator.

RWG (Rectangular Waveguide)

Symbol



Illustration

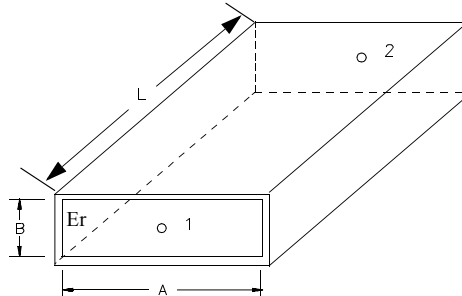

Parameters

A = inside width of enclosure, in specified units

B = inside height of enclosure, in specified units

L = waveguide length, in specified units

Er = relative dielectric constant

Rho = metal resistivity (relative to copper)

TanD = dielectric loss tangent

Mur = relative permeability

TanM = permeability

Sigma = dielectric conductivity

Temp = physical temperature, in °C

Range of Usage

$A > B$


TE₁₀ and evanescent (below cutoff) modes are supported.

Notes/Equations/References


1. The power-voltage definition of waveguide impedance is used in the frequency-domain analytical model.
2. Conductor losses can be specified using Rho or TanM or both. Dielectric loss can be specified using TanD or Sigma or both.
3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. If the values of A and B are such that $B > A$, then B is assumed to be the width, and A is assumed to be the height.
5. This component has no default artwork associated with it.
6. R. Ramo and J. R. Whinnery, *Fields and Waves in Modern Radio*, 2nd Ed., John Wiley and Sons, New York, 1960.

RWGINDF (Rectangular Waveguide Inductive Fin)

Symbol



Illustration

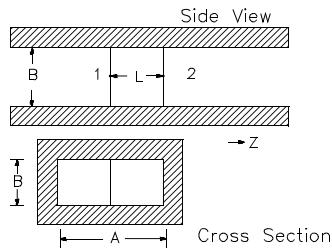

Parameters

A = inside width of enclosure, in specified units

B = inside height of enclosure, in specified units

L = length of the fin, in specified units

Er = relative dielectric constant

Rho = metal resistivity (relative to copper)

TanD = dielectric loss tangent

Mur = relative permeability

TanM = permeability

Sigma = dielectric conductivity

Temp = physical temperature, in °C

Range of Usage

$$0.02 \leq L/A \leq 1.1$$

$$B < A/2$$

TE10 mode only

Simulation frequency > FC

where


FC = cutoff frequency of waveguide

Notes/Equations/References


1. Strip is centered between sidewalls of waveguide. Strip contacts top and bottom of waveguide.
2. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
3. This component has no default artwork associated with it.

RWGT (Rectangular Waveguide Termination)

Symbol



Illustration

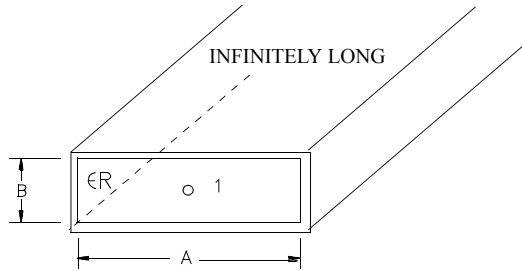

Parameters

A = inside width of enclosure, in specified units

B = inside height of enclosure, in specified units

Er = relative dielectric constant

Rho = metal resistivity (relative to copper)

TanD = dielectric loss tangent

Mur = relative permeability

TanM = permeability

Sigma = dielectric conductivity

Temp = physical temperature, in °C

Range of Usage

A > B

TE10 and evanescent (below cutoff) modes are supported.

Notes/Equations/References

1. The power-voltage definition of waveguide impedance is used in the frequency-domain analytical model.
2. Conductor losses can be specified using Rho or TanM or both. Dielectric loss can be specified using TanD or Sigma or both.

3. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
4. If the values of A and B are such that $B > A$, then B is assumed to be the width, and A is assumed to be the height.
5. This component has no default artwork associated with it.
6. R. Ramo and J. R. Whinnery. *Fields and Waves in Modern Radio*, 2nd Ed., John Wiley and Sons, New York, 1960.

This chapter has parameters for the simulation control elements listed above. There are some unresolved xrefs in here--you will either want to remove the reference or update it when we know how to make external xrefs.

Chapter 8: Printed Circuit Board Components

PCB Model Basis and Limits

The printed circuit board line components available in this library are based on a quasi-static analysis in an enclosed region with stratified layers of a single dielectric.

The dielectric layers and the metal enclosure are specified by PCSUBn ($n=1, \dots, 7$) whereas the coupled lines are specified by PCLINn ($n=1, \dots, 10$). There can be any combination of 1 to 10 conducting strips and 1 to 7 dielectric layers. In other words, for a given PCLINn, its conductors can be associated with any metal layers of a given PCSUBn.

All of the dielectric layers of a PCSUBn have the same dielectric constant. However, each dielectric layer can have a different thickness. There can be an air layer above the top-most dielectric or below the bottom-most dielectric. When an air layer exists, there may be a conductor pattern at the air-dielectric interface. The structure can be open or covered by a conducting shield at the top and at the bottom. The sidewalls are required.

Method of Analysis

The model is that of N coupled TEM transmission lines. Laplace's equation is solved in the plane transverse to the direction of propagation subject to appropriate boundary conditions at the conducting surfaces. Then the solution of Laplace's equation is used to formulate the indefinite admittance matrix for N-coupled TEM transmission lines. The solution of Laplace's equation is by means of finite differences.

The quasi-static solution makes these suitable for use at RF frequencies and for high-speed digital applications.

Because the analysis is quasi-static, the time required for analysis is improved. In contrast to a full-wave analysis, which is expected to be slow, a quasi-static analysis is expected to be relatively fast. Essentially all of the analysis time is required for the solution of the Laplace's equation.

The mesh size used in the finite difference solution of Laplace's equation is the single most important determinant of analysis time for a given structure. Use discretion when specifying the width of the enclosure (parameter W of PCSUBn) and the heights of the upper and lower conducting shields (H_u and H_l parameters of PCSUBn). Specifying large values for these parameters requires a large number of cells for the mesh resulting in longer simulation times. If sidewalls are not actually present then a rough guide is to use a spacing of 10 conductor widths to the sidewalls instead of specifying a large number for the width of enclosure.

Assumptions and Limitations

The conductor thickness is used solely for loss calculations. In the solution of Laplace's equation the conductors are assumed to have zero thickness. Conductor losses are effectively ignored if the thickness is set to zero or if ρ is set to 0. Conductor losses include both dc and skin effect calculations.

The dielectric loss is accounted for by non-zero dielectric conductivity, σ . Provision for a frequency-dependent loss tangent component has been made by specification of the $\tan \delta$ parameter, but is not used in the present implementation.


In principle, the aspect ratio (conductor width to dielectric thickness or horizontal spacing between conductors) is unrestricted. In reality, the problem size (and, therefore, computation time) increases greatly for aspect ratios less than 0.1 or greater than 10. It is highly recommended to keep the aspect ratio within this range.

References


Vijai K. Tripathi and Richard J. Bucolo, "A Simple Network Analog Approach for the Quasi-Static Characteristics of General Lossy, Anisotropic, Layered Structures," *IEEE Transactions on Microwave Theory and Techniques*, Vol. MTT-33, No. 12, pp. 1458-1464; December 1985.

PCBEND (PCB Bend (Arbitrary Angle/Miter))

Symbol

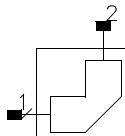

Illustration

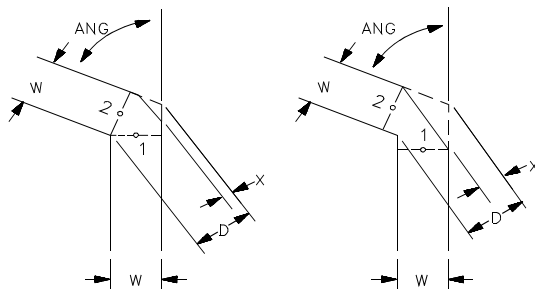

"SMALL" MITERS

$$M < M_S$$

"LARGE" MITERS

$$M \geq M_S$$

$$M = \frac{X}{D}$$

$$M_S = \sin^2\left(\frac{\text{Angle}}{2}\right)$$

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W = conductor width, in specified units

CLayer = conductor layer number

Angle = angle of bend, in degrees

M = miter fraction

Temp = physical temperature, in °C

Range of Usage

$$W > 0$$

$$1 \leq \text{CLayer} \leq \text{Nlayers}+1$$

$$-90 \leq \text{Angle} \leq 90, \text{ degrees}$$

where


Nlayers = number of layers specified by PCSUBi (i=1,2, ... , 7)

Notes/Equations/References

1. This component is modeled as an ideal short-circuit between pins 1 and 2. It is provided mainly to facilitate interconnections between PCB lines oriented at different angles in layout.
2. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2, ... , 7) if Hl=0.
3. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
4. In layout, a positive value for Angle draws a counterclockwise bend from pin 1 to 2; a negative value for Angle draws a clockwise bend.
5. Layout artwork requires placing a PCSUBi(i=1, 2, ... , 7) prior to placing the component directly in the Layout window.

PCCORN (Printed Circuit Corner)

Symbol

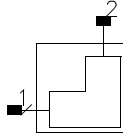

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1, 2, ... , 7)

W = conductor width, in specified units

CLayer = conductor layer number

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$1 \leq \text{CLayer} \leq \text{Nlayers}+1$

where


Nlayers = number of layers specified by PCSUBi (i=1, 2, ... , 7)

Notes/Equations/References


1. This component is treated as an ideal connection between pins 1 and 2, and is provided mainly to facilitate interconnections between PCB lines in layout.
2. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1, 2, ... , 7) if Hl=0.
3. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
4. Layout artwork requires placing a PCSUBi(i=1, 2, ... , 7) prior to placing the component directly in the Layout window.

PCCROS Printed Circuit Cross-Junction

Symbol

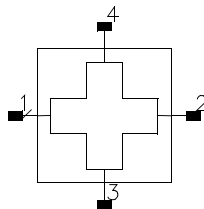

Illustration

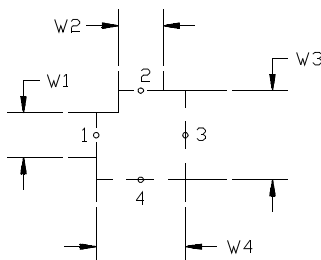

Parameters

Subst = printed circuit substrate name (PCSUB_i, $i=1, 2, \dots, 7$)

W1 = width at pin 1, in specified units

W2 = width at pin 2, in specified units

W3 = width at pin 3, in specified units

W4 = width at pin 4, in specified units

C_{Layer} = conductor layer number

Temp = physical temperature, in °C

Range of Usage

$W1 > 0, W2 > 0, W3 > 0, W4 > 0$

$1 \leq C_{Layer} \leq N_{layers}+1$

where


N_{layers} = number of layers specified by PCSUB_i ($i=1,2, \dots, 7$)

Notes/Equations/References


1. This component is treated as an ideal connection between pins 1, 2, 3, and 4, and has been provided mainly to facilitate interconnections among PCB lines in layout.
2. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2,..., 7) if Hl=0.
3. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
4. Layout artwork requires placing a PCSUBi (i=1, 2, ... , 7) prior to placing the component directly in the Layout window.

PCCURVE (PCB Curve)

Symbol

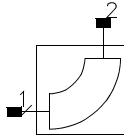

Illustration

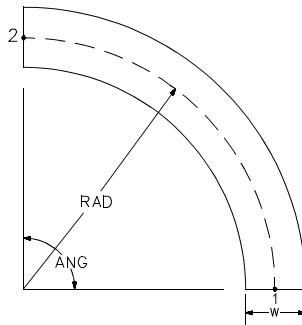

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W = conductor width, in specified units

CLayer = conductor layer number

Angle = angle subtended by the bend, in degrees

Radius = radius (measured to center of conductor), in specified units

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$1 \leq \text{CLayer} \leq \text{Nlayers}+1$

$-180 \leq \text{Angle} \leq 180$, degrees

$\text{Radius} \geq W/2$

where


Nlayers = number of layers specified by PCSUBi (i=1,2, ... , 7)

Notes/Equations/References

1. This component is modeled as PCLIN1, assuming a single straight line of length Radius×Angle, where Angle is in radians. The single line is assumed to be located halfway between and parallel to the sidewalls. The distance between the sidewalls is given as part of the PCSUBi specification.
2. The distance between the sidewalls is typically the width of the metal enclosure around the PC board. If the metal enclosure is absent, width of the PC board itself can be specified and treated as the distance between the sidewalls. Note, however, that the simulation time increases rapidly as the sidewall distance increases. If the effect of the sidewalls is not important, it is highly recommended to set it to approximately 10 times the line width for this component.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2, ... , 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
6. This component has been provided mainly to facilitate interconnections between PCB lines oriented at different angles in layout.
7. In layout, a positive value for Angle specifies a counterclockwise curvature; a negative value specifies a clockwise curvature.
8. Layout artwork requires placing a PCSUBi (i=1, 2, ... , 7) prior to placing the component directly in the Layout window.

PCILC (Printed Circuit Inter-layer Connection)

Symbol



Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

D = diameter of via hole, in specified units

CLayer1 = conductor layer number at pin 1

CLayer2 = conductor layer number at pin 2

Temp = physical temperature, in °C

Ang = (for Layout Option) angle of orientation at pin 2, in degrees

W1 = (for Layout Option) width of square pad or diameter of circular pad on layer CLayer1, in specified units

W2 = (for Layout Option) width of square pad or diameter of circular pad on layer CLayer2, in specified units

Type = (for Layout Option) type of via pad, *square* or *circular*

Range of Usage

$1 \leq \text{CLayer1}, \text{CLayer2} \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUBi (i= 1,2, ... , 7)

Notes/Equations/References


1. This component is modeled as an ideal connection between pin 1 and pin 2 and has been provided mainly to facilitate interconnections between PCB components placed on different conductor layers in layout.
2. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2, ... , 7) if Hl=0.
3. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which

could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+1).


4. Type specifies the type of the via pad. Type=square draws a square pad on layers CLayer1 and CLayer2; Type=circular draws a circular pad on layers CLayer1 and CLayer2.
5. Layout artwork requires placing a PCSUBi (i=1, 2, ... , 7) prior to placing the component directly in the Layout window.

PCLIN1 (1 Printed Circuit Line)

Symbol



Illustration

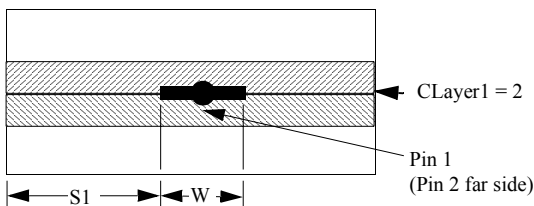

Parameters

Subst = printed circuit substrate name (PCSUB_i, $i=1,2, \dots, 7$)

W = width of line, in specified units

S1 = distance from line to left wall, in specified units

CLayer1 = conductor layer number
(value type: integer)

L = length of line, in specified units

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$S1 > 0$

$1 \leq \text{CLayer1} \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUB_i ($i=1,2, \dots, 7$)


Notes/Equations/References

1. The 2-layer illustration shown is only an example. PCSUB_i has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.


2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits” on page 8-1](#) at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2, ... , 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN2 (2 Printed Circuit Coupled Lines)

Symbol



Illustration

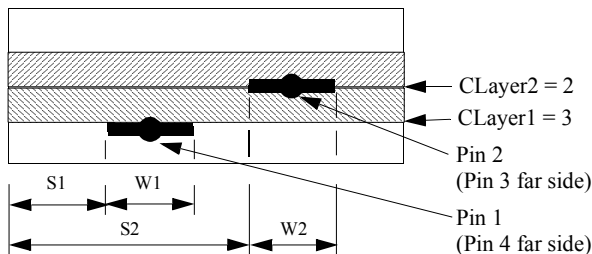

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units

CLayer1 = conductor layer number - line #1 (value type: integer)

W2 = width of line #2, in specified units

S2 = distance from line #2 to left wall, in specified units

CLayer2 = conductor layer number - line #2 (value type: integer)

L = length of the lines, in specified units

Temp = physical temperature, in °C

Range of Usage

$W1 > 0$, $W2 > 0$

$S1 > 0$, $S2 > 0$

$1 \leq \text{CLayer1} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer2} \leq \text{Nlayers}+1$

where


Nlayers = number of layers specified by PCSUBi ($i=1,2, \dots, 7$)

Notes/Equations/References


1. The 2-layer illustration shown is only an example. PCSUBi has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.
2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section “PCB model basis and limits” at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, $i=1,2, \dots, 7$) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN3 (3 Printed Circuit Coupled Lines)

Symbol



Illustration

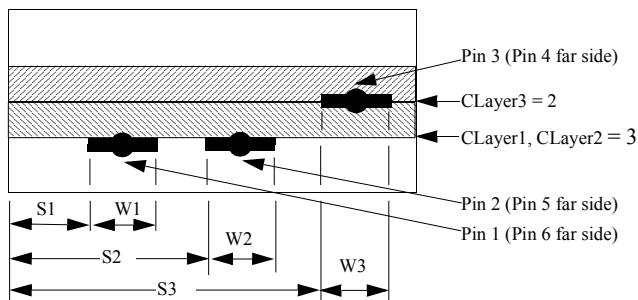

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units

CLayer1 = conductor layer number - line #1 (value type: integer)

W2 = width of line #2, in specified units

S2 = distance from line #2 to left wall, in specified units

CLayer2 = conductor layer number - line #2 (value type: integer)

W3 = width of line #3, in specified units

S3 = distance from line #3 to left wall, in specified units

CLayer3 = conductor layer number - line #3
(value type: integer)

L = length of the lines, in specified units

Temp = physical temperature, in °C

Range of Usage

$$W1 > 0, \quad W2 > 0, \quad W3 > 0$$

$$S1 > 0, \quad S2 > 0, \quad S3 > 0$$

$$1 \leq \text{CLayer1} \leq \text{Nlayers}+1$$

$$1 \leq \text{CLayer2} \leq \text{Nlayers}+1$$

$$1 \leq \text{CLayer3} \leq \text{Nlayers}+1$$

where


Nlayers = number of layers specified by PCSUBi (i=1,2, ..., 7)

Notes/Equations/References


1. The 2-layer illustration shown is only an example. PCSUBi has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.
2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits” on page 8-1](#) at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2, ..., 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN4 (4 Printed Circuit Coupled Lines)

Symbol



Illustration

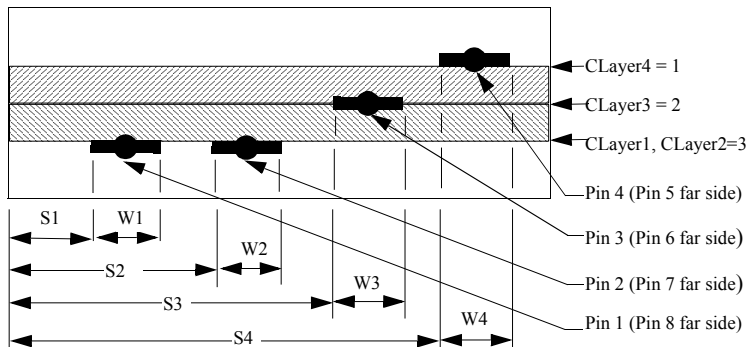

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units

CLayer1 = conductor layer number - line #1 (value type: integer)

W2 = width of line #2, in specified units

S2 = distance from line #2 to left wall, in specified units

CLayer2 = conductor layer number - line #2 (value type: integer)

W3 = width of line #3, in specified units

S3 = distance from line #3 to left wall, in specified units

CLayer3 = conductor layer number - line #3 (value type: integer)

W4 = width of line #4, in specified units

S4 = distance from line #4 to left wall, in specified units

C_{Layer4} = conductor layer number - line #4 (value type: integer)

L = length of the lines, in specified units

Temp = physical temperature, in °C

Range of Usage

$$W1 > 0, \quad W2 > 0, \quad W3 > 0, \quad W4 > 0$$

$$S1 > 0, \quad S2 > 0, \quad S3 > 0, \quad S4 > 0$$

$$1 \leq C_{Layer1} \leq N_{layers}+1$$

$$1 \leq C_{Layer2} \leq N_{layers}+1$$

$$1 \leq C_{Layer3} \leq N_{layers}+1$$

$$1 \leq C_{Layer4} \leq N_{layers}+1$$

where


N_{layers} = number of layers specified by PCSUB_i (i=1,2, ..., 7)

Notes/Equations/References


1. The 2-layer illustration shown is only an example. The PCSUB_i has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.
2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits” on page 8-1](#) at the beginning of this chapter.
3. The value of C_{Layer} and the value of the associated PCSUB parameters H_u and H_l must be compatible so as to not short out the C_{Layer} to the upper or lower ground plane. For example, it is invalid for C_{Layer}=1 if H_u=0 or for C_{Layer}=i+1 (for PCSUB_i, i=1,2, ..., 7) if H_l=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUB_i substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN5 (5 Printed Circuit Coupled Lines)

Symbol

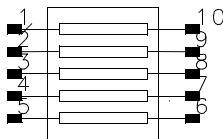

Illustration

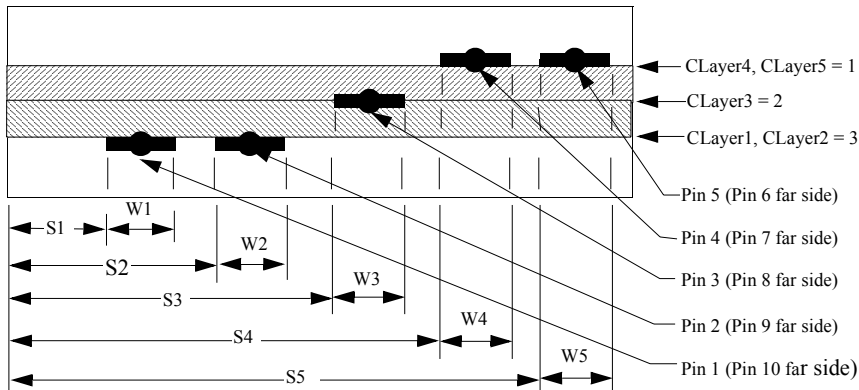

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1, 2, ... , 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units

CLayer1 = conductor layer number - line #1 (value type: integer)

W2 = width of line #2, in specified units

S2 = distance from line #2 to left wall, in specified units

CLayer2 = conductor layer number - line #2 (value type: integer)

W3 = width of line #3, in specified units

S3 = distance from line #3 to left wall, in specified units

CLayer3 = conductor layer number - line #3 (value type: integer)

W4 = width of line #4, in specified units

S4 = distance from line #4 to left wall, in specified units

CLayer4 = conductor layer number - line #4 (value type: integer)

W5 = width of line #5, in specified units

S5 = distance from line #5 to left wall, in specified units

CLayer5 = conductor layer number - line #5 (value type: integer)

L = length of the lines, in specified units

Temp = physical temperature, in °C

Range of Usage

$W1 > 0$, $W2 > 0$, $W3 > 0$, $W4 > 0$, $W5 > 0$

$S1 > 0$, $S2 > 0$, $S3 > 0$, $S4 > 0$, $S5 > 0$

$1 \leq \text{CLayer1} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer2} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer3} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer4} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer5} \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUBi (i=1, 2, ..., 7)


Notes/Equations/References

1. The 2-layer illustration shown is only an example. PCSUBi has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.
2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits” on page 8-1](#) at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2, ..., 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which


could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+1).

5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN6 (6 Printed Circuit Coupled Lines)

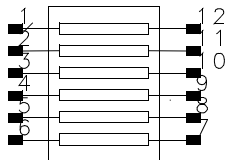Symbol

Illustration

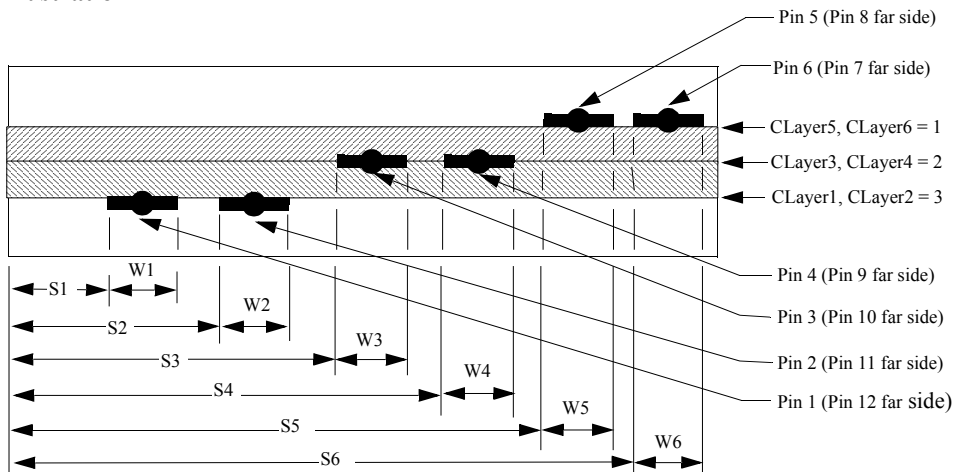

Parameters

Subst = printed circuit substrate name (PCSUB_i, i=1, 2, ..., 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units

CLayer1 = conductor layer number - line #1 (value type: integer)

W2 = width of line #2, in specified units

S2 = distance from line #2 to left wall, in specified units

CLayer2 = conductor layer number - line #2 (value type: integer)

W3 = width of line #3, in specified units

S3 = distance from line #3 to left wall, in specified units

CLayer3 = conductor layer number - line #3 (value type: integer)

W4 = width of line #4, in specified units

S4 = distance from line #4 to left wall, in specified units

CLayer4 = conductor layer number - line #4 (value type: integer)

W5 = width of line #5, in specified units

S5 = distance from line #5 to left wall, in specified units

CLayer5 = conductor layer number - line #5 (value type: integer)

W6 = width of line #6, in specified units

S6 = distance from line #6 to left wall, in specified units

CLayer6 = conductor layer number - line #6 (value type: integer)

L = length of the lines, in specified units

Temp = physical temperature, in °C

Range of Usage

$W1 > 0, \quad W2 > 0, \quad W3 > 0, \quad W4 > 0, \quad W5 > 0, \quad W6 > 0$

$S1 > 0, \quad S2 > 0, \quad S3 > 0, \quad S4 > 0, \quad S5 > 0, \quad S6 > 0$

$1 \leq \text{CLayer1} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer2} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer3} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer4} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer5} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer6} \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUBi (i=1, 2, ... , 7)


Notes/Equations/References

1. The 2-layer illustration shown is only an example. PCSUBi has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.


2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits”](#) on page 8-1 at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2, ... , 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN7 (7 Printed Circuit Coupled Lines)

Symbol

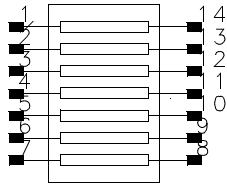

Illustration

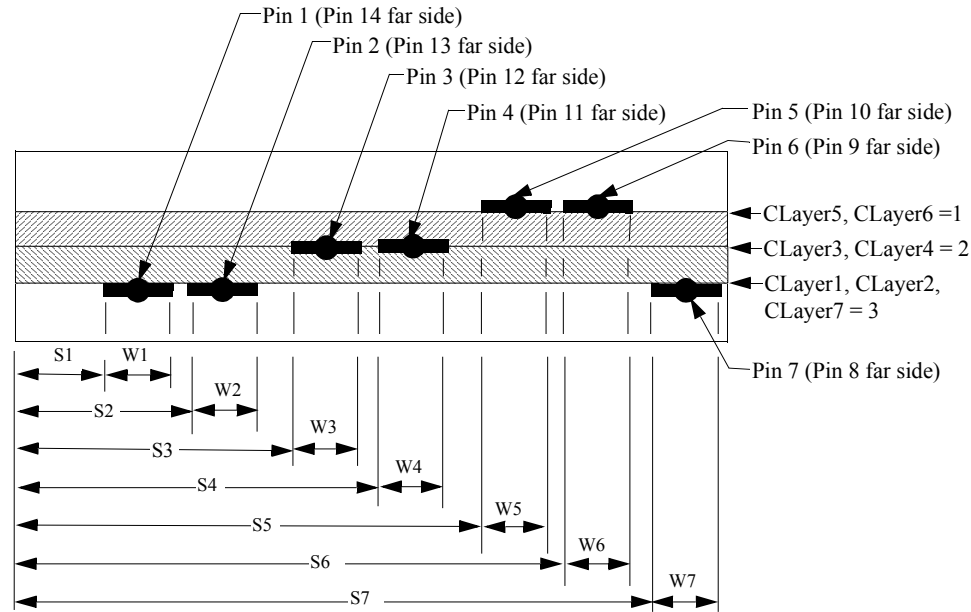

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1, 2, ... , 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units

CLayer1 = conductor layer number - line #1 (value type: integer)

W2 = width of line #2, in specified units

S2 = distance from line #2 to left wall, in specified units

C_{Layer2} = conductor layer number - line #2 (value type: integer)

W₃ = width of line #3, in specified units

S₃ = distance from line #3 to left wall, in specified units

C_{Layer3} = conductor layer number - line #3 (value type: integer)

W₄ = width of line #4, in specified units

S₄ = distance from line #4 to left wall, in specified units

C_{Layer4} = conductor layer number - line #4 (value type: integer)

W₅ = width of line #5, in specified units

S₅ = distance from line #5 to left wall, in specified units

C_{Layer5} = conductor layer number - line #5 (value type: integer)

W₆ = width of line #6, in specified units

S₆ = distance from line #6 to left wall, in specified units

C_{Layer6} = conductor layer number - line #6 (value type: integer)

W₇ = width of line #7, in specified units

S₇ = distance from line #7 to left wall, in specified units

C_{Layer7} = conductor layer number - line #7 (value type: integer)

L = length of the lines, in specified units

Temp = physical temperature, in °C

Range of Usage

$W_1 > 0, \quad W_2 > 0, \quad W_3 > 0, \quad W_4 > 0, \quad W_5 > 0, \quad W_6 > 0, \quad W_7 > 0$

$S_1 > 0, \quad S_2 > 0, \quad S_3 > 0, \quad S_4 > 0, \quad S_5 > 0, \quad S_6 > 0, \quad S_7 > 0$

$1 \leq C_{Layer1} \leq N_{layers}+1$

$1 \leq C_{Layer2} \leq N_{layers}+1$

$1 \leq C_{Layer3} \leq N_{layers}+1$

$1 \leq C_{Layer4} \leq N_{layers}+1$

$1 \leq C_{Layer5} \leq N_{layers}+1$

$1 \leq C_{Layer6} \leq N_{layers}+1$

$$1 \leq \text{CLayer} \leq \text{Nlayers} + 1$$

where


Nlayers = number of layers specified by PCSUBi (i=1, 2, ..., 7)

Notes/Equations/References


1. The 2-layer illustration shown is only an example. PCSUBi has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.
2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits” on page 8-1](#) at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2, ..., 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN8 (8 Printed Circuit Coupled Lines)

Symbol

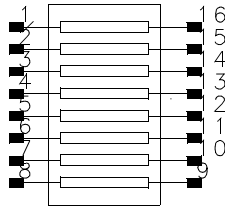

Illustration

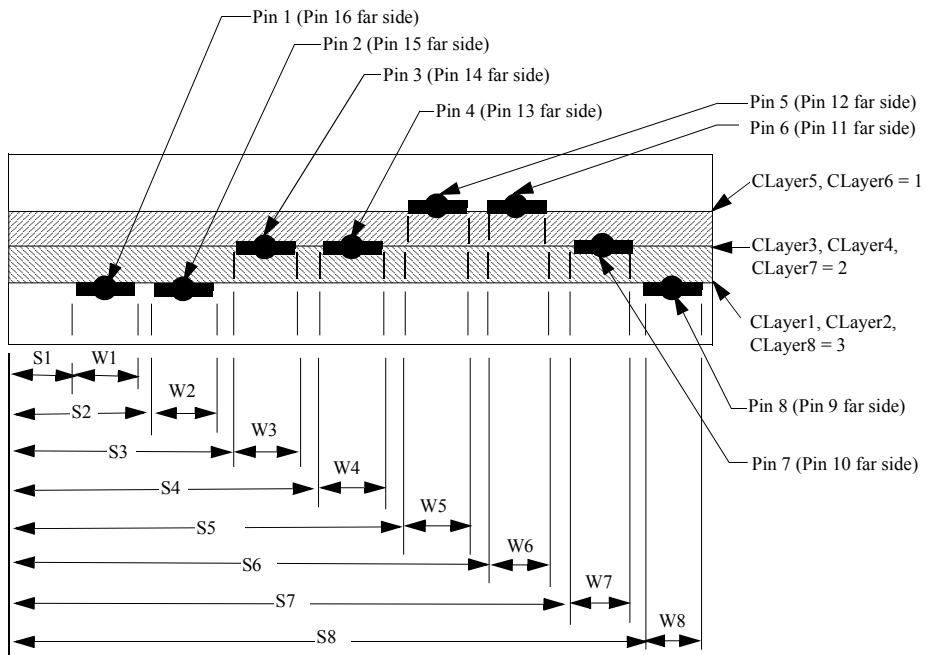

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units

CLayer1 = conductor layer number - line #1 (value type: integer)

W2 = width of line #2, in specified units

S2 = distance from line #2 to left wall, in specified units

CLayer2 = conductor layer number - line #2 (value type: integer)

W3 = width of line #3, in specified units

S3 = distance from line #3 to left wall, in specified units

CLayer3 = conductor layer number - line #3 (value type: integer)

W4 = width of line #4, in specified units

S4 = distance from line #4 to left wall, in specified units

CLayer4 = conductor layer number - line #4 (value type: integer)

W5 = width of line #5, in specified units

S5 = distance from line #5 to left wall, in specified units

CLayer5 = conductor layer number - line #5 (value type: integer)

W6 = width of line #6, in specified units

S6 = distance from line #6 to left wall, in specified units

CLayer6 = conductor layer number - line #6 (value type: integer)

W7 = width of line #7, in specified units

S7 = distance from line #7 to left wall, in specified units

CLayer7 = conductor layer number - line #7 (value type: integer)

W8 = width of line #8, in specified units

S8 = distance from line #8 to left wall, in specified units

CLayer8 = conductor layer number - line #8 (value type: integer)

L = length of the lines, in specified units

Temp = physical temperature, in °C

Range of Usage

$W_i > 0$ for $i = 1, \dots, 8$

$S_i > 0$ for $i = 1, \dots, 8$

$1 \leq \text{CLayer}1 \leq \text{Nlayers}+1$

$$1 \leq \text{CLayer}2 \leq \text{Nlayers}+1$$

$$1 \leq \text{CLayer}3 \leq \text{Nlayers}+1$$

$$1 \leq \text{CLayer}4 \leq \text{Nlayers}+1$$

$$1 \leq \text{CLayer}5 \leq \text{Nlayers}+1$$

$$1 \leq \text{CLayer}6 \leq \text{Nlayers}+1$$

$$1 \leq \text{CLayer}7 \leq \text{Nlayers}+1$$

$$1 \leq \text{CLayer}8 \leq \text{Nlayers}+1$$

where


Nlayers = number of layers specified by PCSUBi (i=1, 2, ... , 7)

Notes/Equations/References


1. The 2-layer illustration shown is only an example. PCSUBi has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.
2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits” on page 8-1](#) at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1, 2, ... , 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN9 (9 Printed Circuit Coupled Lines)

Symbol

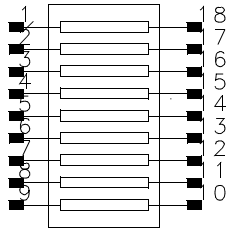

Illustration

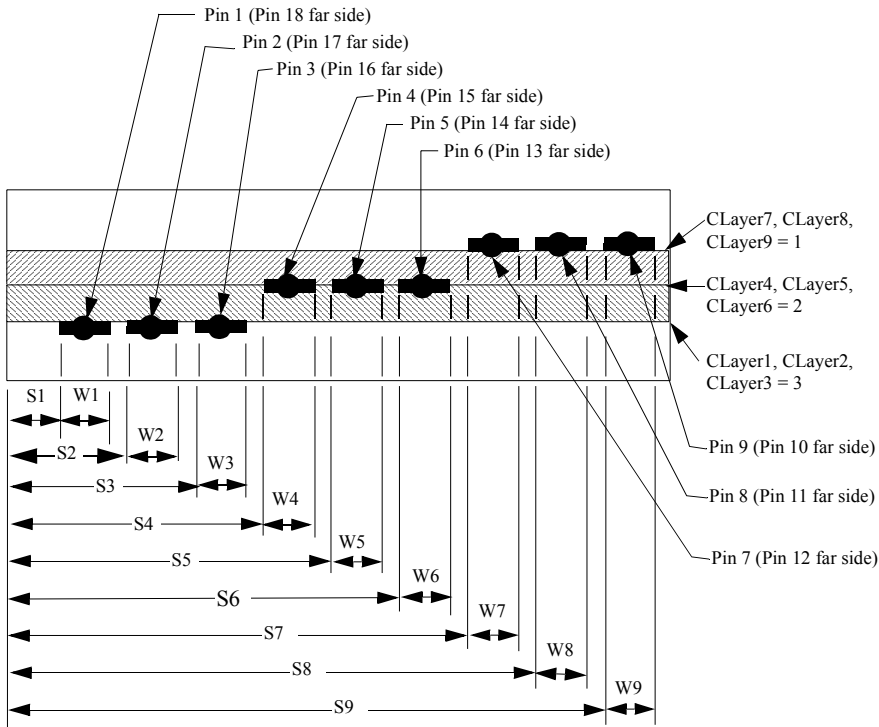

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1, 2, ... , 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units
CLayer1 = conductor layer number - line #1 (value type: integer)
W2 = width of line #2, in specified units
S2 = distance from line #2 to left wall, in specified units
CLayer2 = conductor layer number - line #2 (value type: integer)
W3 = width of line #3, in specified units
S3 = distance from line #3 to left wall, in specified units
CLayer3 = conductor layer number - line #3 (value type: integer)
W4 = width of line #4, in specified units
S4 = distance from line #4 to left wall, in specified units
CLayer4 = conductor layer number - line #4 (value type: integer)
W5 = width of line #5, in specified units
S5 = distance from line #5 to left wall, in specified units
CLayer5 = conductor layer number - line #5 (value type: integer)
W6 = width of line #6, in specified units
S6 = distance from line #6 to left wall, in specified units
CLayer6 = conductor layer number - line #6 (value type: integer)
W7 = width of line #7, in specified units
S7 = distance from line #7 to left wall, in specified units
CLayer7 = conductor layer number - line #7 (value type: integer)
W8 = width of line #8, in specified units
S8 = distance from line #8 to left wall, in specified units
CLayer8 = conductor layer number - line #8 (value type: integer)
W9 = width of line #9, in specified units
S9 = distance from line #9 to left wall, in specified units
CLayer9 = conductor layer number - line #9 (value type: integer)
L = length of the lines, in specified units

Temp = physical temperature, in °C

Range of Usage

$W_i > 0$ for $i = 1, \dots, 9$

$S_i > 0$ for $i = 1, \dots, 9$

$1 \leq \text{CLayer}1 \leq \text{Nlayers}+1$

$1 \leq \text{CLayer}2 \leq \text{Nlayers}+1$

$1 \leq \text{CLayer}3 \leq \text{Nlayers}+1$

$1 \leq \text{CLayer}4 \leq \text{Nlayers}+1$

$1 \leq \text{CLayer}5 \leq \text{Nlayers}+1$

$1 \leq \text{CLayer}6 \leq \text{Nlayers}+1$

$1 \leq \text{CLayer}7 \leq \text{Nlayers}+1$

$1 \leq \text{CLayer}8 \leq \text{Nlayers}+1$

$1 \leq \text{CLayer}9 \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUBi ($i=1, 2, \dots, 7$)


Notes/Equations/References

1. The 2-layer illustration shown is only an example. PCSUBi has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.
2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits” on page 8-1](#) at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, $i=1, 2, \dots, 7$) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).


5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCLIN10 (10 Printed Circuit Coupled Lines)

Symbol

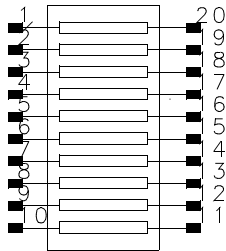

Illustration

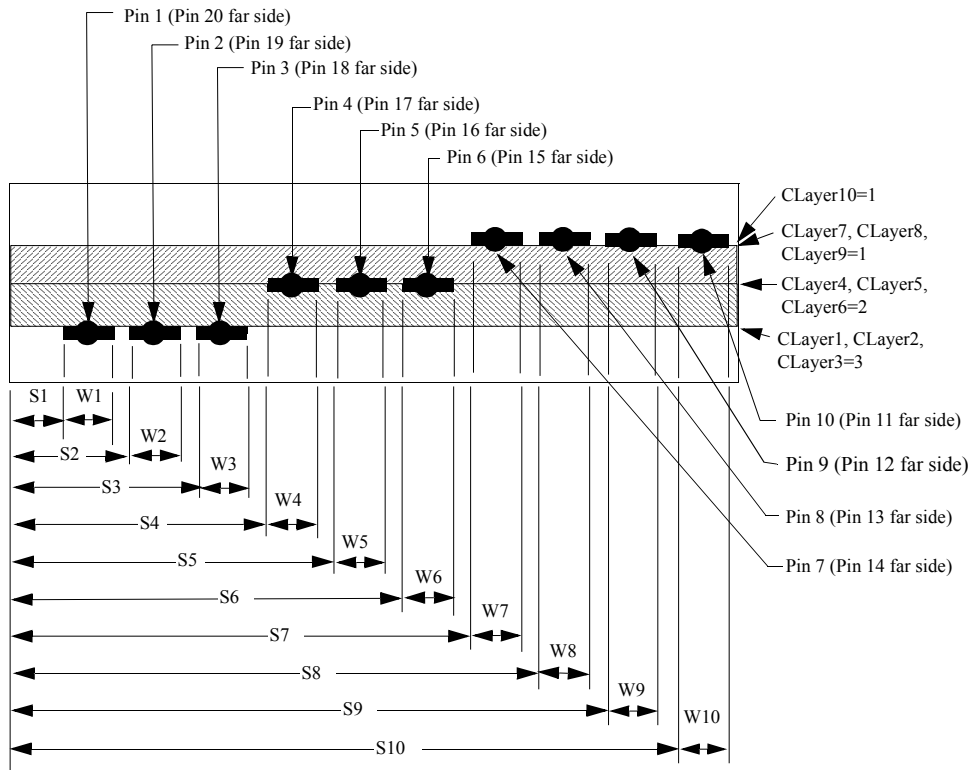

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W1 = width of line #1, in specified units

S1 = distance from line #1 to left wall, in specified units

CLayer1 = conductor layer number - line #1 (value type: integer)

W2 = width of line #2, in specified units

S2 = distance from line #2 to left wall, in specified units

CLayer2 = conductor layer number - line #2 (value type: integer)

W3 = width of line #3, in specified units

S3 = distance from line #3 to left wall, in specified units

CLayer3 = conductor layer number - line #3 (value type: integer)

W4 = width of line #4, in specified units

S4 = distance from line #4 to left wall, in specified units

CLayer4 = conductor layer number - line #4 (value type: integer)

W5 = width of line #5, in specified units

S5 = distance from line #5 to left wall, in specified units

CLayer5 = conductor layer number - line #5 (value type: integer)

W6 = width of line #6, in specified units

S6 = distance from line #6 to left wall, in specified units

CLayer6 = conductor layer number - line #6 (value type: integer)

W7 = width of line #7, in specified units

S7 = distance from line #7 to left wall, in specified units

CLayer7 = conductor layer number - line #7 (value type: integer)

W8 = width of line #8, in specified units

S8 = distance from line #8 to left wall, in specified units

CLayer8 = conductor layer number - line #8 (value type: integer)

W9 = width of line #9, in specified units

S_9 = distance from line #9 to left wall, in specified units

$CLayer_9$ = conductor layer number - line #9 (value type: integer)

W_{10} = width of line #10, in specified units

S_{10} = distance from line #10 to left wall, in specified units

$CLayer_{10}$ = conductor layer number - line #10 (value type: integer)

L = length of the lines, in specified units

$Temp$ = physical temperature, in °C

Range of Usage

$W_i > 0$ for $i = 1, \dots, 10$

$S_i > 0$ for $i = 1, \dots, 10$

$1 \leq CLayer_1 \leq Nlayers+1$

$1 \leq CLayer_2 \leq Nlayers+1$

$1 \leq CLayer_3 \leq Nlayers+1$

$1 \leq CLayer_4 \leq Nlayers+1$

$1 \leq CLayer_5 \leq Nlayers+1$

$1 \leq CLayer_6 \leq Nlayers+1$

$1 \leq CLayer_7 \leq Nlayers+1$

$1 \leq CLayer_8 \leq Nlayers+1$

$1 \leq CLayer_9 \leq Nlayers+1$

$1 \leq CLayer_{10} \leq Nlayers+1$

where

$Nlayers$ = number of layers specified by $PCSUB_i$ ($i=1,2, \dots, 7$)


Notes/Equations/References

1. The 2-layer illustration shown is only an example. $PCSUB_i$ has between 1 and 7 dielectric layers, and any conductor can be placed above or below any dielectric layer. Conductors can overlap if desired.


2. The frequency-domain analytical model for this component is a non-dispersive static model developed by Agilent. Refer to the section [“PCB Model Basis and Limits”](#) on page 8-1 at the beginning of this chapter.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1, 2, ... , 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.

PCSTEP (PCB Symmetric Steps)

Symbol



Illustration

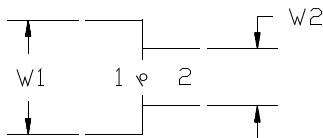

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W1= width at pin 1, in specified units

W2 = width at pin 2, in specified units

CLayer = conductor layer number (value type: integer)

Temp = physical temperature, in °C

Range of Usage

$W1, W2 > 0$

$1 \leq \text{CLayer} \leq \text{Nlayers}+1$

$1 \leq \text{CLayer} \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUBi (i=1,2, ... , 7)

Notes/Equations/References

1. This component is modeled as an ideal short circuit between pins 1 and 2 and is provided mainly to facilitate interconnections between PCB lines of different width in layout.
2. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1, 2, ... , 7) if Hl=0.


3. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+1).
4. To turn off noise contribution, set Temp to -273.15°C .
5. Layout artwork requires placing a PCSUBi (i=1, 2, ... , 7) prior to placing the component directly in the Layout window.

PCSUB1 (1-Layer Printed Circuit Substrate)

Symbol

PCSub1

Illustration

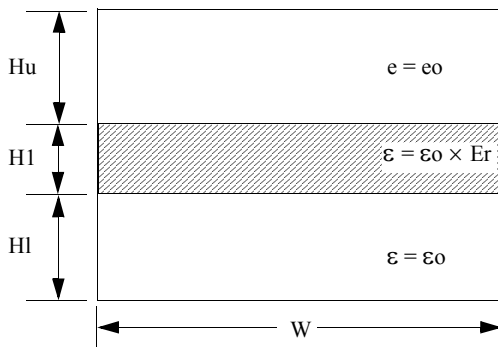

Parameters

H_l = thickness of dielectric layer #1, in specified units

E_r = dielectric constant

Cond = conductor conductivity

H_u = upper ground plane spacing, in specified units

H_l = lower ground plane spacing, in specified units

T = metal thickness, in specified units

W = distance between sidewalls, in specified units

Σ = dielectric conductivity, in Siemens per meter

Range of Usage

$H_l > 0$, $E_r \geq 0$, $\Sigma \geq 0$

$T \geq 0$, $H_u \geq 0$, $H_l \geq 0$, $W > 0$

Notes/Equations/References


1. Refer to the section “[Assumptions and Limitations](#)” on page 8-2 at the beginning of this chapter for important information.
2. A PCSUBi ($i=1, 2, \dots, 7$) is required for all PCB components.
3. PCSUBi specifies a multi-layered dielectric substrate with the number of dielectric layers= i . The dielectric constant of all the layers is the same but the thickness of each layer can be different. The structure is enclosed by metal sidewalls. The top and bottom metal enclosures are optional.
4. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
5. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer # i is conductor layer #($2+i$).

PCSUB2 (2-Layer Printed Circuit Substrate)

Symbol

PCSub2

Illustration

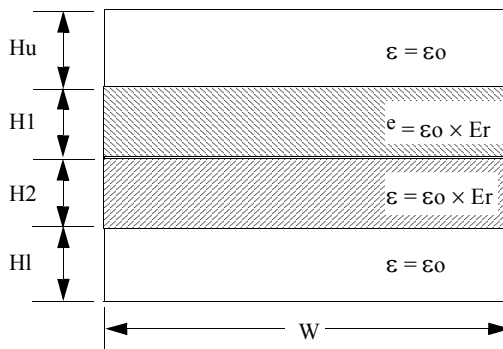

Parameters

H_1 = thickness of dielectric layer #1, in specified units

H_2 = thickness of dielectric layer #2, in specified units

E_r = dielectric constant

Cond = conductor conductivity

Sigma = dielectric conductivity, in Siemens per meter

T = metal thickness, in specified units

H_u = upper ground plane spacing, in specified units

H_1 = lower ground plane spacing, in specified units

W = distance between sidewalls, in specified units

Range of Usage

$H_i > 0$ for $H_i = 1, 2$, $E_r \geq 0$, $\text{Sigma} \geq 0$

$T \geq 0$, $H_u \geq 0$, $H_1 \geq 0$, $W > 0$

Notes/Equations/References


1. Refer to the section “[Assumptions and Limitations](#)” on page 8-2 at the beginning of this chapter for important information.
2. A PCSUBi ($i=1,2, \dots, 7$) is required for all PCB components.
3. PCSUBi specifies a multi-layered dielectric substrate with the number of dielectric layers= i . The dielectric constant of all the layers is the same but the thickness of each layer can be different. The structure is enclosed by metal sidewalls. The top and bottom metal enclosures are optional.
4. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
5. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer # i is conductor layer #($2+i$).

PCSUB3 (3-Layer Printed Circuit Substrate)

Symbol



Illustration

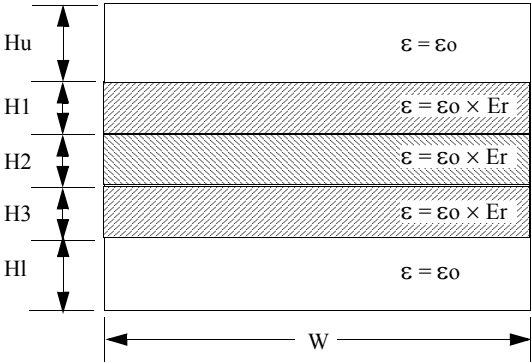

Parameters

$H1$ = thickness of dielectric layer #1, in specified units

$H2$ = thickness of dielectric layer #2, in specified units

$H3$ = thickness of dielectric layer #3, in specified units

E_r = dielectric constant

$Cond$ = conductor conductivity

T = metal thickness, in specified units

H_u = upper ground plane spacing, in specified units

Hl = lower ground plane spacing, in specified units

W = distance between sidewalls, in specified units

$Sigma$ = dielectric conductivity, in Siemens per meter

Range of Usage

$H_i > 0$ for $H_i = 1, ..., 3$, $E_r \geq 0$, $Sigma \geq 0$

$T \geq 0$, $H_u \geq 0$, $Hl \geq 0$, $W > 0$

Notes/Equations/References


1. Refer to the section “[Assumptions and Limitations](#)” on page 8-2 at the beginning of this chapter for important information.
2. A PCSUBi ($i=1, 2, \dots, 7$) is required for all PCB components.
3. PCSUBi specifies a multi-layered dielectric substrate with the number of dielectric layers= i . The dielectric constant of all the layers is the same but the thickness of each layer can be different. The structure is enclosed by metal sidewalls. The top and bottom metal enclosures are optional.
4. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
5. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer # i is conductor layer #($2+i$).

PCSUB4 (4-Layer Printed Circuit Substrate)

Symbol



Illustration

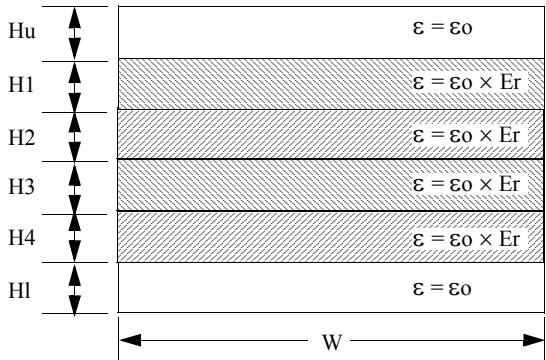

Parameters

H1 = thickness of dielectric layer #1, in specified units

H2 = thickness of dielectric layer #2, in specified units

H3 = thickness of dielectric layer #3, in specified units

H4 = thickness of dielectric layer #4, in specified units

Er = dielectric constant

Cond = conductor conductivity

Hu = upper ground plane spacing, in specified units

Hl = lower ground plane spacing, in specified units

T = metal thickness, in specified units

W = distance between sidewalls, in specified units

Sigma = dielectric conductivity, in Siemens per meter

Range of Usage

$H_i > 0$ for $H_i = 1, \dots, 4$, $E_r \geq 0$, $\text{Sigma} \geq 0$

$$T \geq 0, H_u \geq 0, H_l \geq 0, W > 0$$

Notes/Equations/References


1. Refer to the section “[Assumptions and Limitations](#)” on page 8-2 at the beginning of this chapter for important information.
2. A PCSUBi ($i=1,2, \dots, 7$) is required for all PCB components.
3. PCSUBi specifies a multi-layered dielectric substrate with the number of dielectric layers= i . The dielectric constant of all the layers is the same but the thickness of each layer can be different. The structure is enclosed by metal sidewalls. The top and bottom metal enclosures are optional.
4. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
5. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer # i is conductor layer #($2+i$).

PCSUB5 (5-Layer Printed Circuit Substrate)

Symbol



Illustration

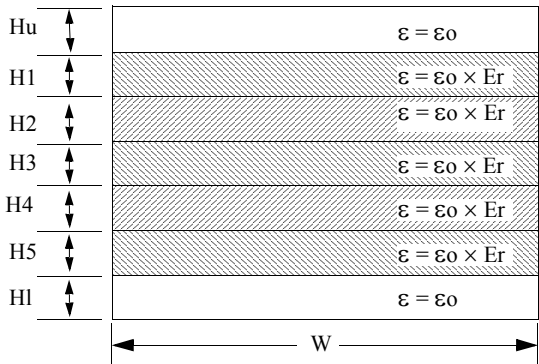

Parameters

H1 = thickness of dielectric layer #1, in specified units

H2 = thickness of dielectric layer #2, in specified units

H3 = thickness of dielectric layer #3, in specified units

H4 = thickness of dielectric layer #4, in specified units

H5 = thickness of dielectric layer #5, in specified units

Er = dielectric constant

Cond = conductor conductivity

Hu = upper ground plane spacing, in specified units

Hl = lower ground plane spacing, in specified units

T = metal thickness, in specified units

W = distance between sidewalls, in specified units

Sigma = dielectric conductivity, in Siemens per meter

Range of Usage

$H_i > 0$ for $H_i = 1, \dots, 5$, $E_r \geq 0$,

$\Sigma \geq 0$, $T \geq 0$, $H_u \geq 0$, $H_l \geq 0$, $W > 0$

Notes/Equations/References


1. Refer to the section “[Assumptions and Limitations](#)” on page 8-2 at the beginning of this chapter for important information.
2. A PCSUBi ($i=1, 2, \dots, 7$) is required for all PCB components.
3. PCSUBi specifies a multi-layered dielectric substrate with the number of dielectric layers= i . The dielectric constant of all the layers is the same but the thickness of each layer can be different. The structure is enclosed by metal sidewalls. The top and bottom metal enclosures are optional.
4. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
5. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).

PCSUB6 (6-Layer Printed Circuit Substrate)

Symbol



Illustration

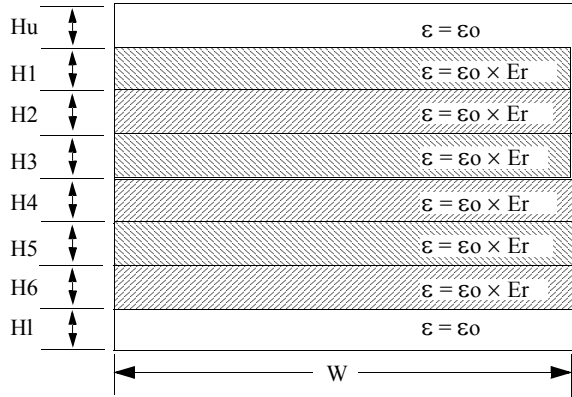

Parameters

None

Range of Usage

$H_i > 0$ for $H_i = 1, \dots, 6$, $E_r \geq 0$,
 $\text{Sigma} \geq 0$, $T \geq 0$, $H_u \geq 0$, $H_l \geq 0$, $W > 0$

Notes/Equations/References

- 1. Refer to the section “Assumptions and Limitations” on page 8-2 at the beginning of this chapter for important information.
- 2. A PCSUBi (i=1,2, ... , 7) is required for all PCB components.
- 3. PCSUBi specifies a multi-layered dielectric substrate with the number of dielectric layers=i. The dielectric constant of all the layers is the same but the thickness of each layer can be different. The structure is enclosed by metal sidewalls. The top and bottom metal enclosures are optional.


4. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
5. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).

PCSUB7 (7-Layer Printed Circuit Substrate)

Symbol



Illustration

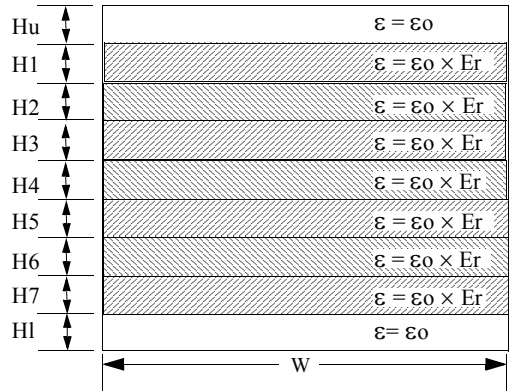

Parameters

None

Range of Usage

$H_i > 0$ for $H_i = 1, \dots, 7$, $E_r \geq 0$,
 $\text{Sigma} \geq 0$, $T \geq 0$, $H_u \geq 0$, $H_l \geq 0$, $W > 0$


Notes/Equations/References

- 1. Refer to the section “Assumptions and Limitations” on page 8-2 at the beginning of this chapter for important information.
- 2. A PCSUBi (i=1,2, ... , 7) is required for all PCB components.
- 3. PCSUBi specifies a multi-layered dielectric substrate with the number of dielectric layers=i. The dielectric constant of all the layers is the same but the thickness of each layer can be different. The structure is enclosed by metal sidewalls. The top and bottom metal enclosures are optional.


4. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
5. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).

PCTAPER (PC Tapered Line)

Symbol



Illustration

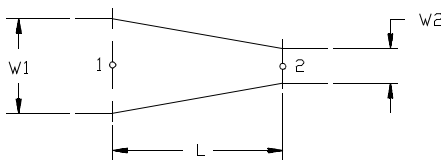

Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W1 = width at pin 1, in specified units

W2 = width at pin 2, in specified units

CLayer = conductor layer number (value type: integer)

L = length of line, in specified units

Temp = physical temperature, in °C

Range of Usage

$W1, W2 > 0$

$1 \leq \text{CLayer} \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUBi (i=1,2, ... , 7)

Notes/Equations/References


1. This component is modeled as PCLIN1. Width of the line is assumed to be $(W1 + W2)/2$. The single line is assumed to be located halfway between and parallel to the sidewalls. The distance between the sidewalls is given as a part of the PCSUBi parameter W.
2. The distance between the sidewalls is typically the width of the metal enclosure around the PC board. If the metal enclosure is absent, width of the PC board itself can be specified and treated as the distance between the sidewalls. Note, however, that the simulation time

increases rapidly as the sidewall distance increases. If the effect of the sidewalls is not important, it is highly recommended to set it to approximately 10 times the line width for this component.


3. This component is provided mainly to facilitate interconnection between PCB lines of different widths in layout.
4. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2,..., 7) if Hl=0.
5. Gold conductivity is 4.1×10^7 S/m. Rough modifies loss calculations. Conductivity for copper is 5.8×10^7 .
6. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
7. To turn off noise contribution, set Temp to -273.15°C .

PCTEE (Printed Circuit T-Junction)

Symbol

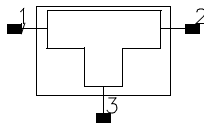

Illustration

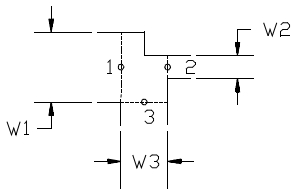

Parameters

Subst = printed circuit substrate name (PCSUBi, $i=1,2, \dots, 7$)

W1 = width at pin 1, in specified units

W2 = width at pin 2, in specified units

W3 = width at pin 3, in specified units

CLayer = conductor layer number (value type: integer)

Temp = physical temperature, in $^{\circ}\text{C}$

Range of Usage

$W_i > 0$ for $W_i = 1, \dots, 3$

$1 \leq \text{CLayer} \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUBi ($i=1,2, \dots, 7$)


Notes/Equations/References

1. This component is treated as an ideal connection between pins 1, 2, and 3, and has been provided mainly to facilitate interconnections between PCB lines oriented at different angles in layout.

2. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2,..., 7) if Hl=0.
3. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+i).
4. To turn off noise contribution, set Temp to -273.15°C .
5. Layout artwork requires placing a PCSUBi (i=1, 2, ... , 7) prior to placing the component directly in the Layout window.

PCTRACE (Single PCB Line (Trace))

Symbol



Parameters

Subst = printed circuit substrate name (PCSUBi, i=1,2, ... , 7)

W = width of line, in specified units

CLayer = conductor layer number (value type: integer)

L = length of line, in specified units

Temp = physical temperature, in °C

Range of Usage

$W > 0$

$1 \leq \text{CLayer} \leq \text{Nlayers}+1$

where

Nlayers = number of layers specified by PCSUBi (i=1,2, ... , 7)

Notes/Equations/References

1. This component is modeled as PCLIN1. The single line is assumed to be located halfway between and parallel to the sidewalls. The distance between the sidewalls is given as a part of the PCSUBi parameter W.
2. The distance between the sidewalls is typically the width of the metal enclosure around the PC board. If the metal enclosure is absent, width of the PC board itself can be specified and treated as the distance between the sidewalls. Note, however, that the simulation time increases rapidly as the sidewall distance increases. If the effect of the sidewalls is not important, it is highly recommended to set it to approximately 10 times the line width for this component.
3. The value of CLayer and the value of the associated PCSUB parameters Hu and Hl must be compatible so as to not short out the CLayer to the upper or lower ground plane. For example, it is invalid for CLayer=1 if Hu=0 or for CLayer=i+1 (for PCSUBi, i=1,2,..., 7) if Hl=0.
4. Conductor layers are numbered as follows: the upper surface of the top dielectric layer (or dielectric layer #1) is conductor layer #1; the lower surface of the dielectric layer #1 (which

could also be the upper surface of the dielectric layer #2) is conductor layer #2; etc. When using a PCSUBi substrate, the lower surface of dielectric layer #i is conductor layer #(2+1).

5. For time-domain analysis, an impulse response obtained from the frequency-domain analytical model is used.
6. To turn off noise contribution, set Temp to -273.15°C .
7. This component is provided mainly to facilitate interconnections between PCB lines in layout.
8. Layout artwork requires placing a PCSUBi($i=1,2, \dots, 7$) prior to placing the component directly in the Layout window.

Index

F

finline components, 1-1

M

microstrip components, 2-1

multilayer interconnect components, 3-1

P

printed circuit board components, 8-1

S

stripline components, 4-1

suspended substrate components, 5-1

T

transmission line components, 6-1

W

waveguide components, 7-1

