




# CS-3340A - SAMSUNG Chassis SCT-11C



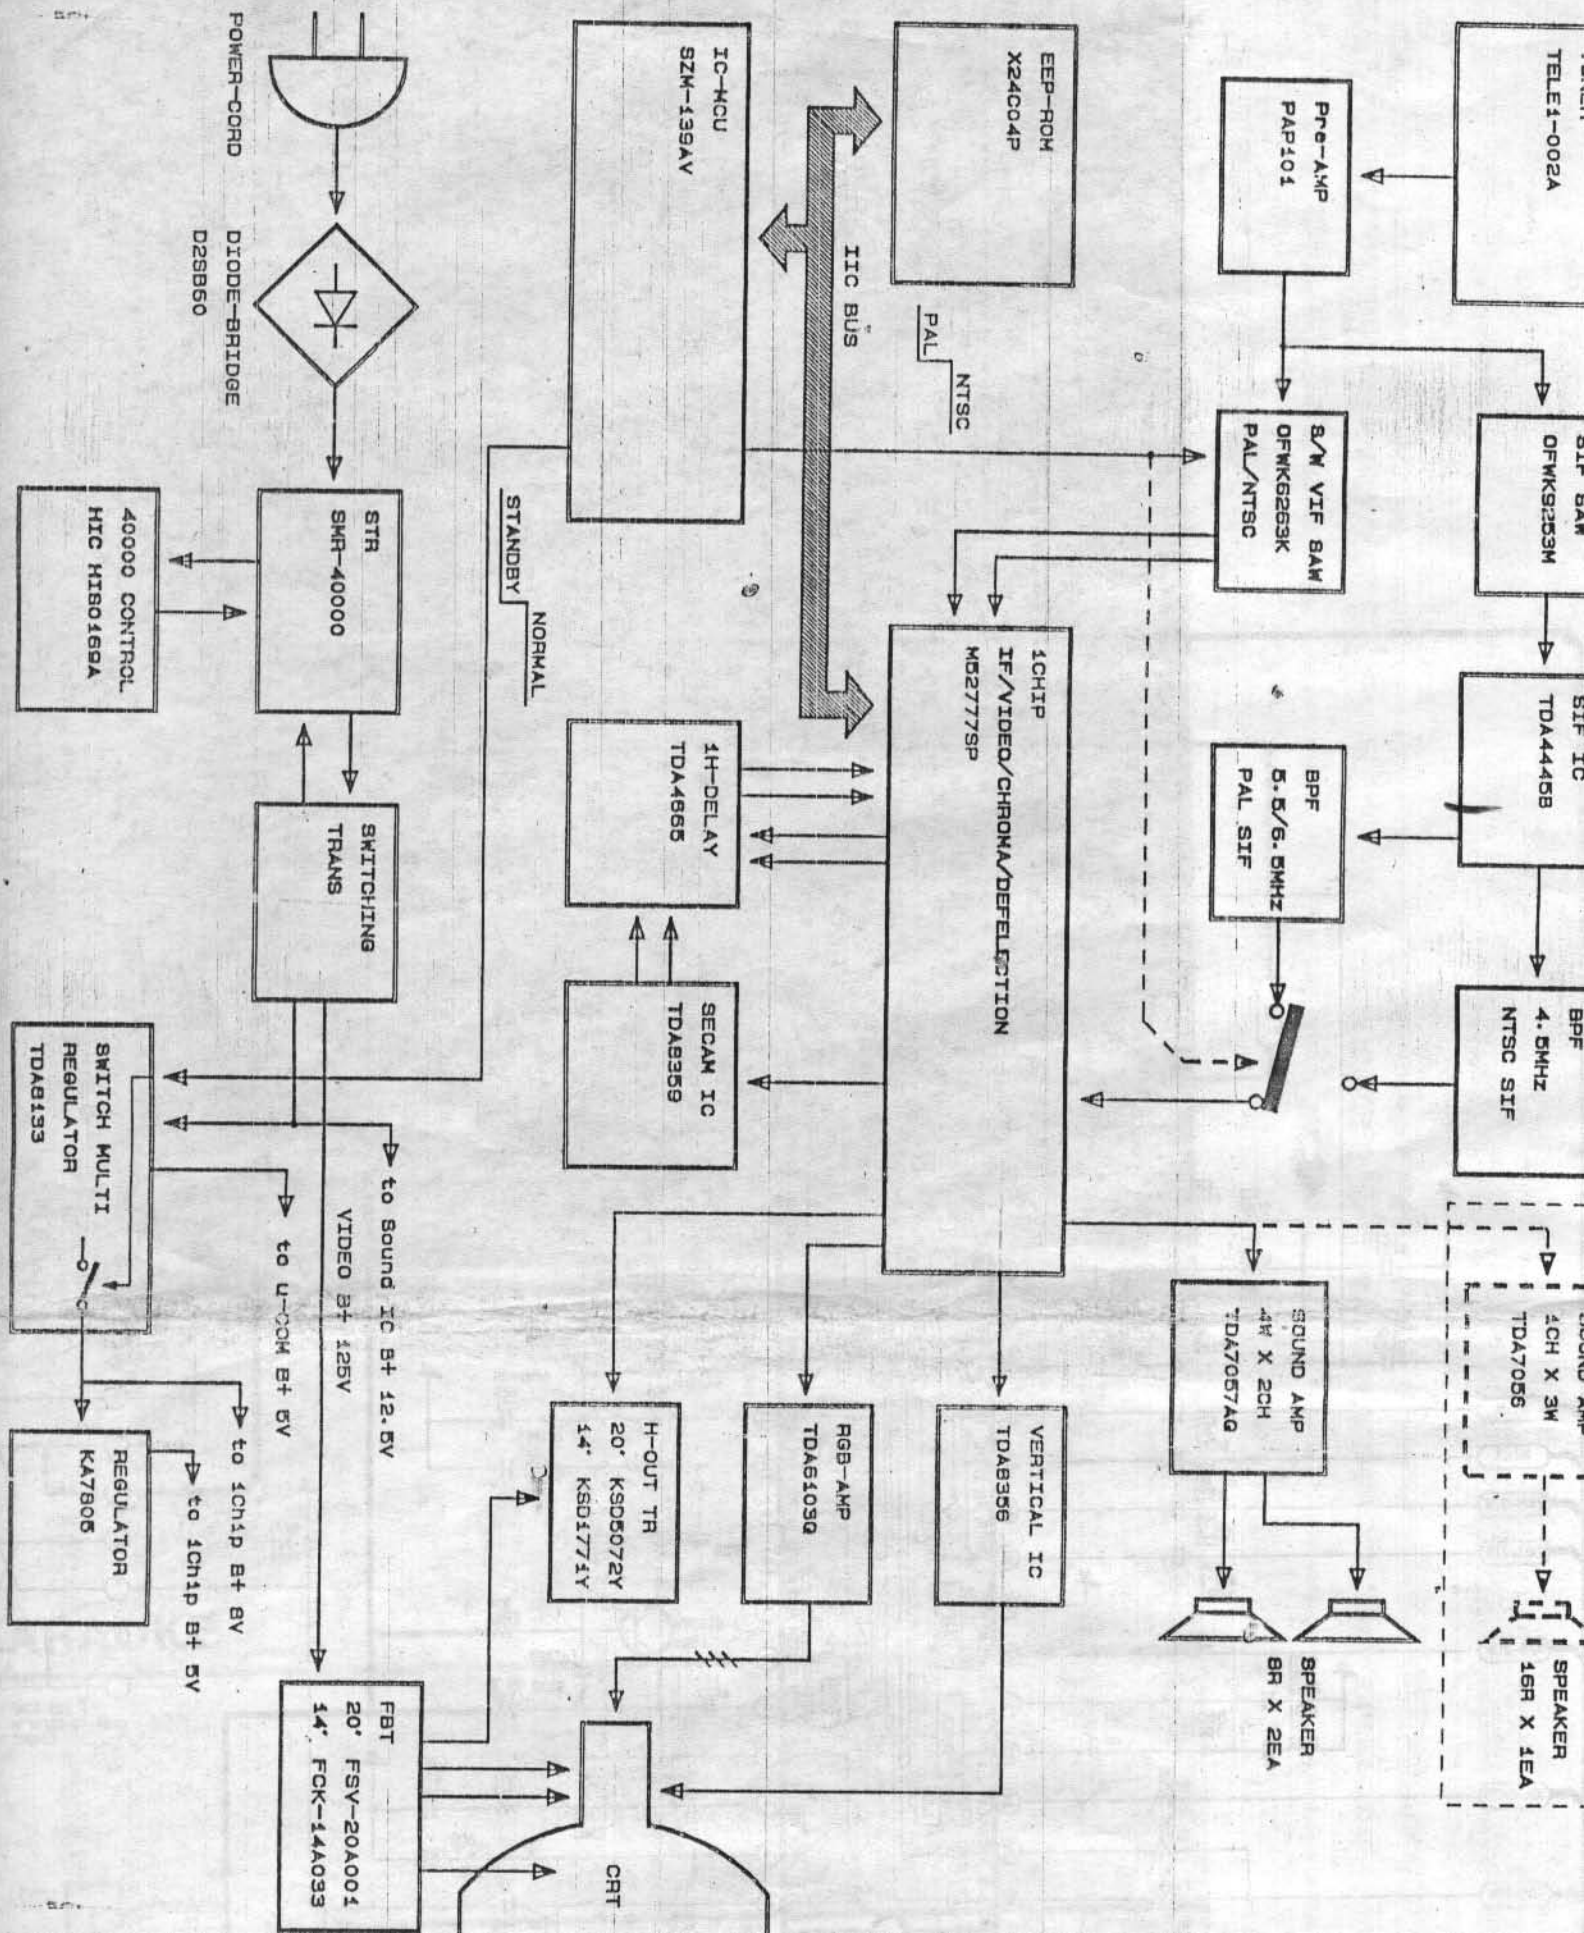

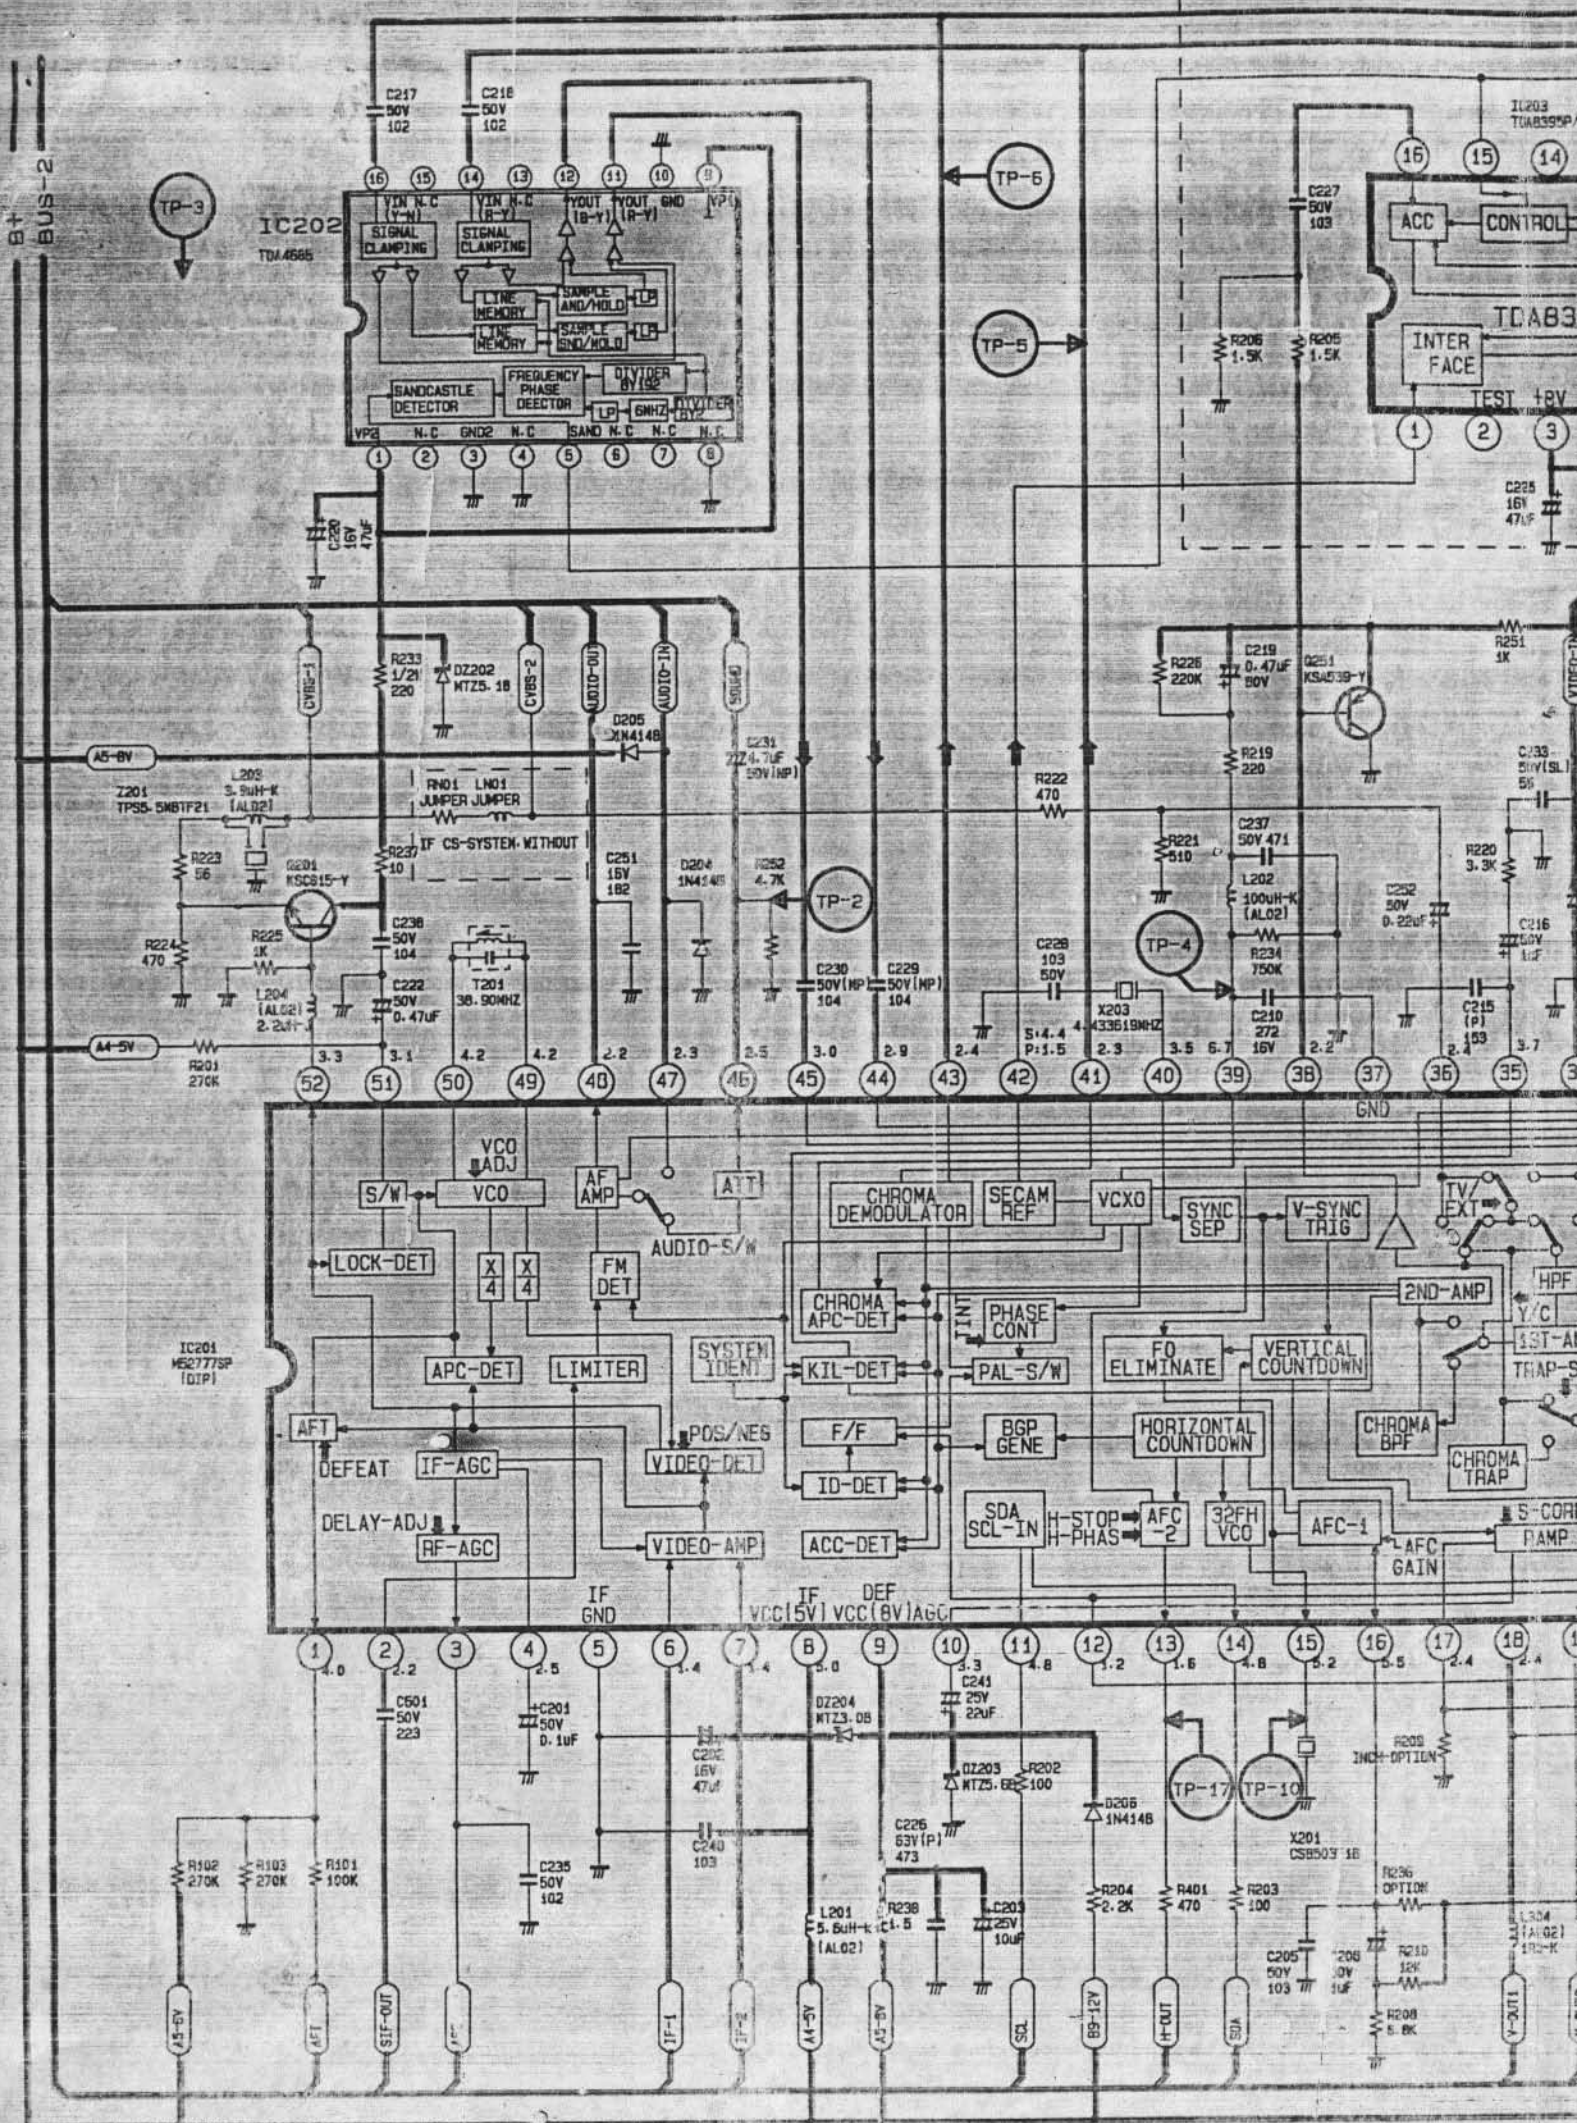


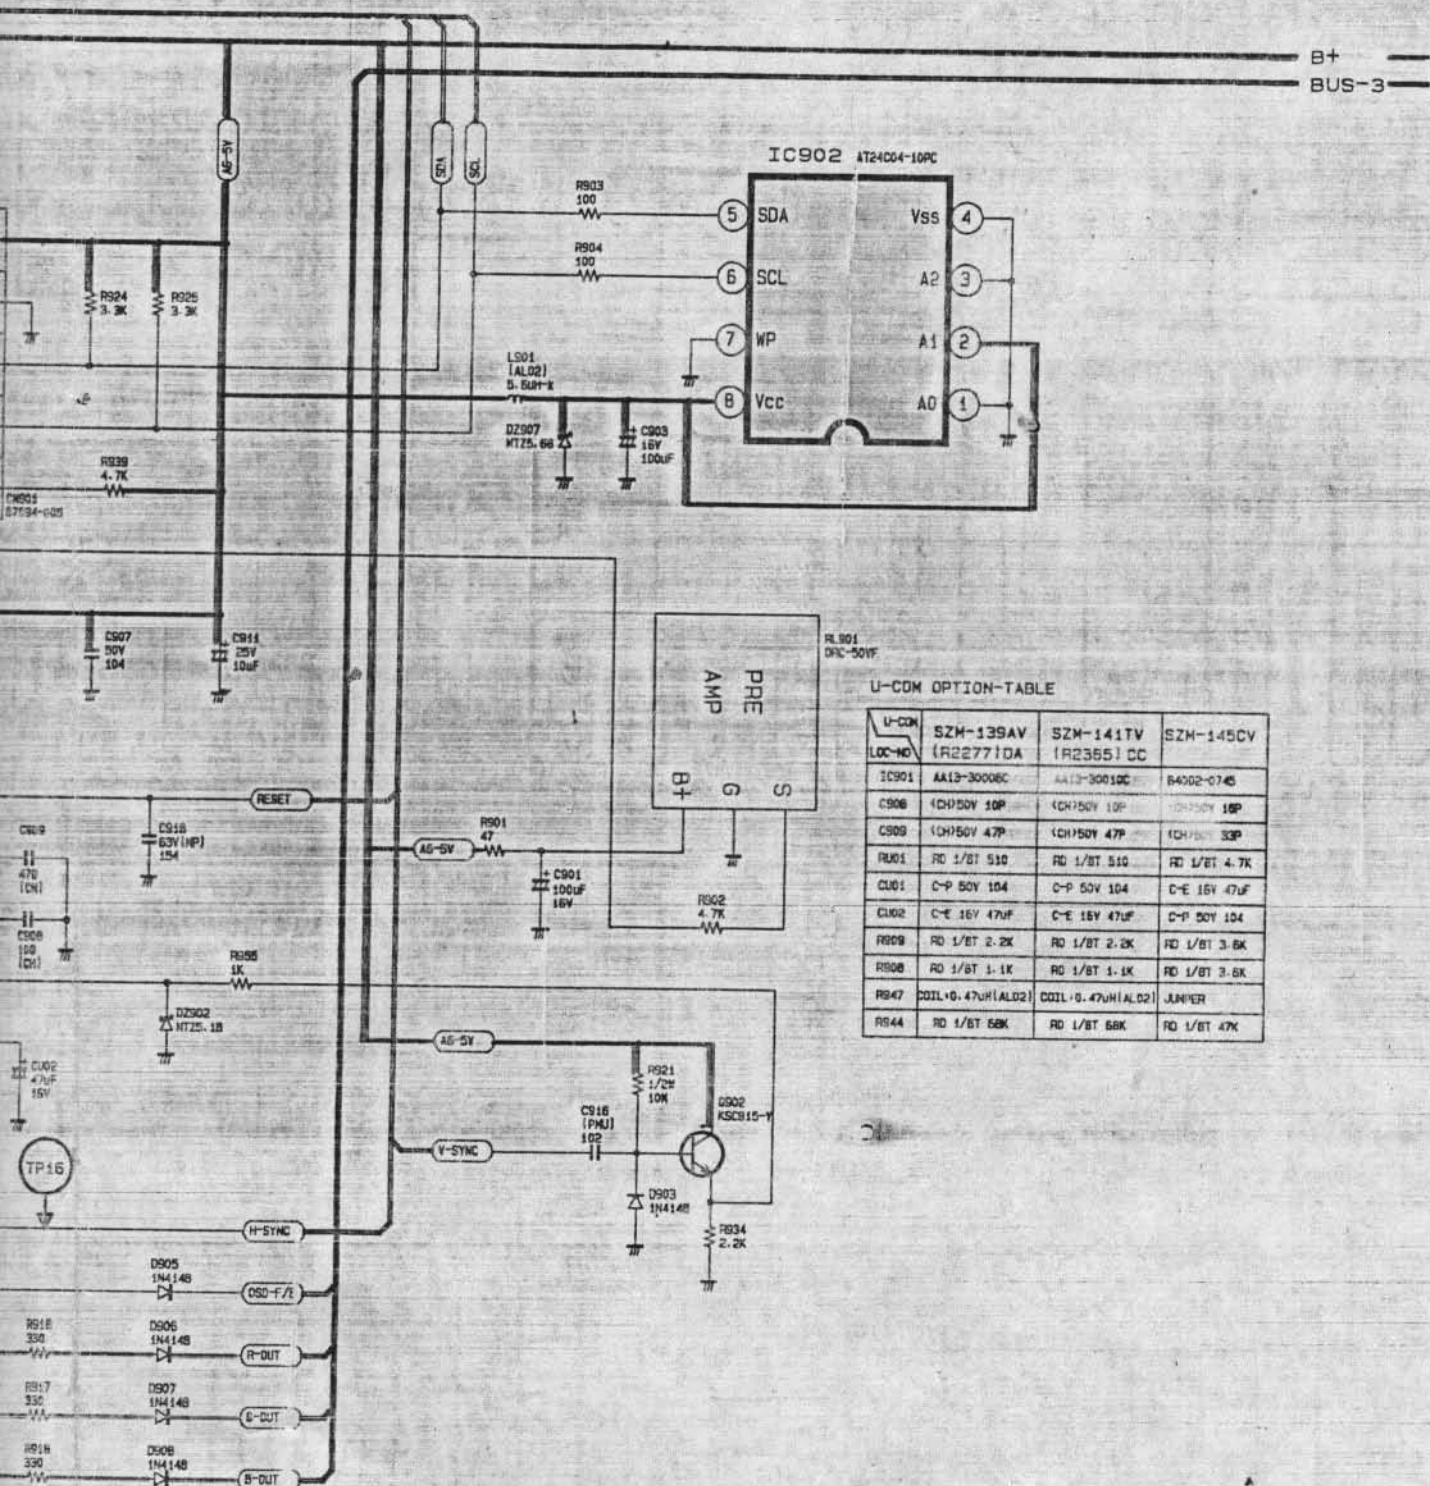










## 11-1 W/O TTX Micom

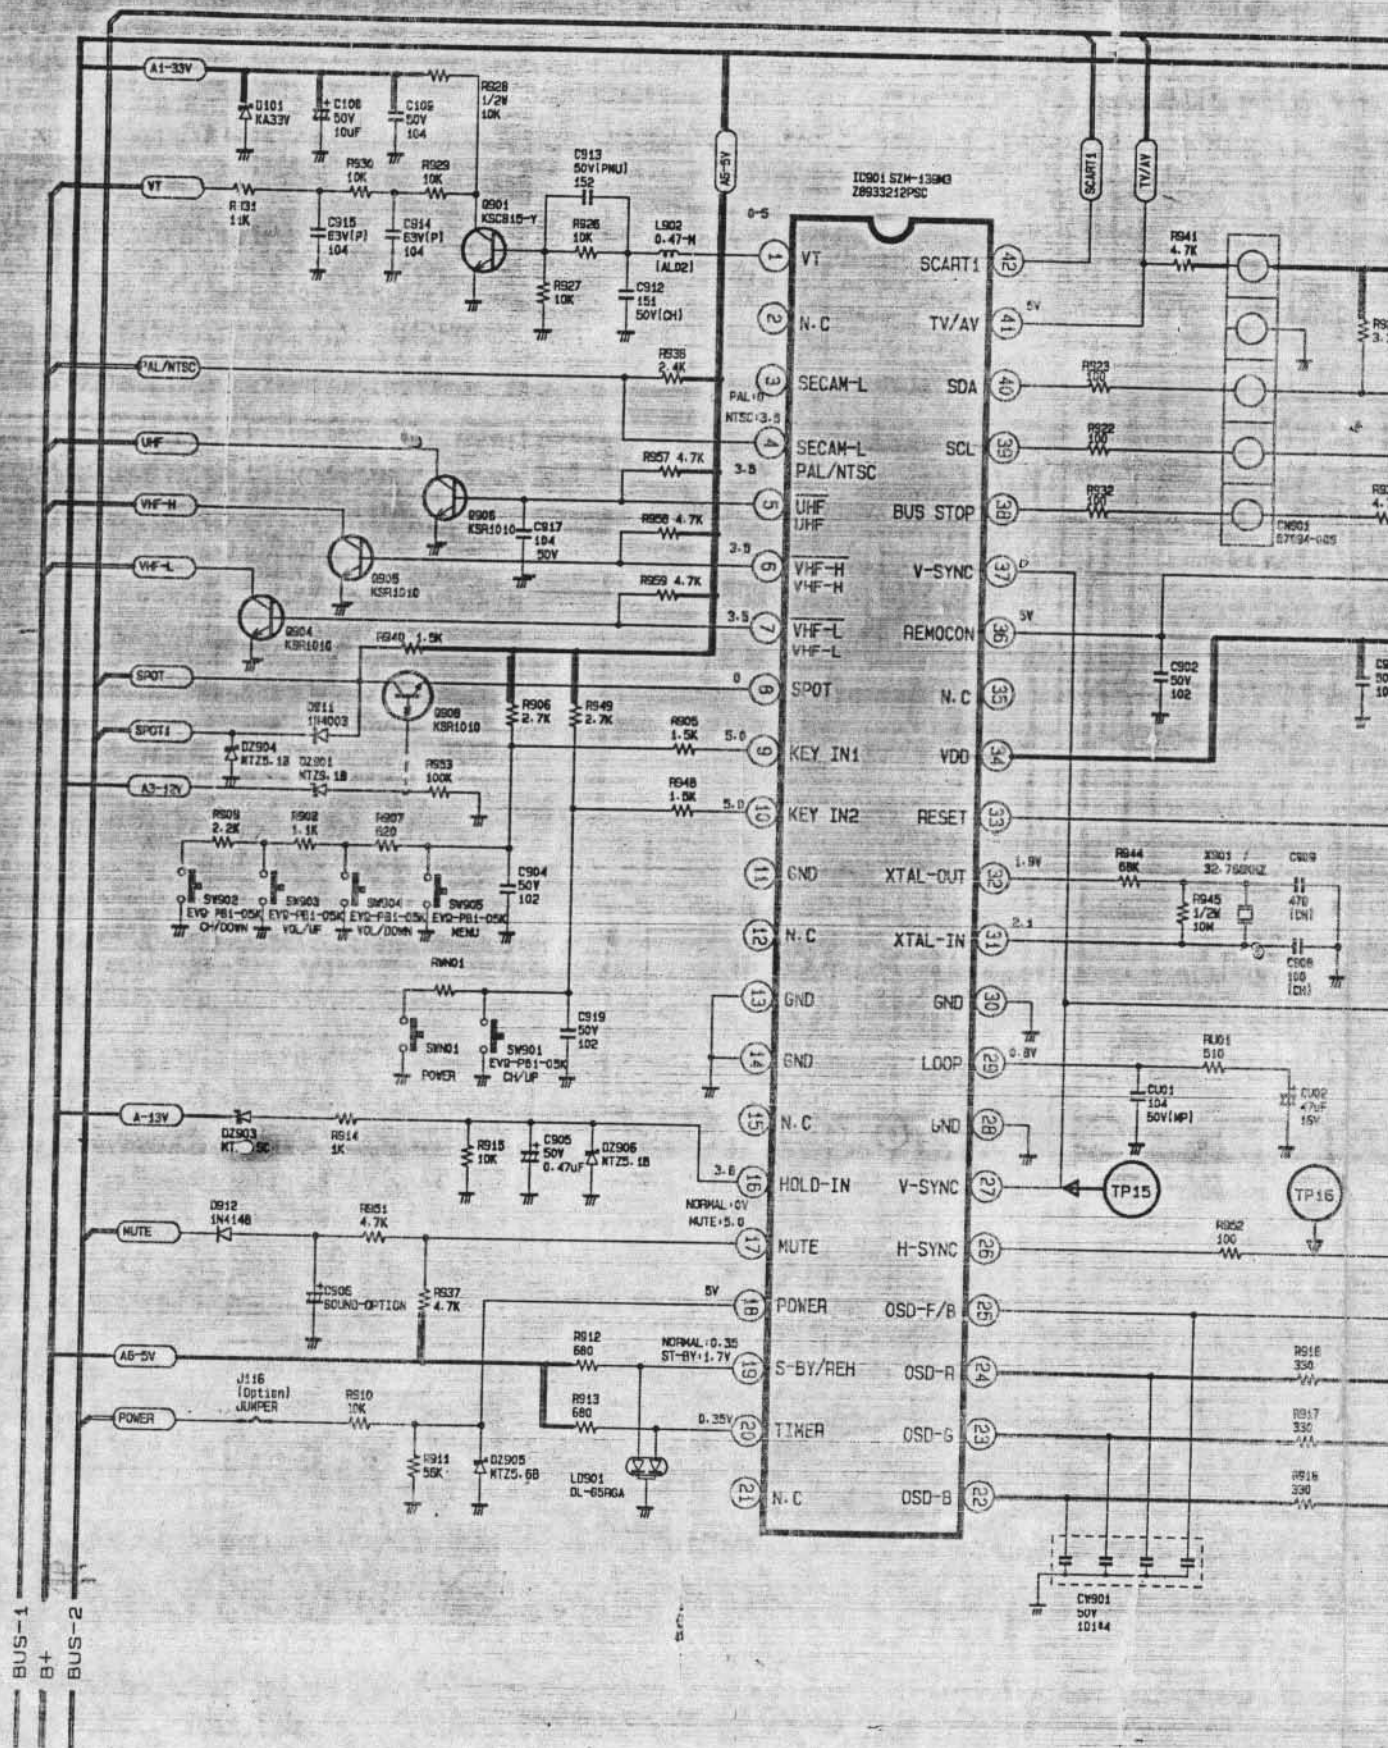





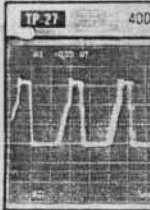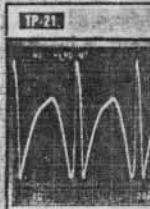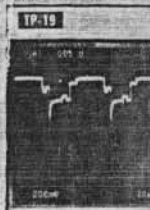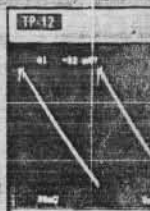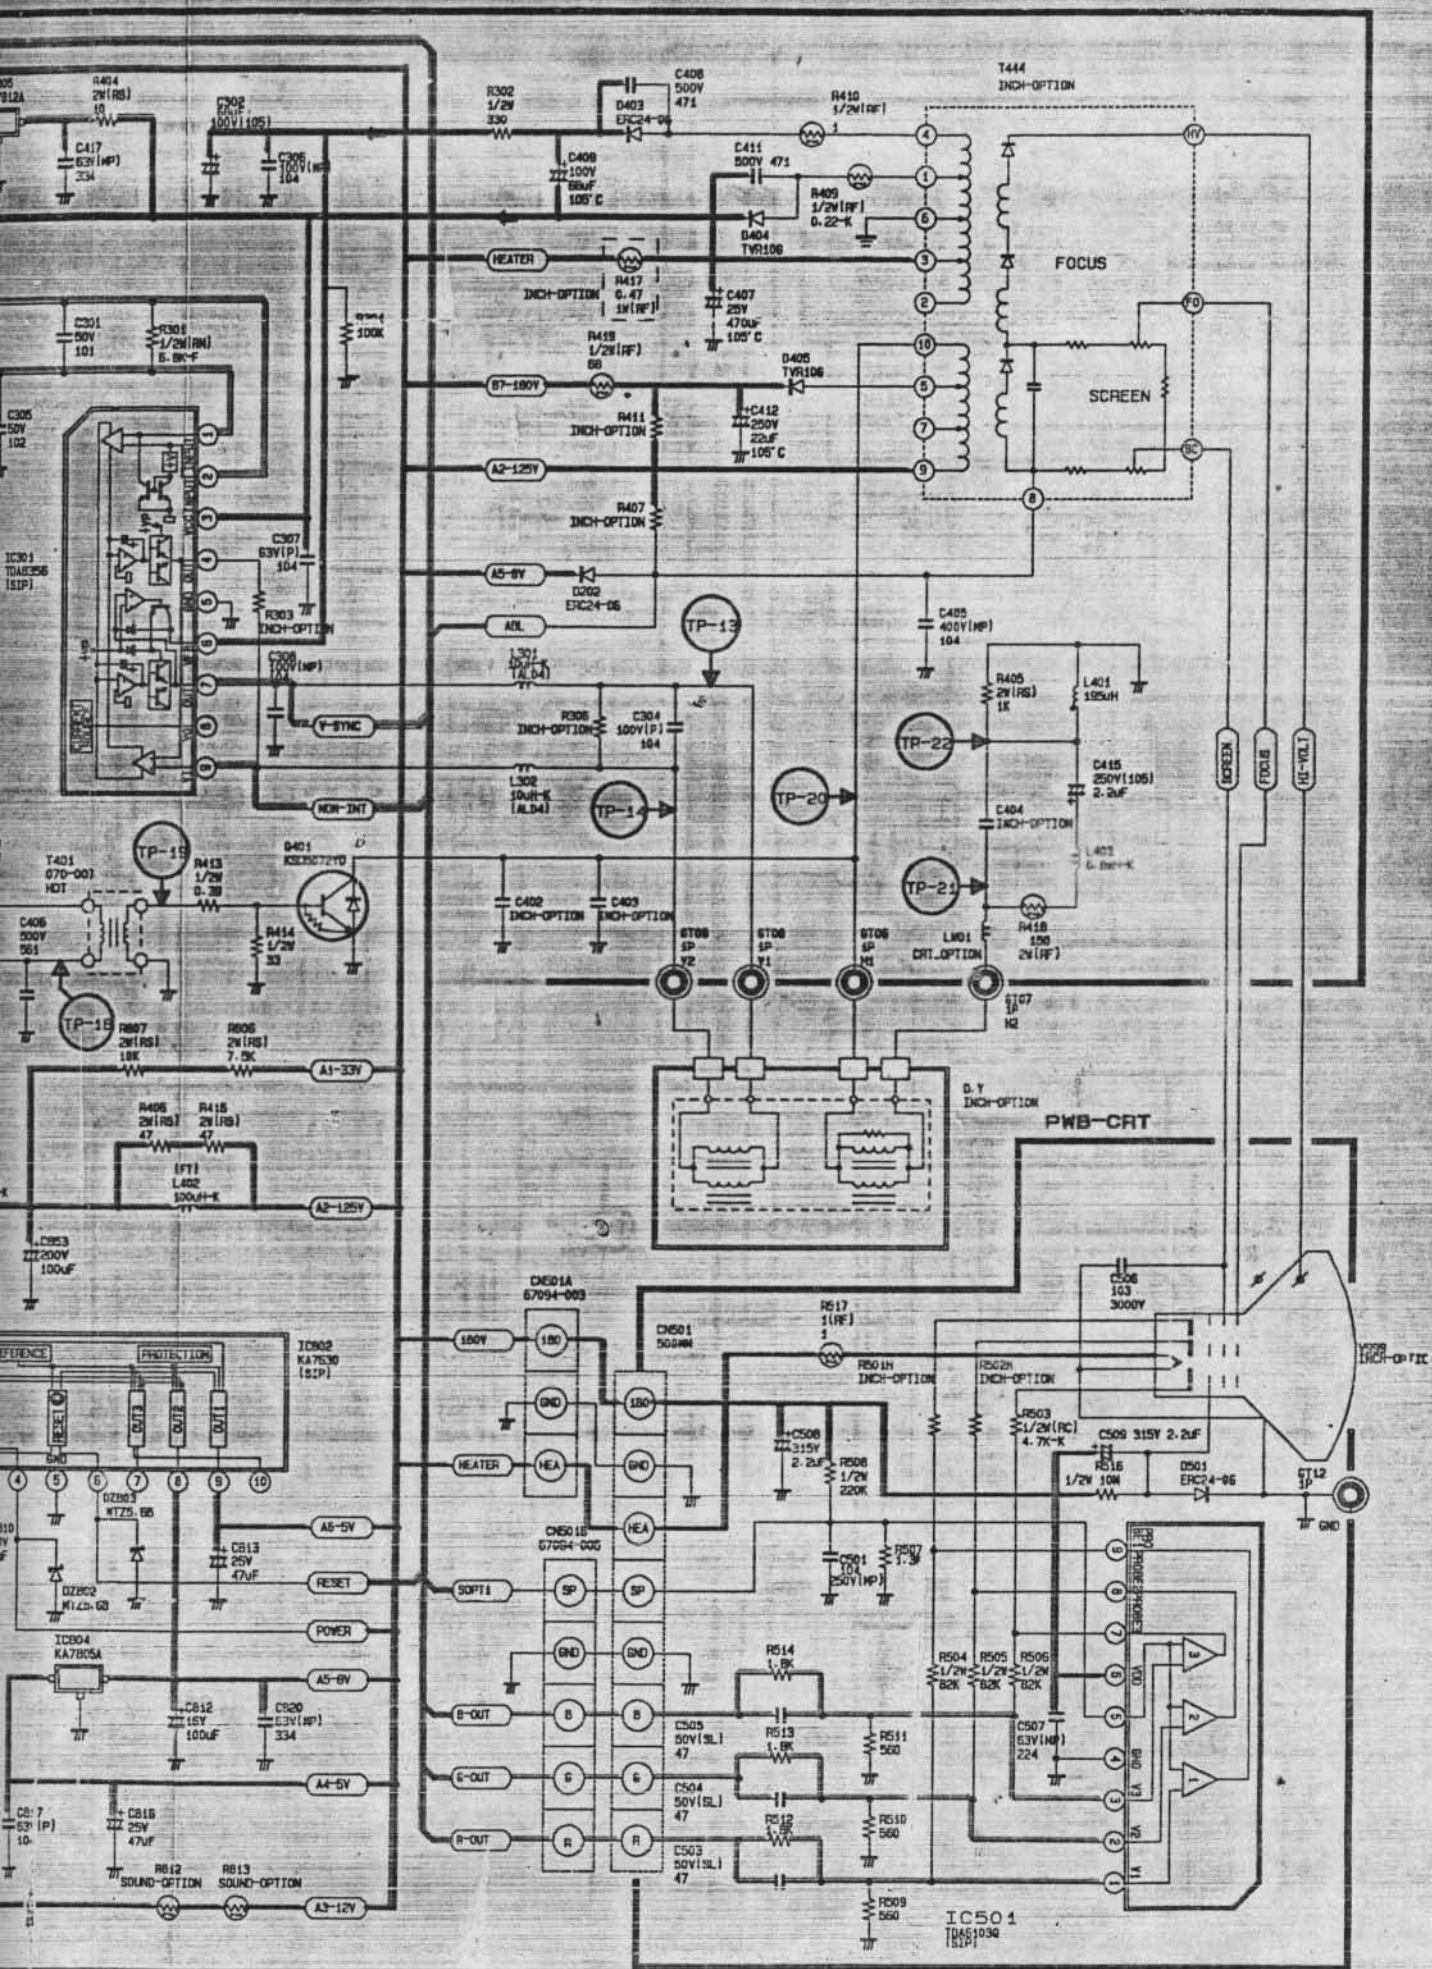





BUS-2  
B+

# INCH-OPTION(FULL)

LOC.	THIN	14 INCH	16 INCH	20 INCH	21 INCH
R305	1W 330	1W 330	1W 330	2W 220	
R407	120K_F	120K_F	110K_F	110K_F	
R411	120K_F	120K_F	110K_F	110K_F	
R417	RF 2W 5.8	RF 1W 1	RF 1W 0.47	RF 1W 0.47	
C402	1.6KV(MPP) 632	1.6KV(MPP) 722	1.6KV(MPP) 722	1.6KV(MPP) 722	
C403	2KV 331	DELETE	2KV 102	2KV 561	
C404	400V(MPP) 364	400V(MPP) 364	400V(MPP) 434	400V(MPP) 434	
T444	FCX-14A033	FCX-14A033	FSY-20A001	FSY-20A001	
D-T	DSE-1422FL	DSE-1692XL(2)	DSE-1992(1)	DST-2192ML(1)	
Y599	P114.3 HI-FOCUS	P125.5 HI-FOCUS	P125.5 HI-FOCUS	P125.5 HI-FOCUS	
CHT	A34K042X	A36K043X	A48K062X	A51K0J63X	
R303	RD 1/2T 1.5-J	RD 1/2T 1.2	RD 1/2T 1.2J	RD 1/2T 1-J	
R501H	DELETE	RC 1/2T 4.7K-K	RC 1/2T 4.7K-K	RC 1/2T 4.7K-K	
R501K	RC 1/2T 4.7K-K	DELETE	DELETE	DELETE	
R502H	DELETE	RC 1/2T 4.7K-K	RC 1/2T 4.7K-K	RC 1/2T 4.7K-K	
R502K	RC 1/2T 4.7K-K	DELETE	DELETE	DELETE	
D401	D5071	D5071	D5072	D5072	

## SPEAKER\_OPTION

LOCATION	TWO-SPEAKER	SINGLE-SPEAKER	MEMO
D803	FM812	DELETE	
D804	DELETE	1R5GJ41	

## SOUND\_OPTION

CABINET LOCATION	3373 & 3337	3385 & 3335	5073 & 5373	5336 & 5338	5385 & 5385
R812	RF 2W 2.4	RF 2W 0.47	RF 2W 1.2	1F 2W 0.47	
R813	RF 2W 2.4	RF 2W 0.47	RF 2W 1.2	RF 2W 0.47	

## NATIONAL\_OPTION

LOCATION	CIS-ROMANIA ALBANIA THAILAND INDIA EGYPT	BASIC
C801	450V 150uF (5336-5338-5373-ONLY) 450V 220uF	400V 220uF
LOCATION	INDONESIA	BASIC
NT801	NTC15	NTC4.7

